

# 1997 F-250/350/Super Duty Location Index

○ Components   ● Connectors   ○ Splices   ○ Grounds

## Connectors

<b>C101</b> (5.8L) LH side of engine compartment, side of wheel well	<b>C101</b> (7.5L) LH side of engine compartment, side of wheel well	<b>C102</b> (5.8L) Near LH frame rail, below driver floor pan	<b>C102</b> (7.3L Diesel) Left rear of engine compartment, on brake pressure switch	<b>C103</b> (5.8L) LH side of engine compartment, top of wheel well	<b>C103</b> (7.3L Diesel) LH side of engine compartment, top of wheel well
<b>C103</b> (7.5L) LH side of engine compartment, top of wheel well	<b>C104</b> LH side of engine compartment, side of wheel well	<b>C105</b> (5.8L) LH side of engine compartment, top of wheel well	<b>C105</b> (7.3L Diesel) N/A	<b>C105</b> (7.5L) LH side of engine compartment, top of wheel well	<b>C106</b> (5.8L) RH rear of engine compartment, near blower motor
<b>C106</b> (7.3L Diesel) RH rear of engine compartment, near blower motor	<b>C106</b> (7.5L) RH rear of engine compartment, near blower motor	<b>C107</b> Rear center of engine compartment	<b>C108</b> (200 Amp Alternator) RH side of engine compartment, near starter relay	<b>C108</b> (Diesel) RH side of engine compartment, near starter relay	<b>C110</b> (5.8L Under 8500 GVW) LH side of engine compartment, top of wheel well
<b>C110</b> (7.3L Diesel) LH side of engine compartment, top of wheel well	<b>C110</b> (7.5L) LH side of engine compartment, top of wheel well	<b>C111</b> LH rear of engine compartment	<b>C112</b> RH front of engine, on leece/neville alternator	<b>C114</b> (5.8L Under 8500 GVW California Except Super Duty)  Center front of engine, on timing chain cover	<b>C116</b> (5.8L) Lower RH side of engine, on starter solenoid
<b>C116</b> (7.3L Diesel) Lower RH side of engine, on starter solenoid	<b>C116</b> (7.5L) Lower RH side of engine, on starter solenoid	<b>C117</b> (E4OD Transmission) Below center of vehicle, near LH rear of transmission	<b>C117</b> (Mazda M5OD Transmission) Below center of vehicle, near LH rear of transmission	<b>C117</b> (S5-42 ZF Transmission) Below center of vehicle, near LH rear of transmission	<b>C118</b> RH front of engine, on leece/neville alternator
<b>C119</b> RH front of engine, on attenuator	<b>C126</b> (5.8L) LH side of engine compartment, on A/C high pressure cut out switch	<b>C126</b> (7.3L Diesel) LH side of engine compartment, on A/C high pressure cut out switch	<b>C126</b> (7.5L) LH side of engine compartment, on A/C high pressure cut out switch	<b>C128</b> LH side of engine compartment, on injector driver module	<b>C130</b> (5.8L Except Chassis Cab) Top center of safety wall, on mass air flow sensor.
<b>C130</b> (7.5L Except Chassis Cab) Top center of safety wall, on mass air flow sensor.	<b>C131</b> RH front of engine compartment, on ambient temperature sensor	<b>C135</b> (5.8L) Lower LH front of engine, on oil pressure switch	<b>C135</b> (7.3L Diesel) Top center rear of engine, on oil pressure switch	<b>C135</b> (7.5L) Top center rear of engine, on oil pressure switch	<b>C138</b> (7.3L Diesel) LH side of engine compartment, top of wheel well
<b>C139</b> (5.8L) RH front of engine compartment, behind battery	<b>C139</b> (7.5L) RH front of engine compartment, behind battery	<b>C143</b> (5.8L) LH rear of engine compartment, on bracket	<b>C143</b> (7.3L Diesel) Behind lower center of I/P	<b>C143</b> (7.5L) LH rear of engine compartment, on bracket	<b>C144</b> Front of engine, on camshaft position sensor
<b>C145</b> RH side of engine, on exhaust back	<b>C146</b> Top LH side of engine, on injection	<b>C149</b> (5.8L) LH side of engine	<b>C149</b> (7.3L Diesel) N/A	<b>C149</b> (7.5L) LH side of engine	<b>C150</b> (5.8L) Top LH front of