

# 111-1 REMOTE KEYLESS ENTRY (RKE)


2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

For diagnostic information, refer to Section 501-14B of the Workshop Manual.

HOT AT ALL TIMES

SEE POWER DISTRIBUTION 13-3


EXCURSION

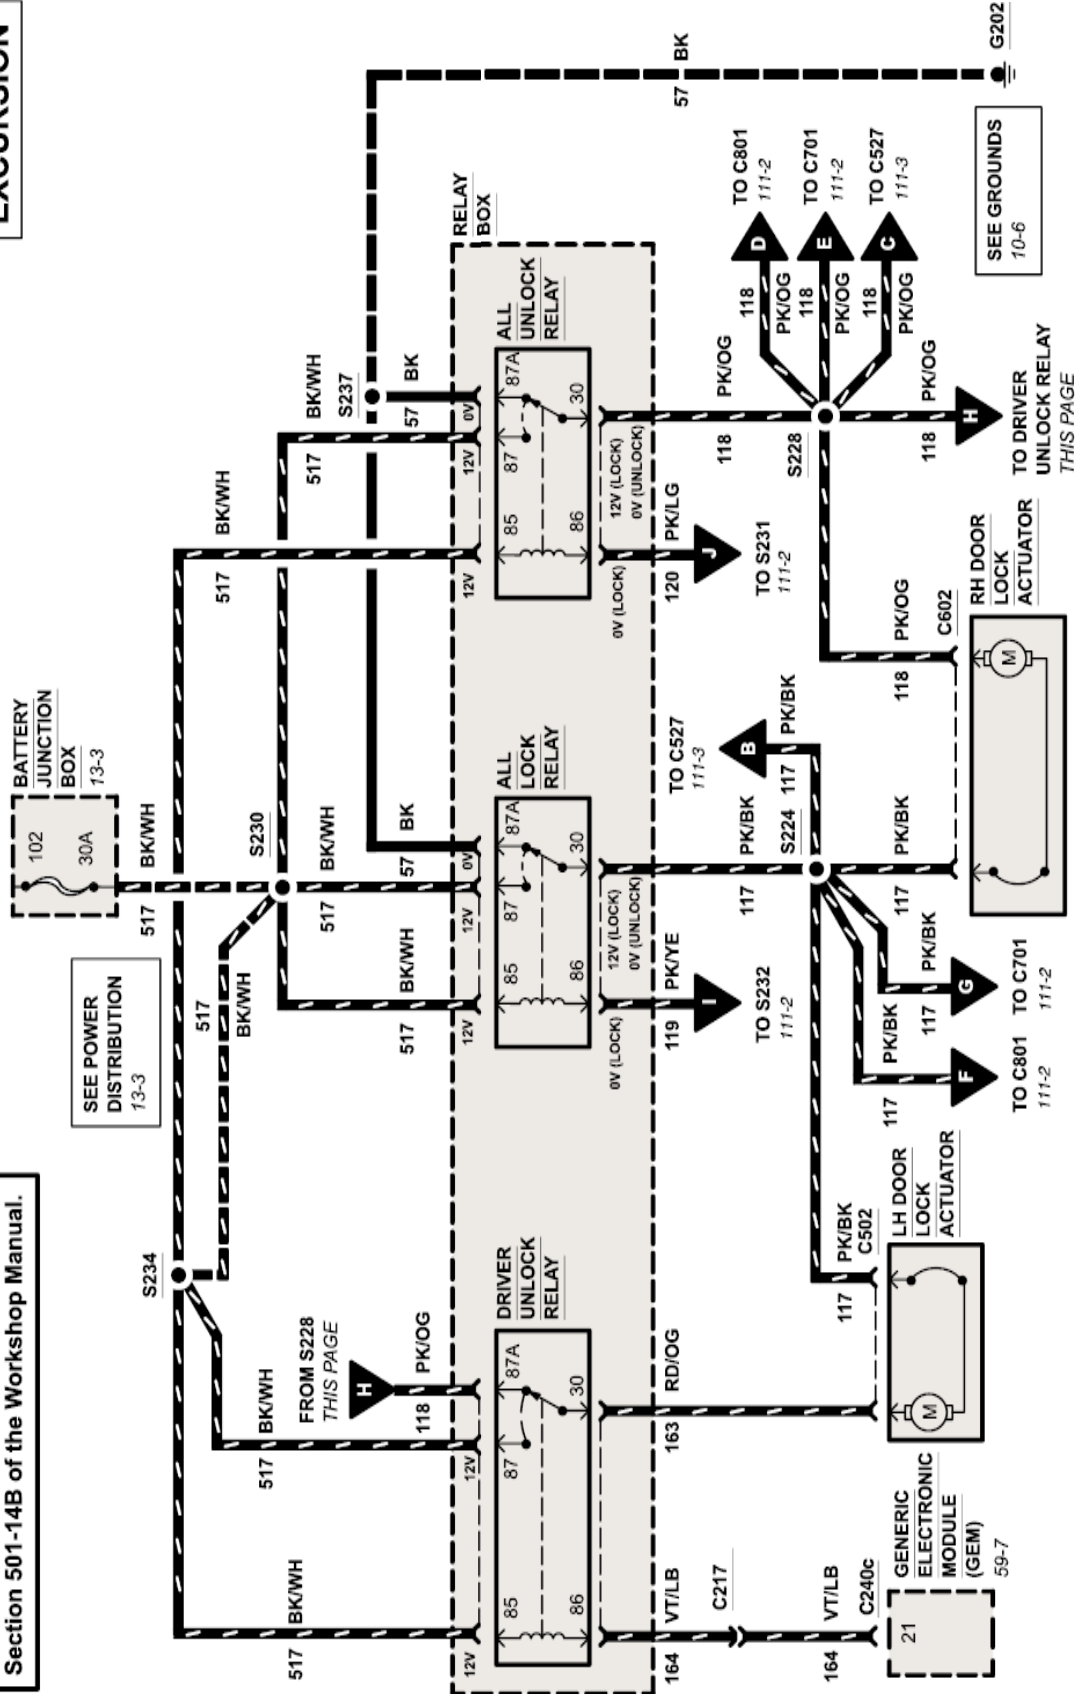

# REMOTE KEYLESS ENTRY (RKE) 111-2


2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

## EXCURSION

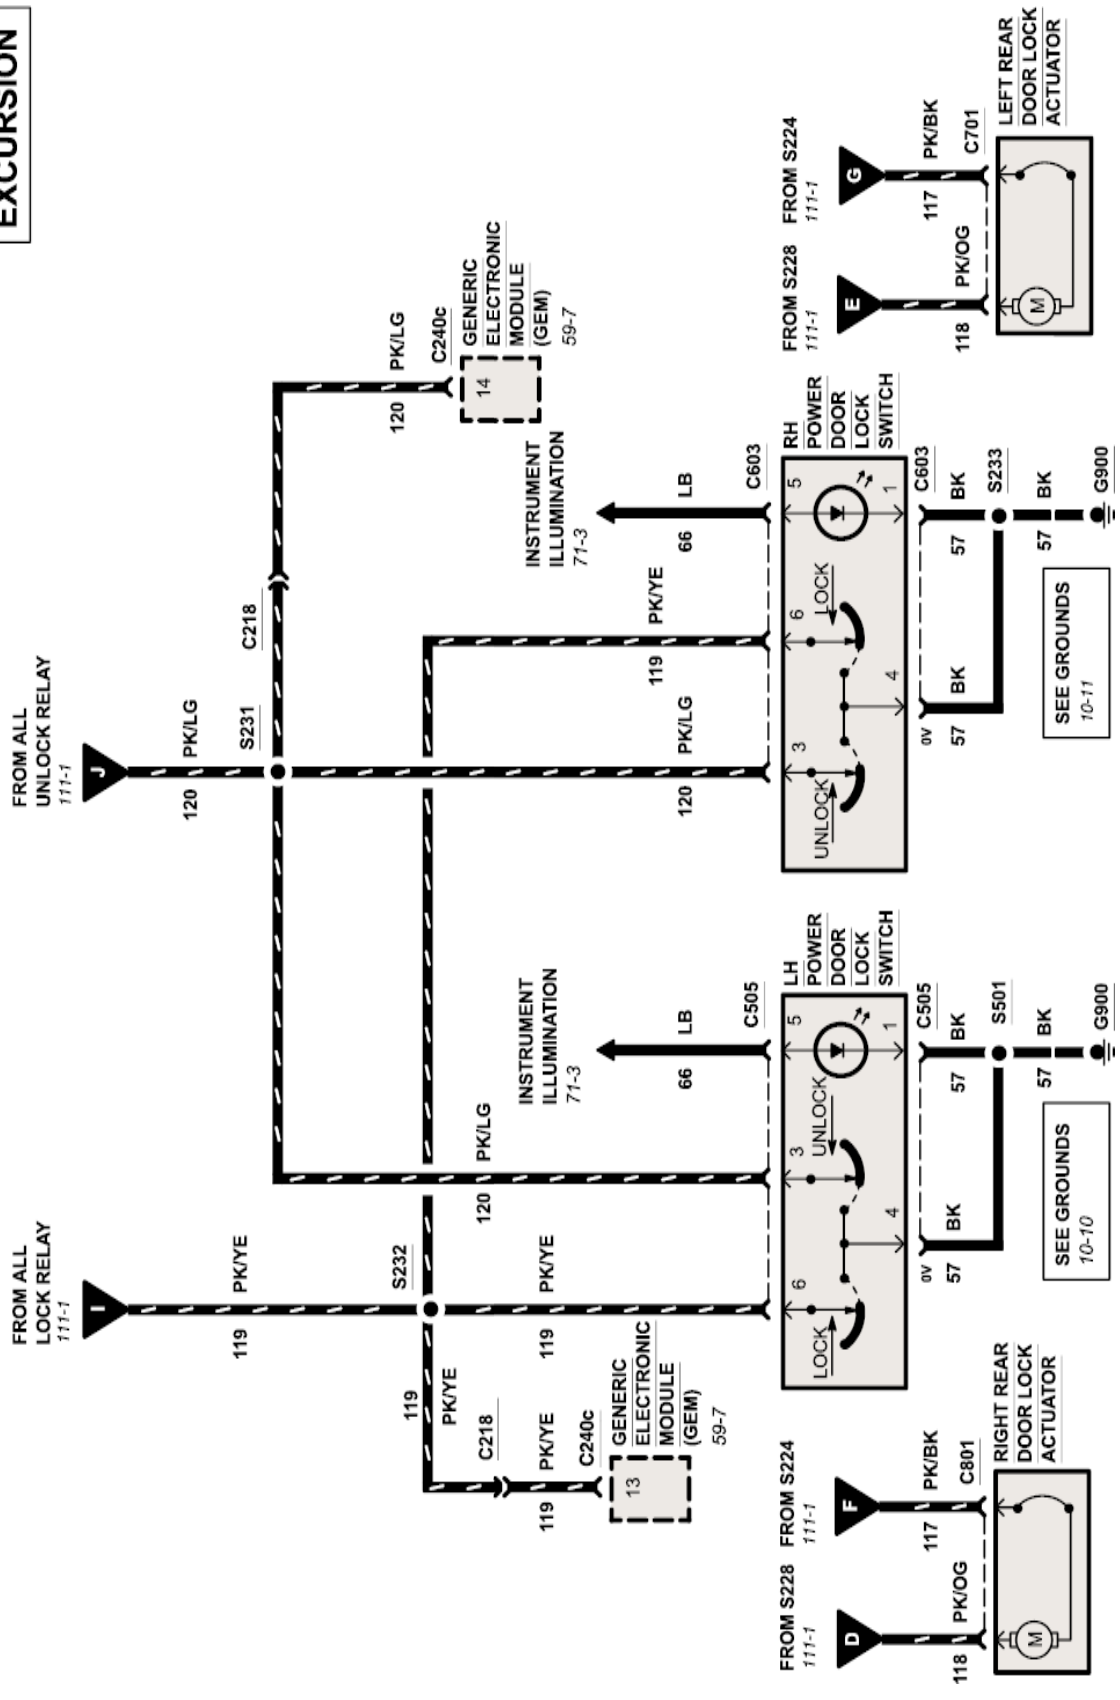

# 111-3 REMOTE KEYLESS ENTRY (RKE)


2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

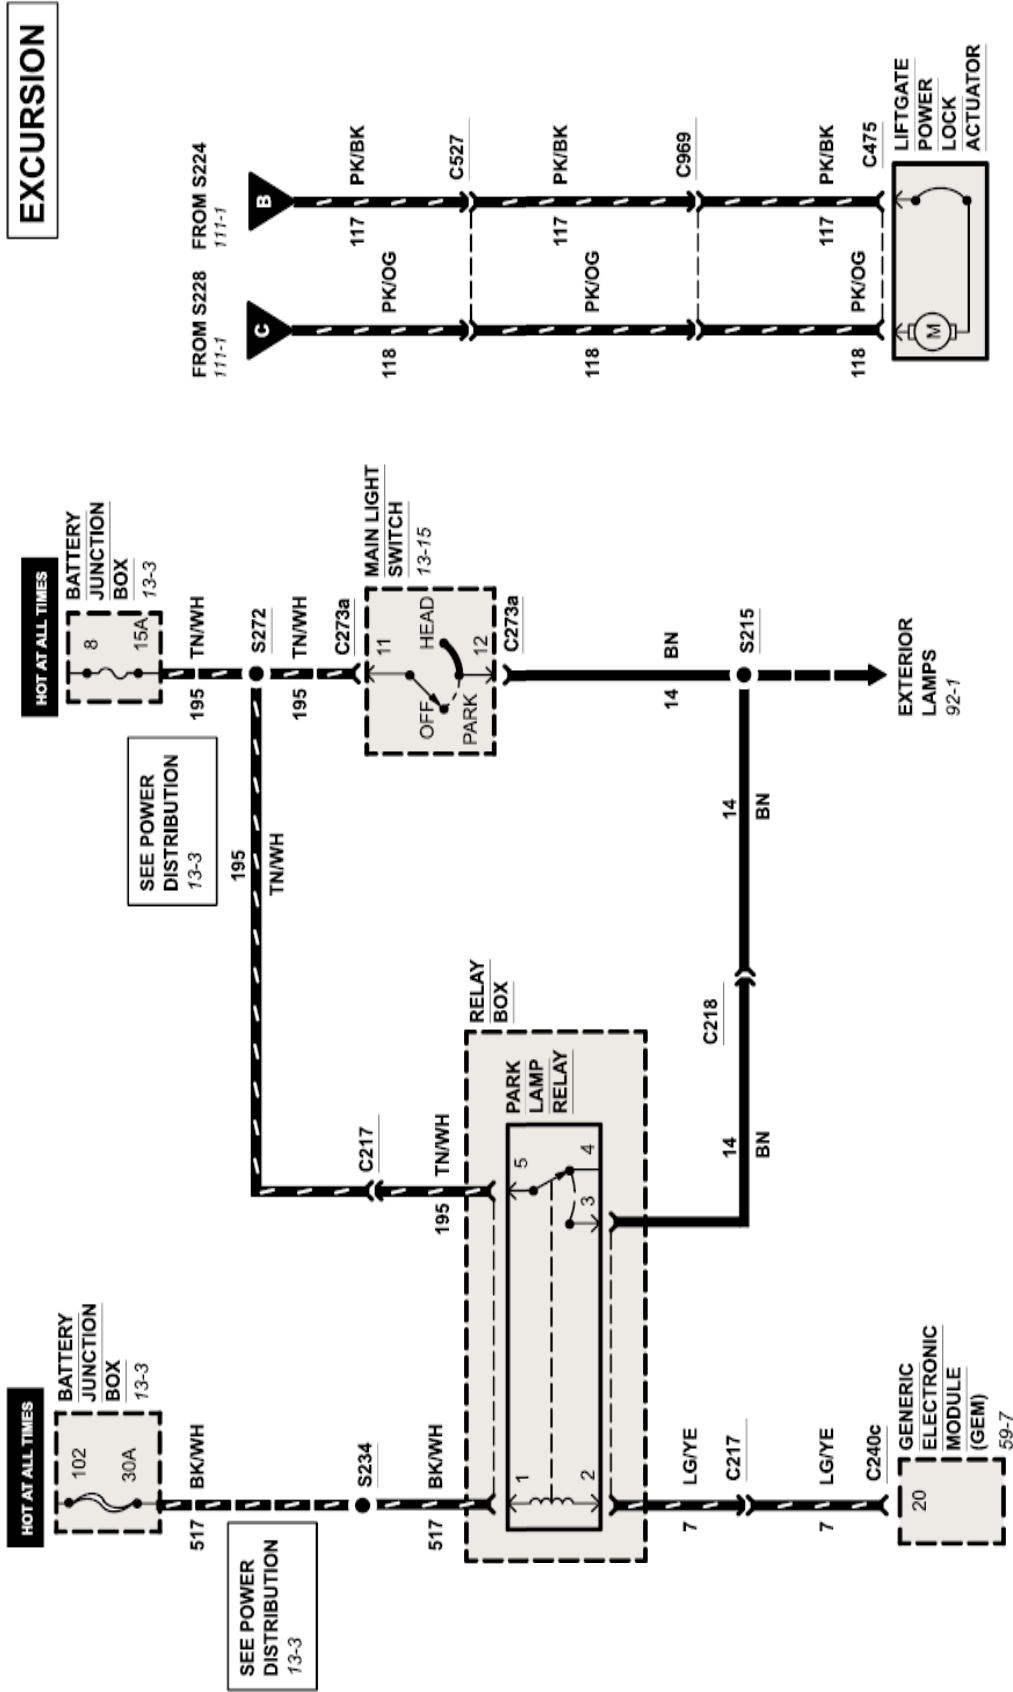

# REMOTE KEYLESS ENTRY (RKE) 111-4

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

EXCURSION

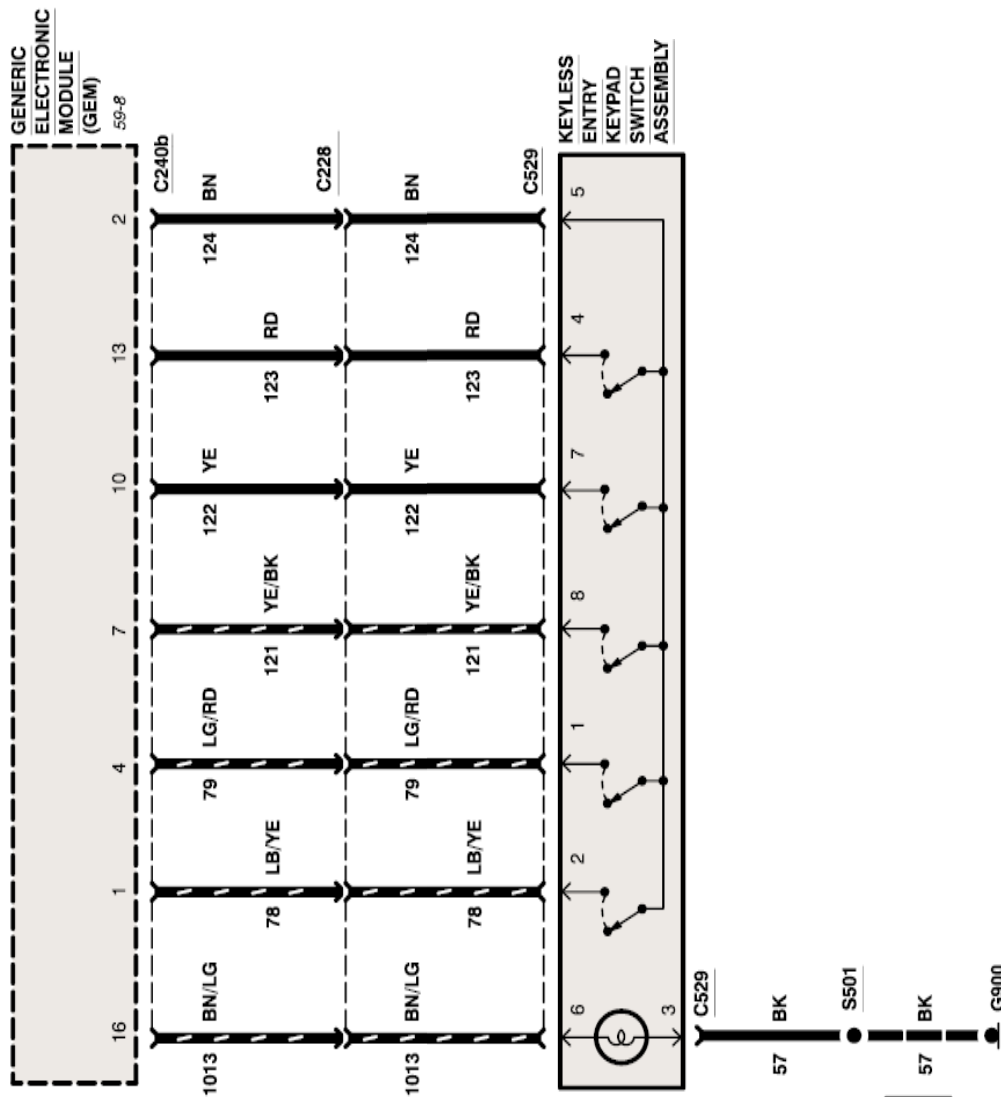


SEE GROUNDS  
10-10



# REMOTE KEYLESS ENTRY (RKE) 111-6

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550


PICKUP EXCEPT  
CREW CAB

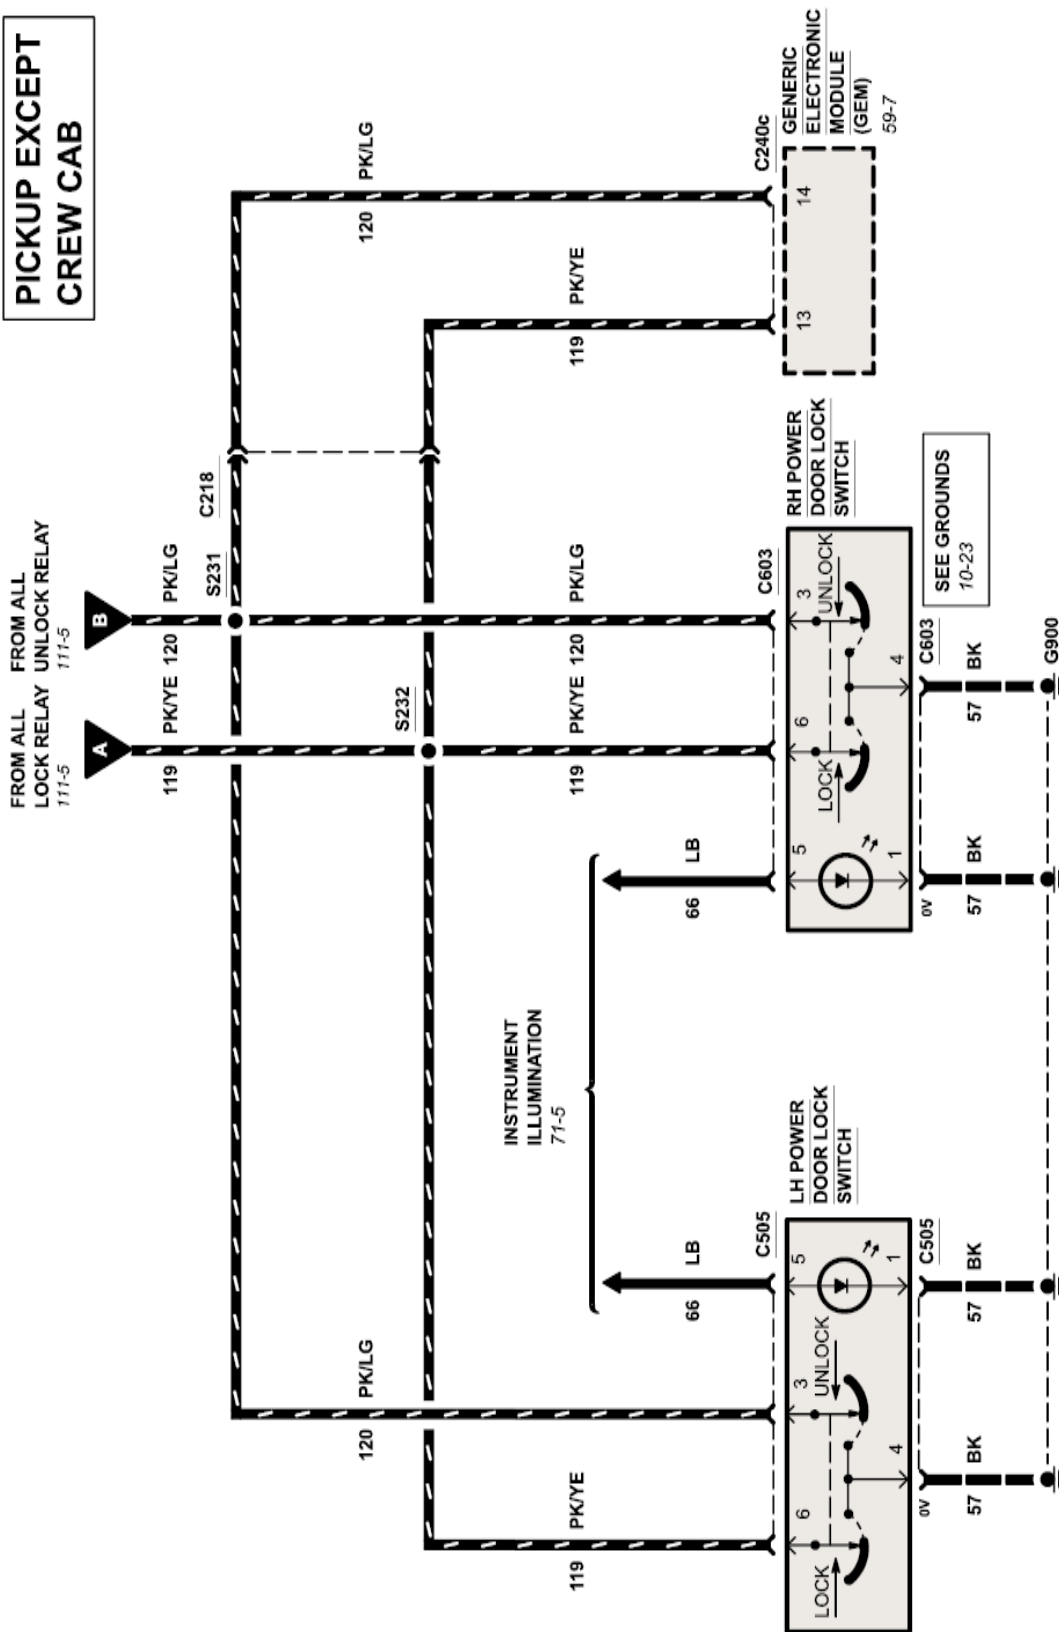



# REMOTE KEYLESS ENTRY (RKE) 111-8


2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

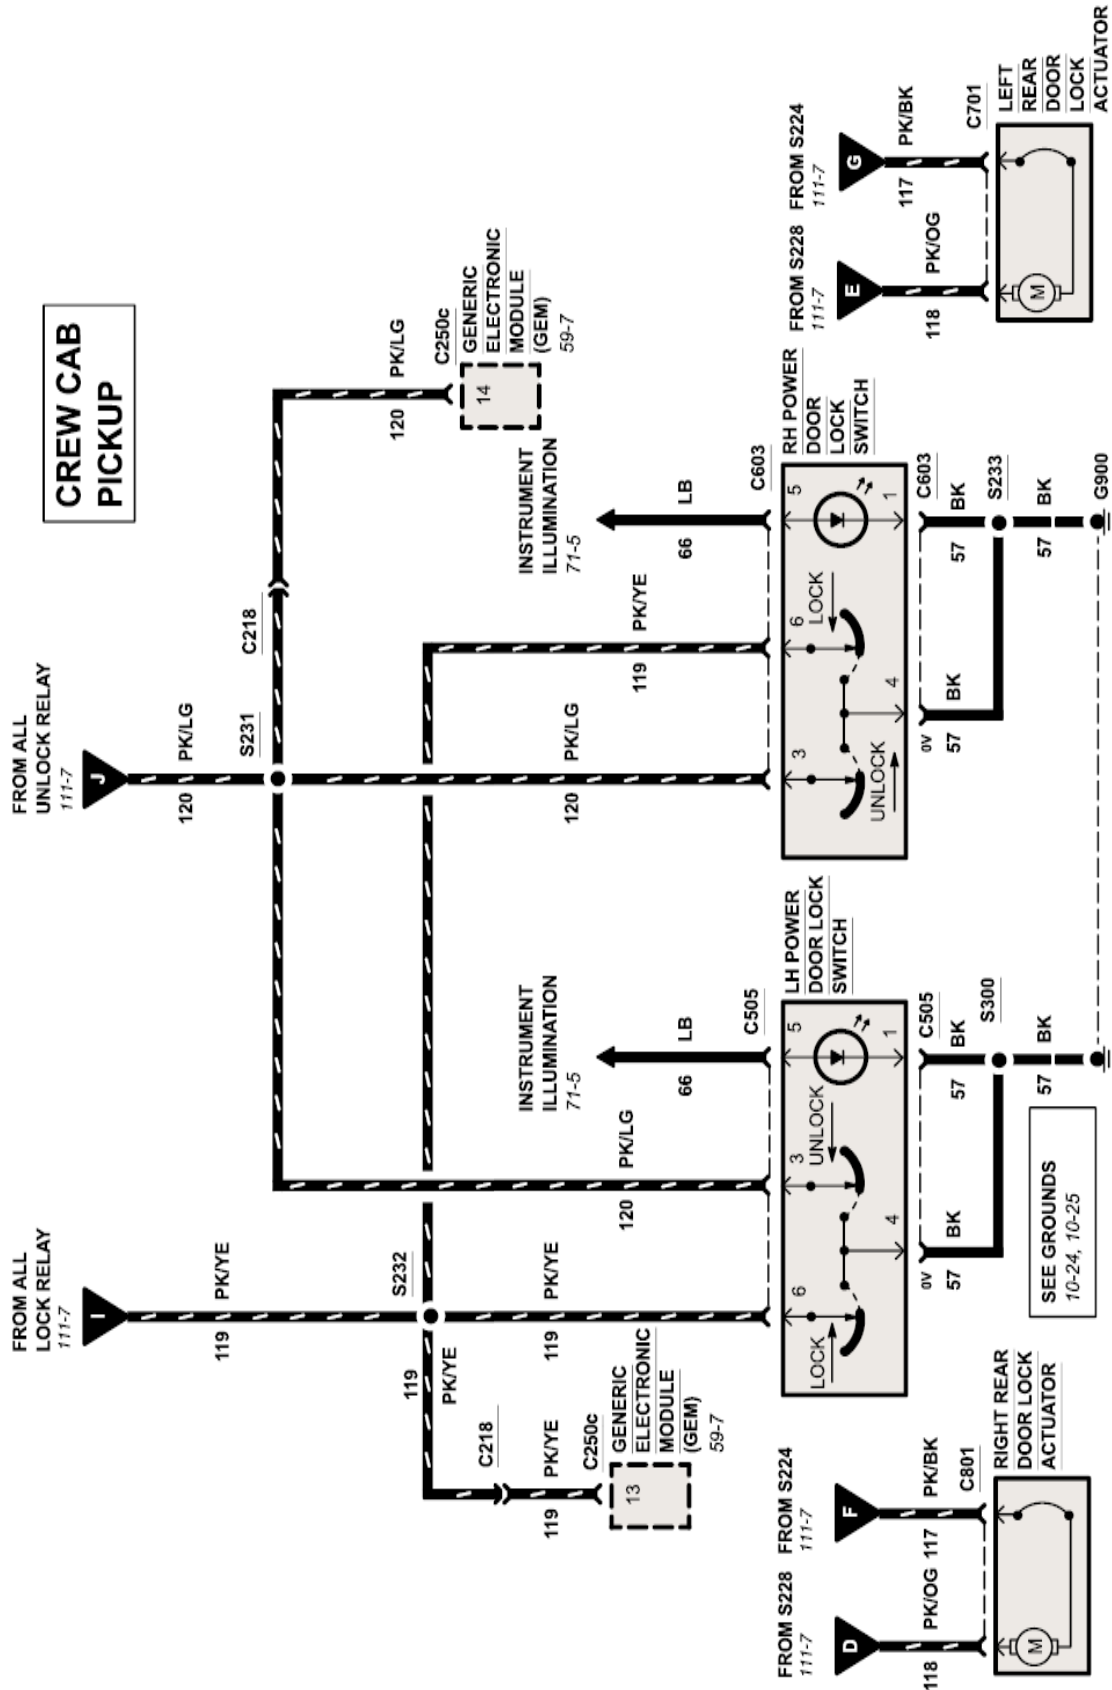



# 111-9 REMOTE KEYLESS ENTRY (RKE)

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

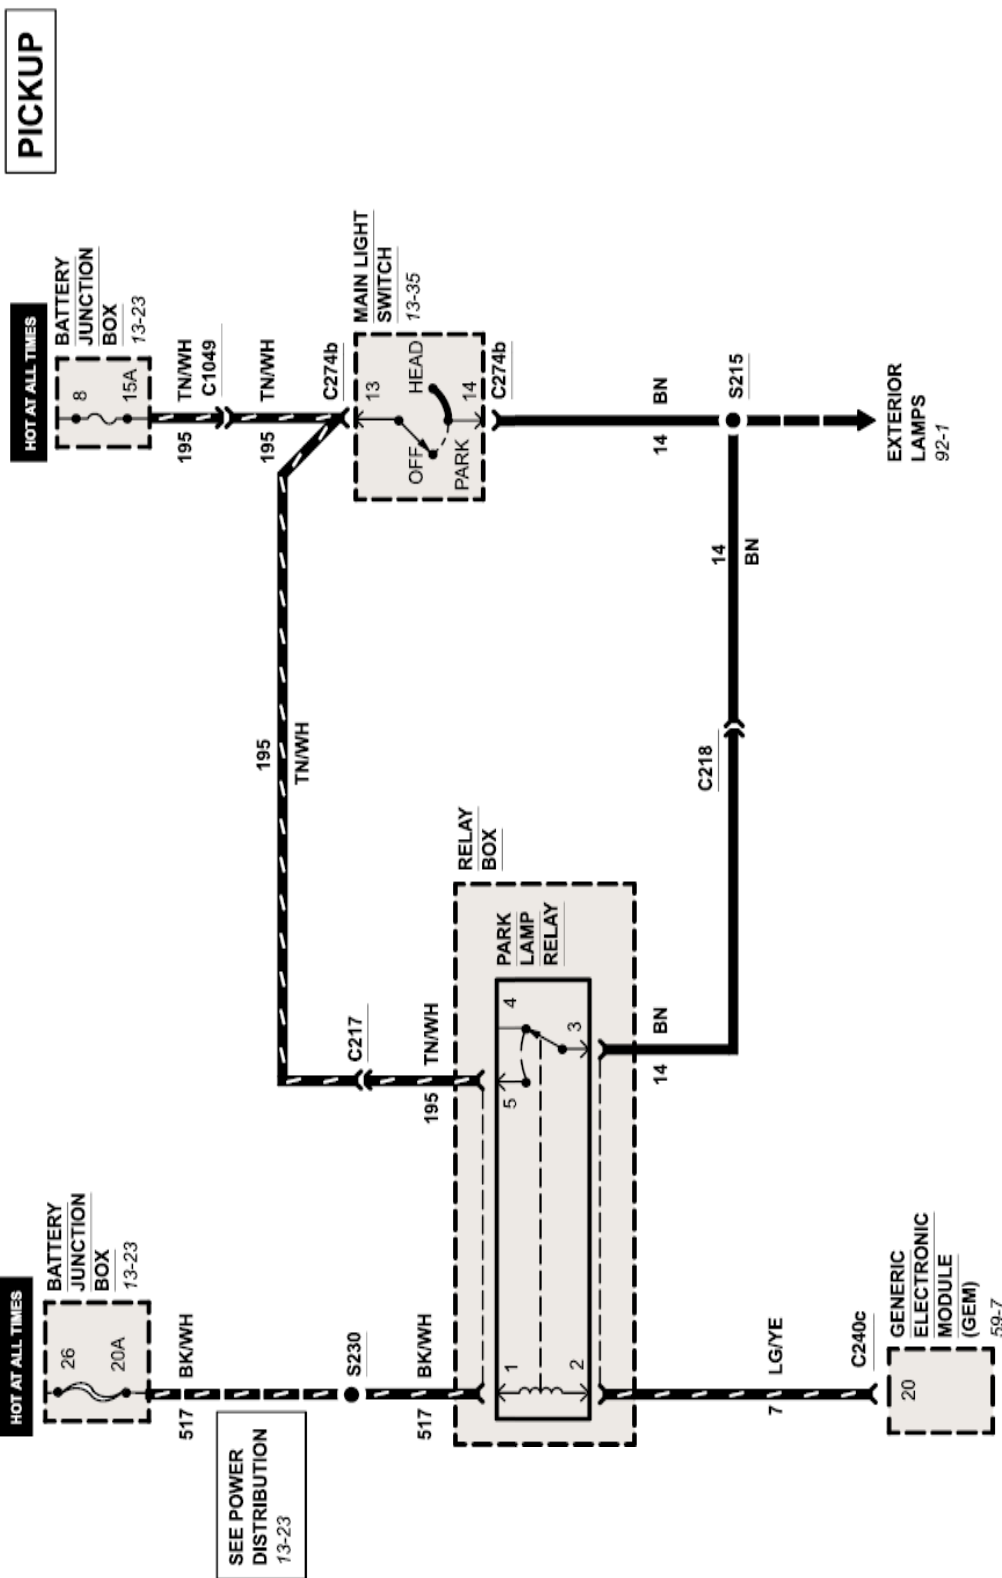

**PICKUP**

**HOT AT ALL TIMES**

SEE POWER DISTRIBUTION 13-23

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.