



27-3 ENGINE CONTROLS (7.3L DIESEL)

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

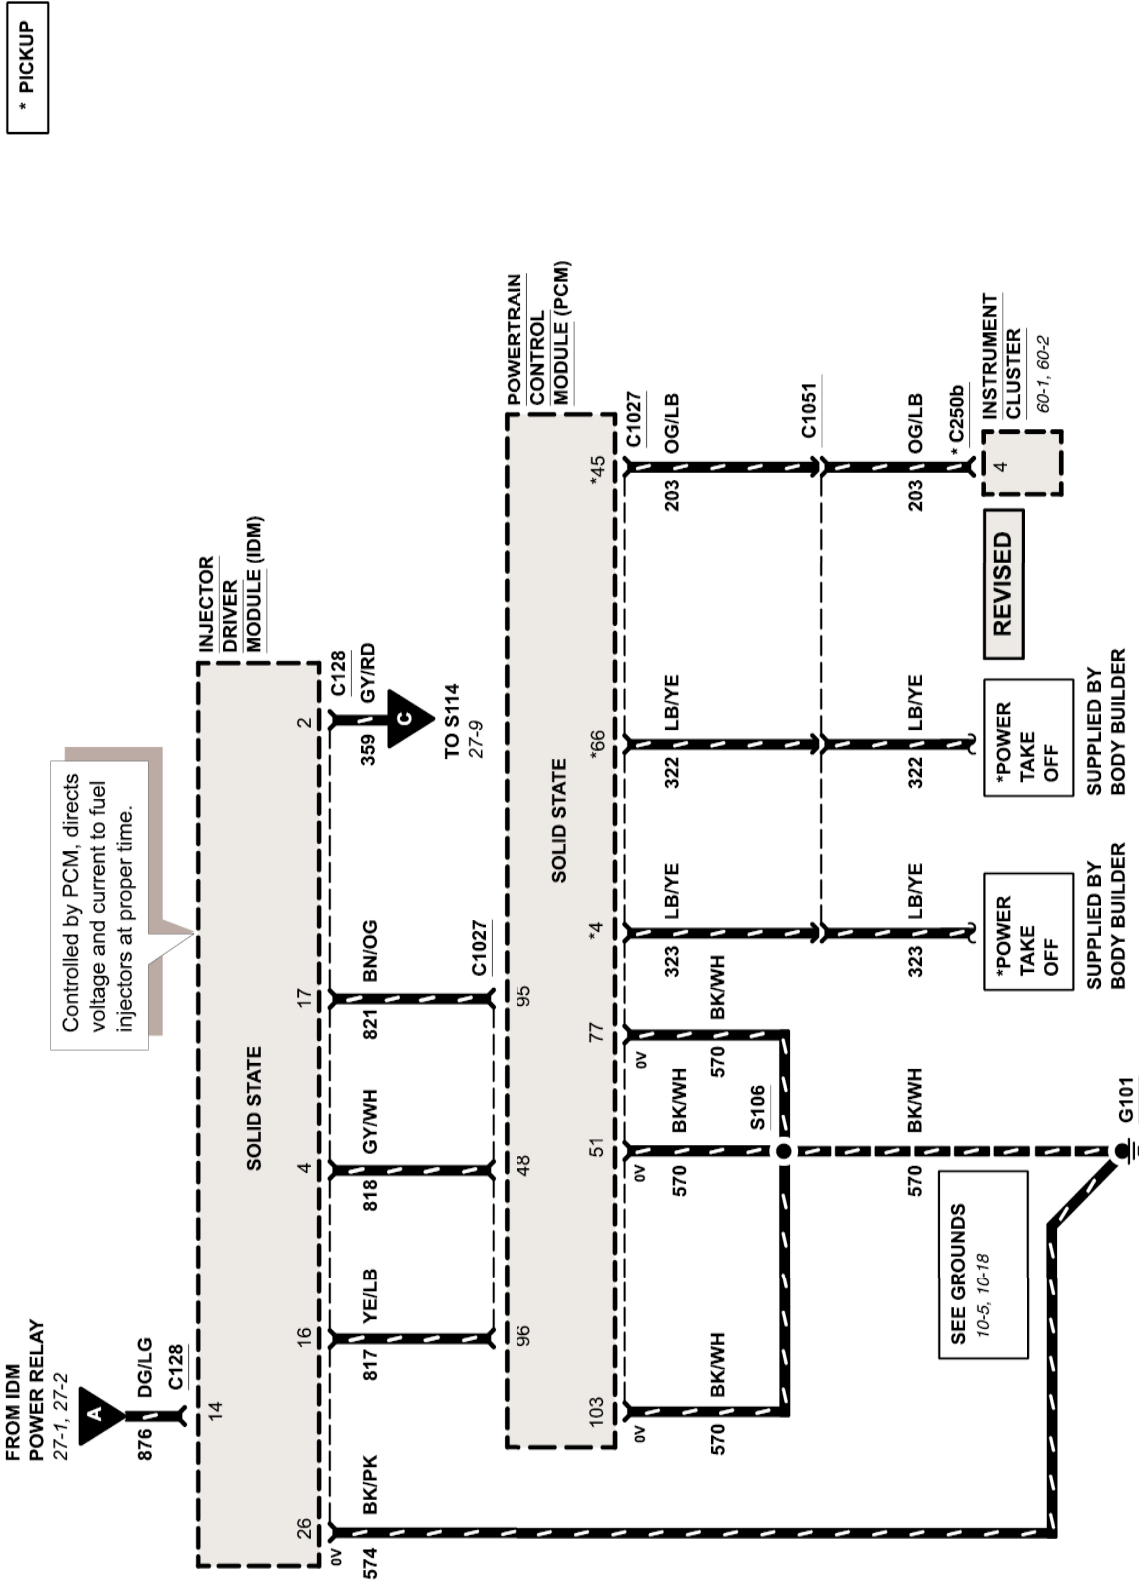


ENGINE CONTROLS (7.3L DIESEL) 27-4

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

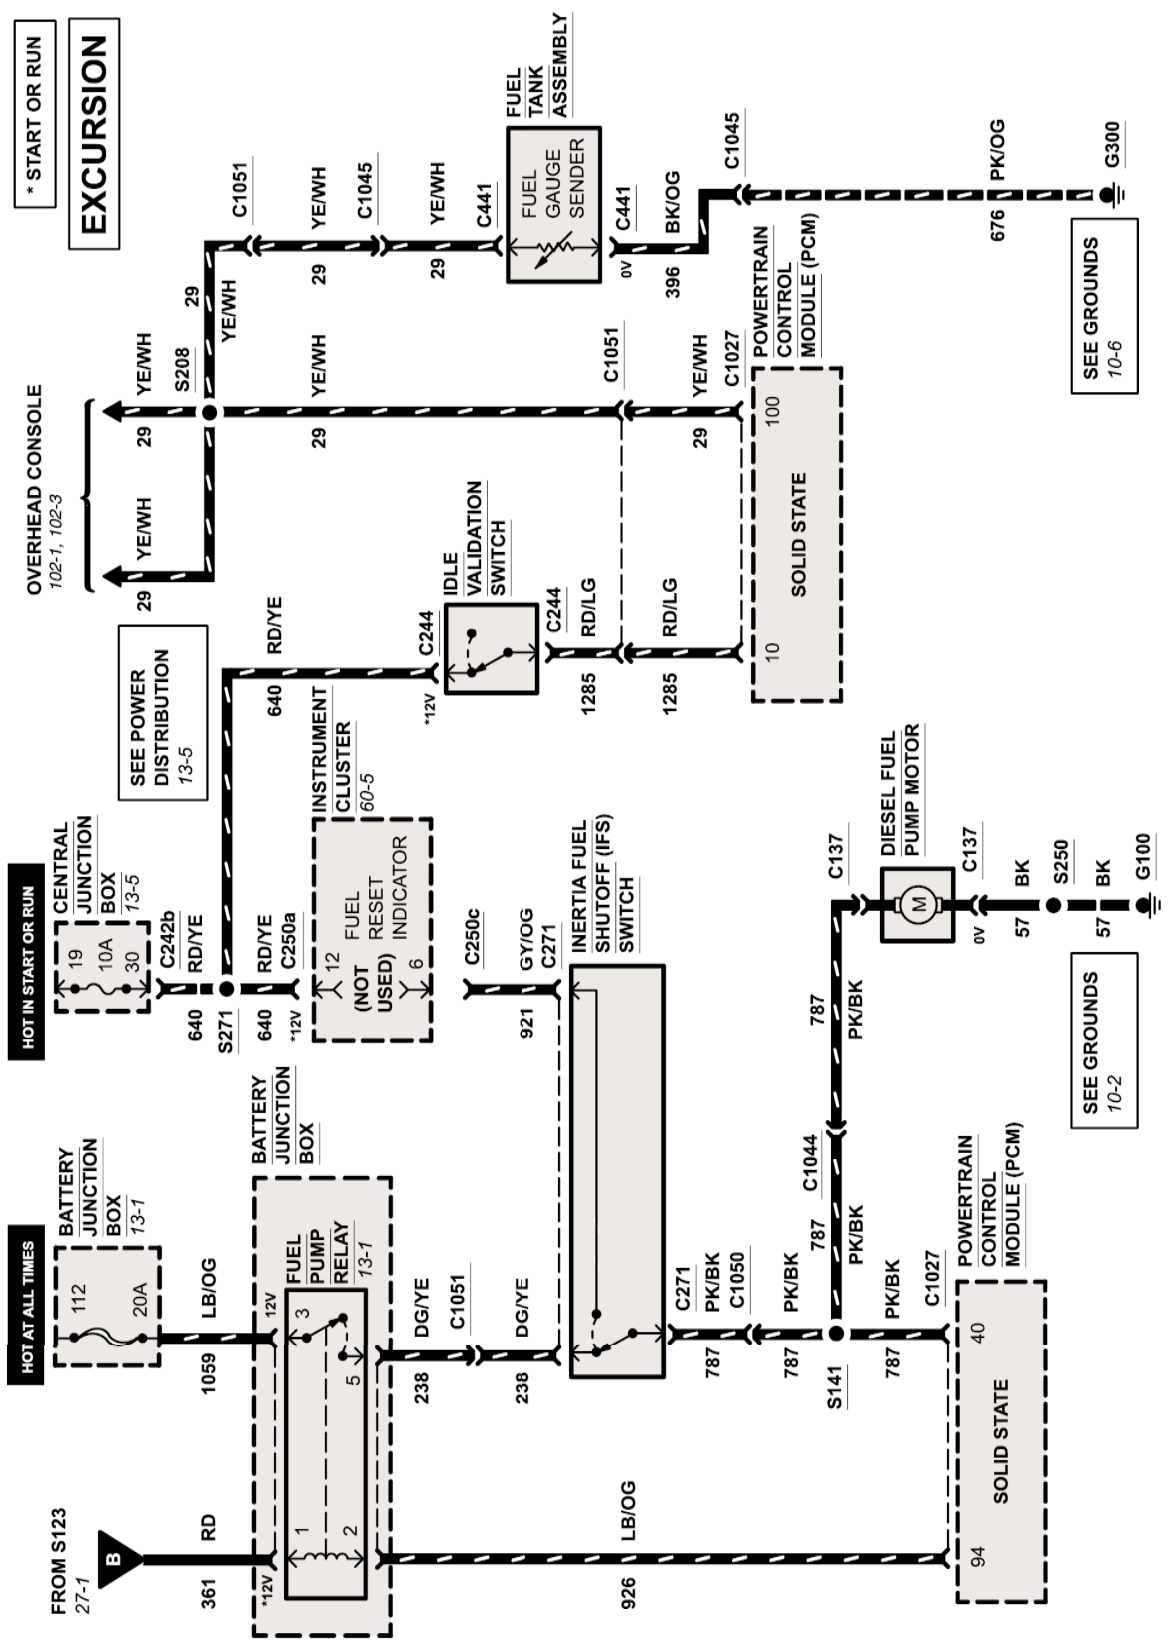


27-5 ENGINE CONTROLS (7.3L DIESEL)

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

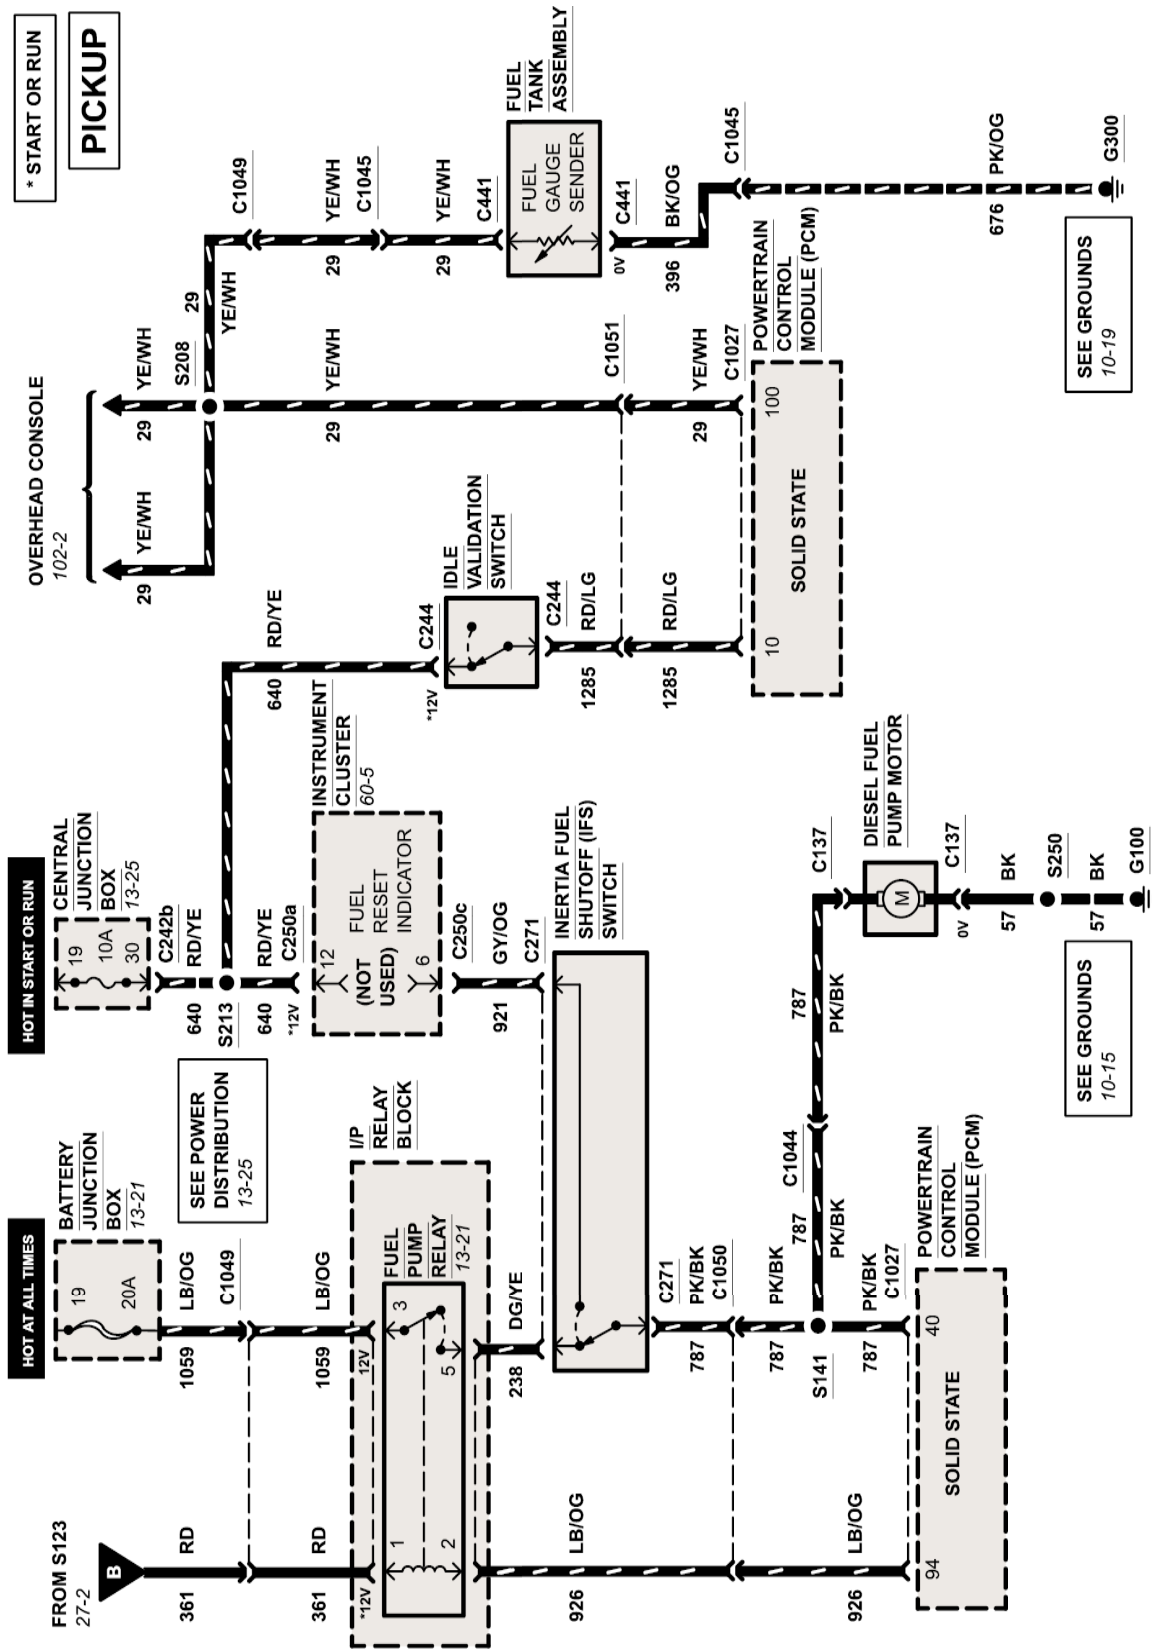

ENGINE CONTROLS (7.3L DIESEL) 27-6

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

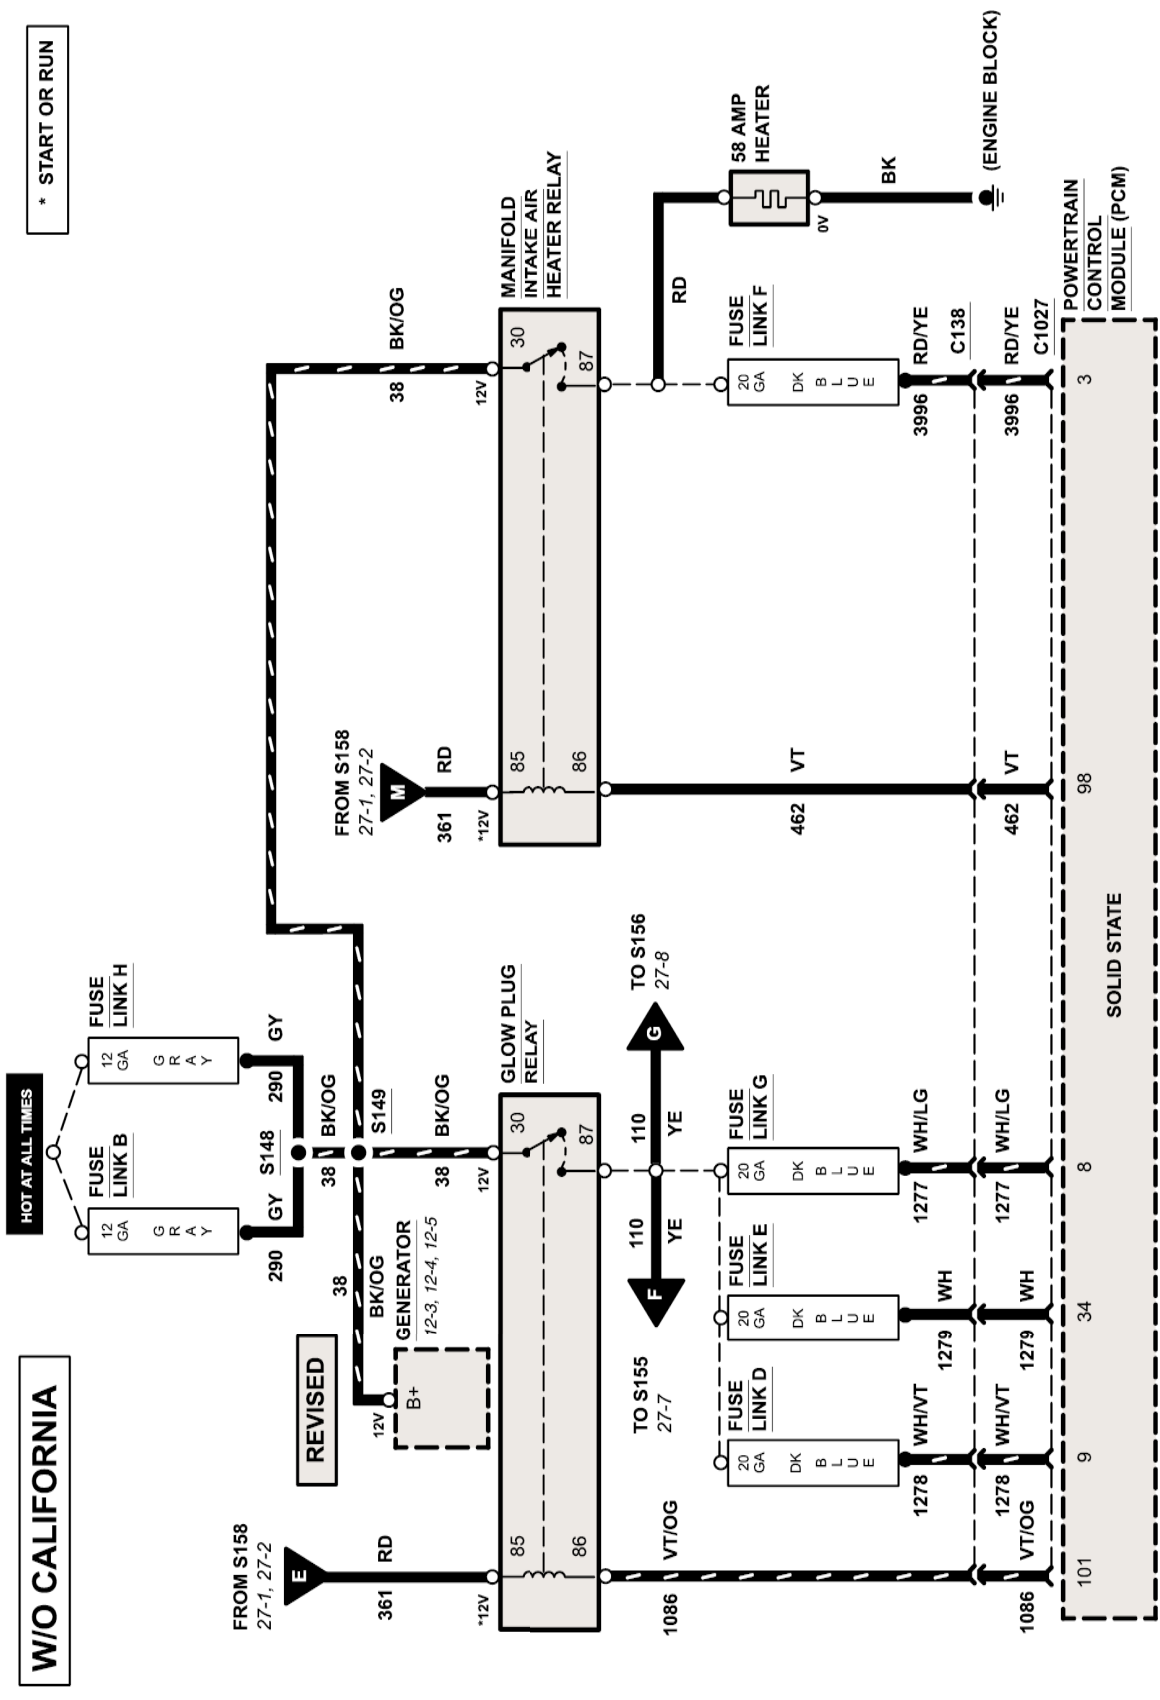


W/O CALIFORNIA

HOT AT ALL TIMES

* START OR RUN

27-7 ENGINE CONTROLS (7.3L DIESEL)


2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

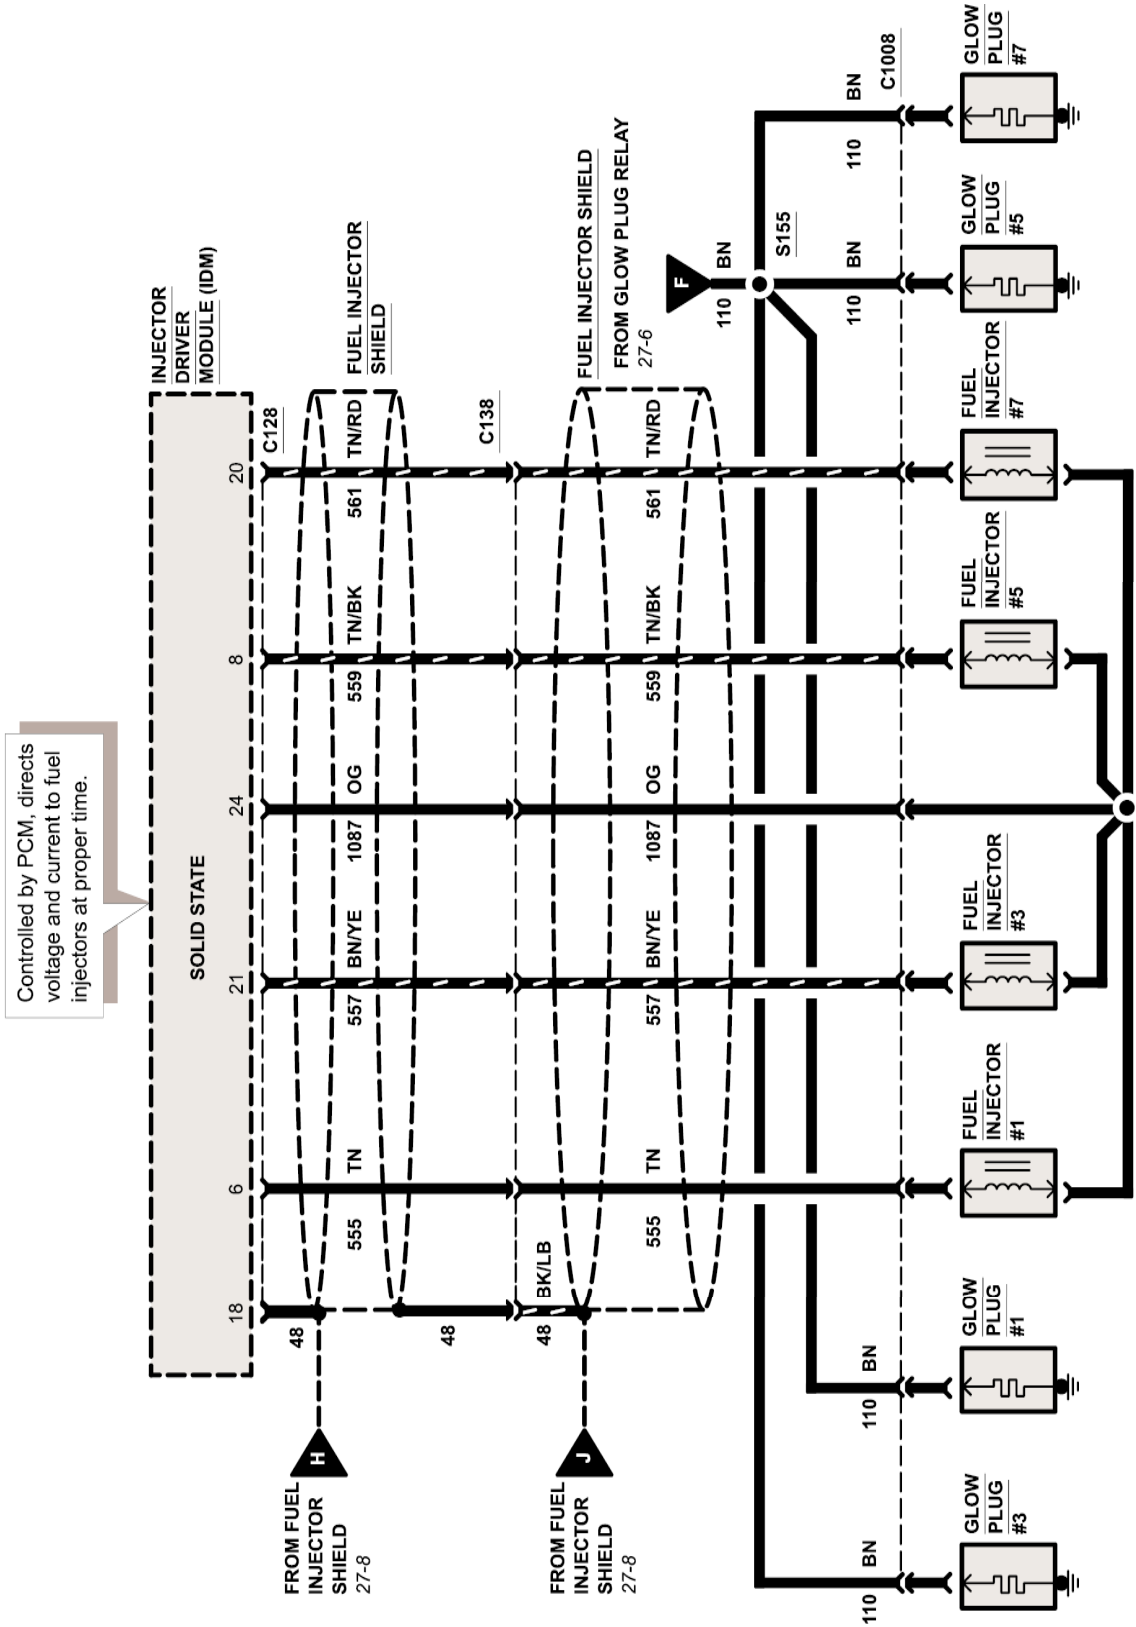

ENGINE CONTROLS (7.3L DIESEL) 27-8


2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

Controlled by PCM, directs voltage and current to fuel injectors at proper time.

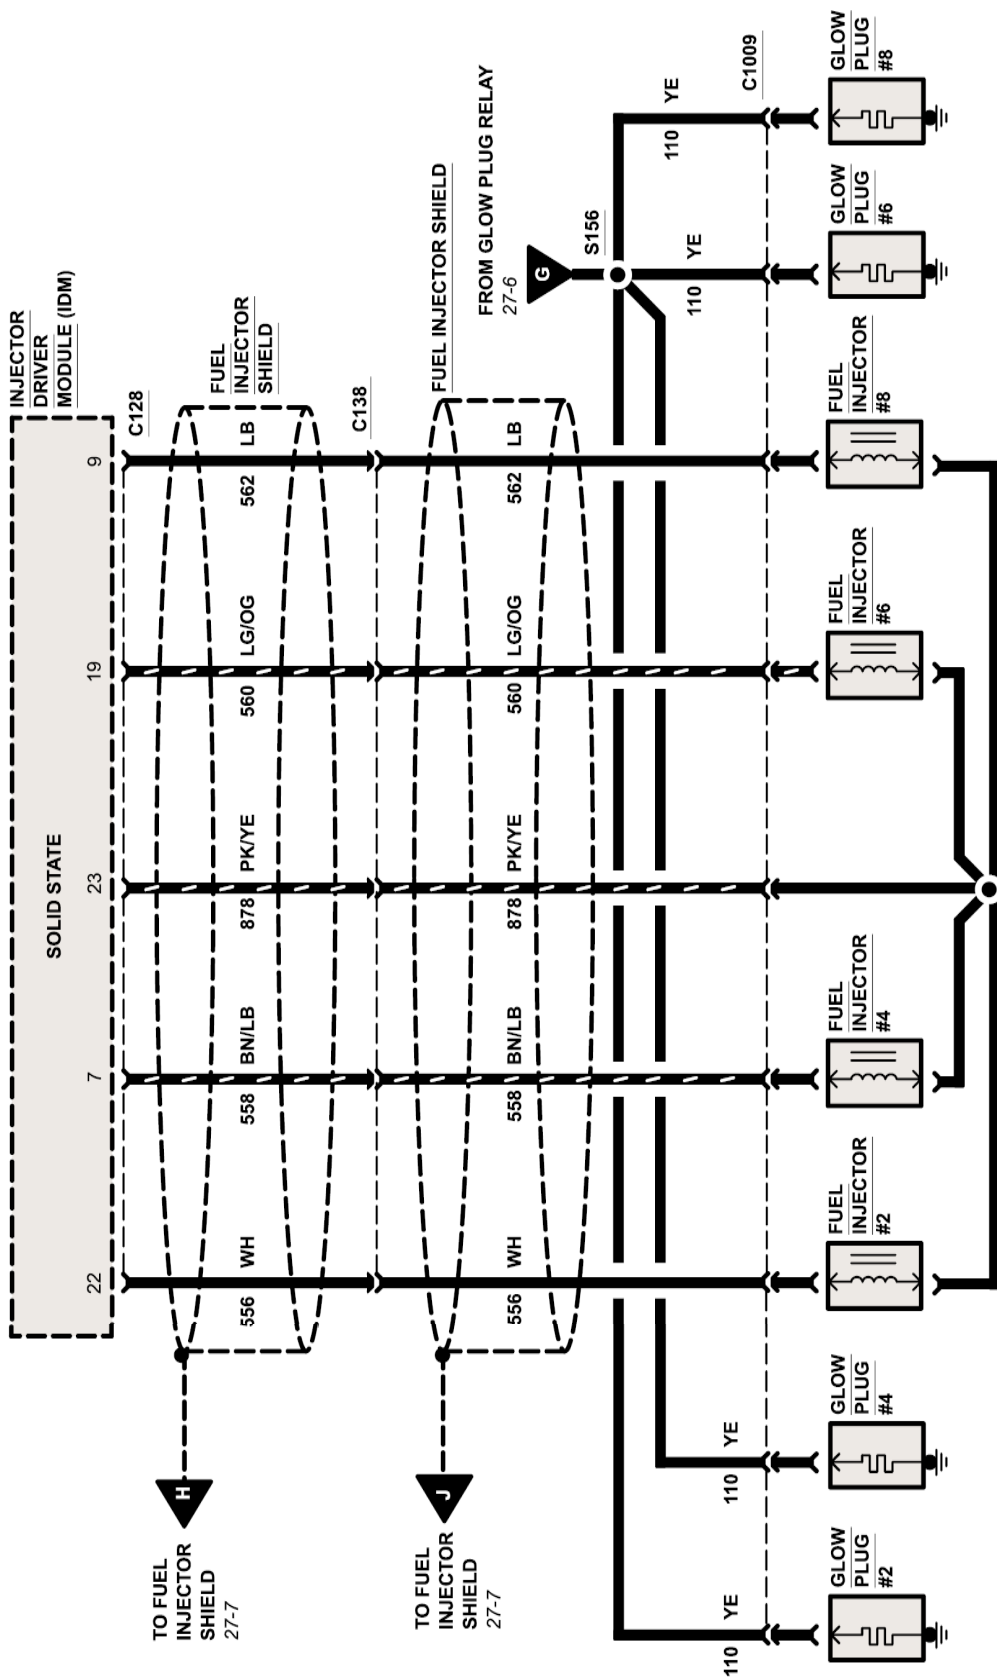


27-9 ENGINE CONTROLS (7.3L DIESEL)

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

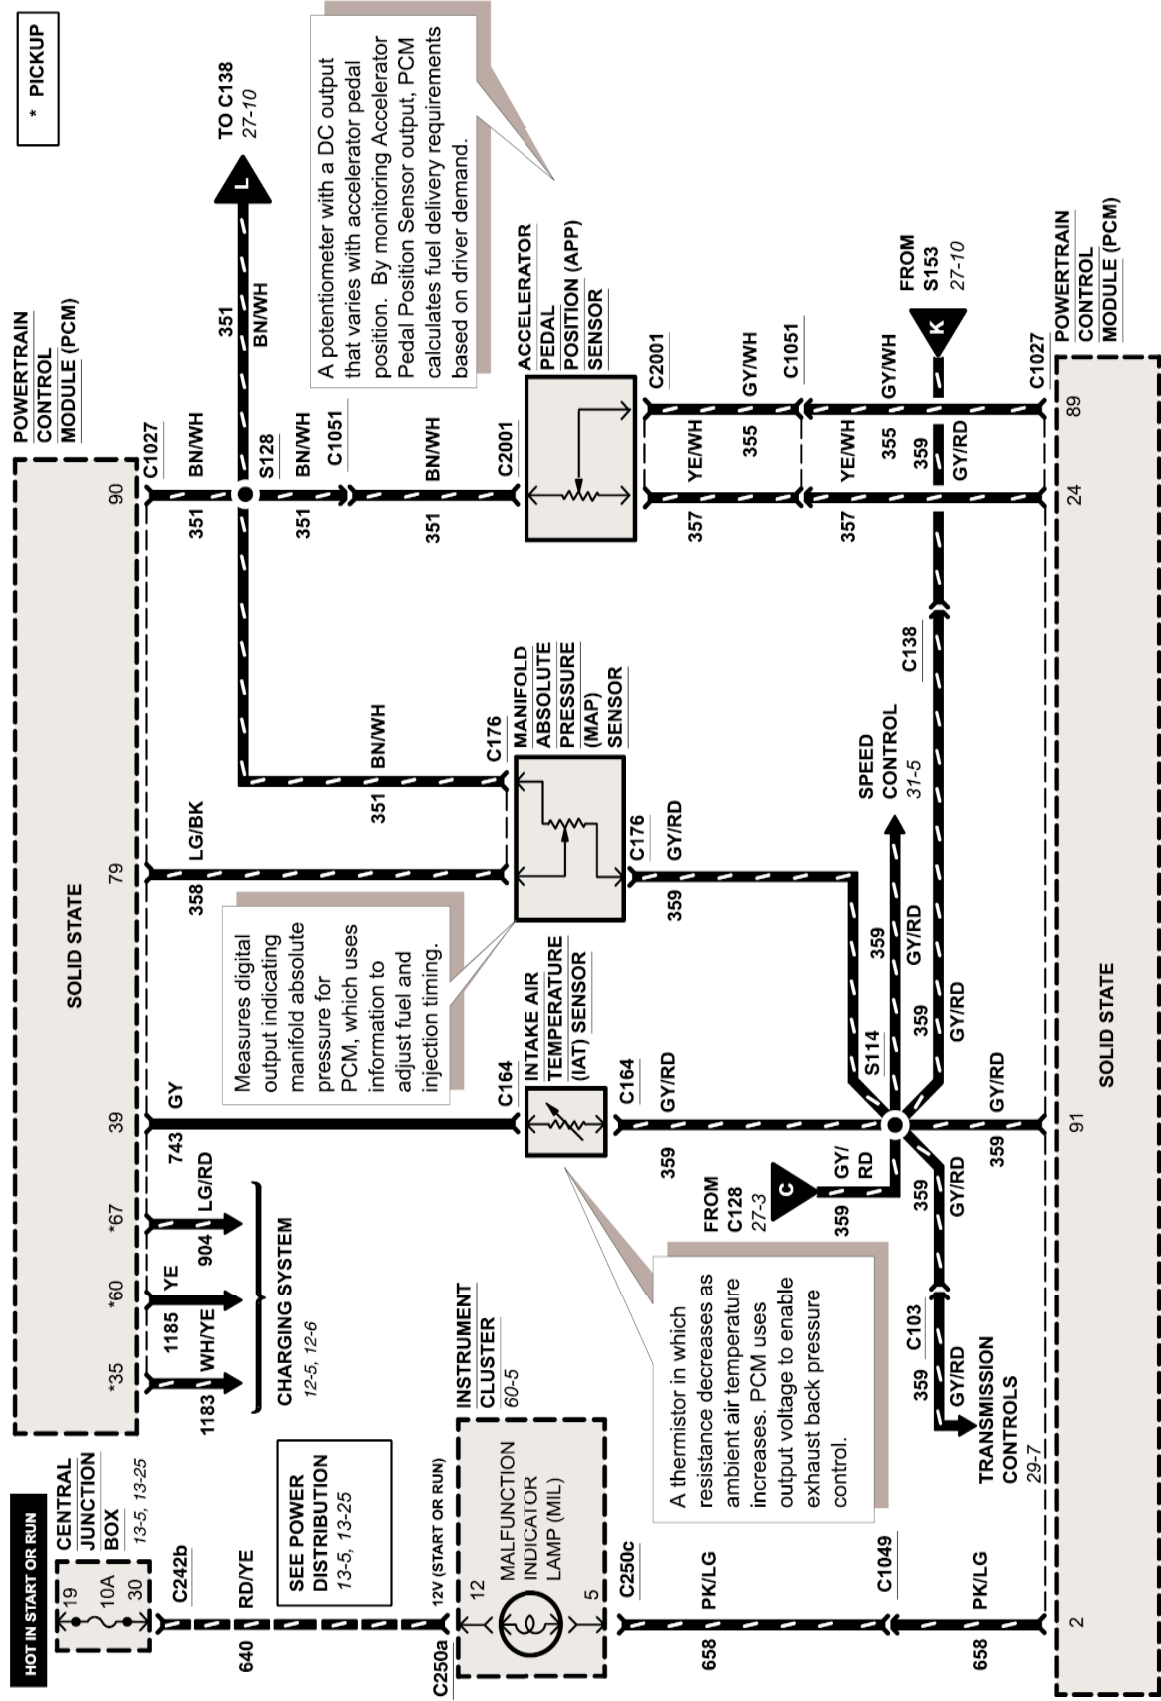


ENGINE CONTROLS (7.3L DIESEL) 27-10

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

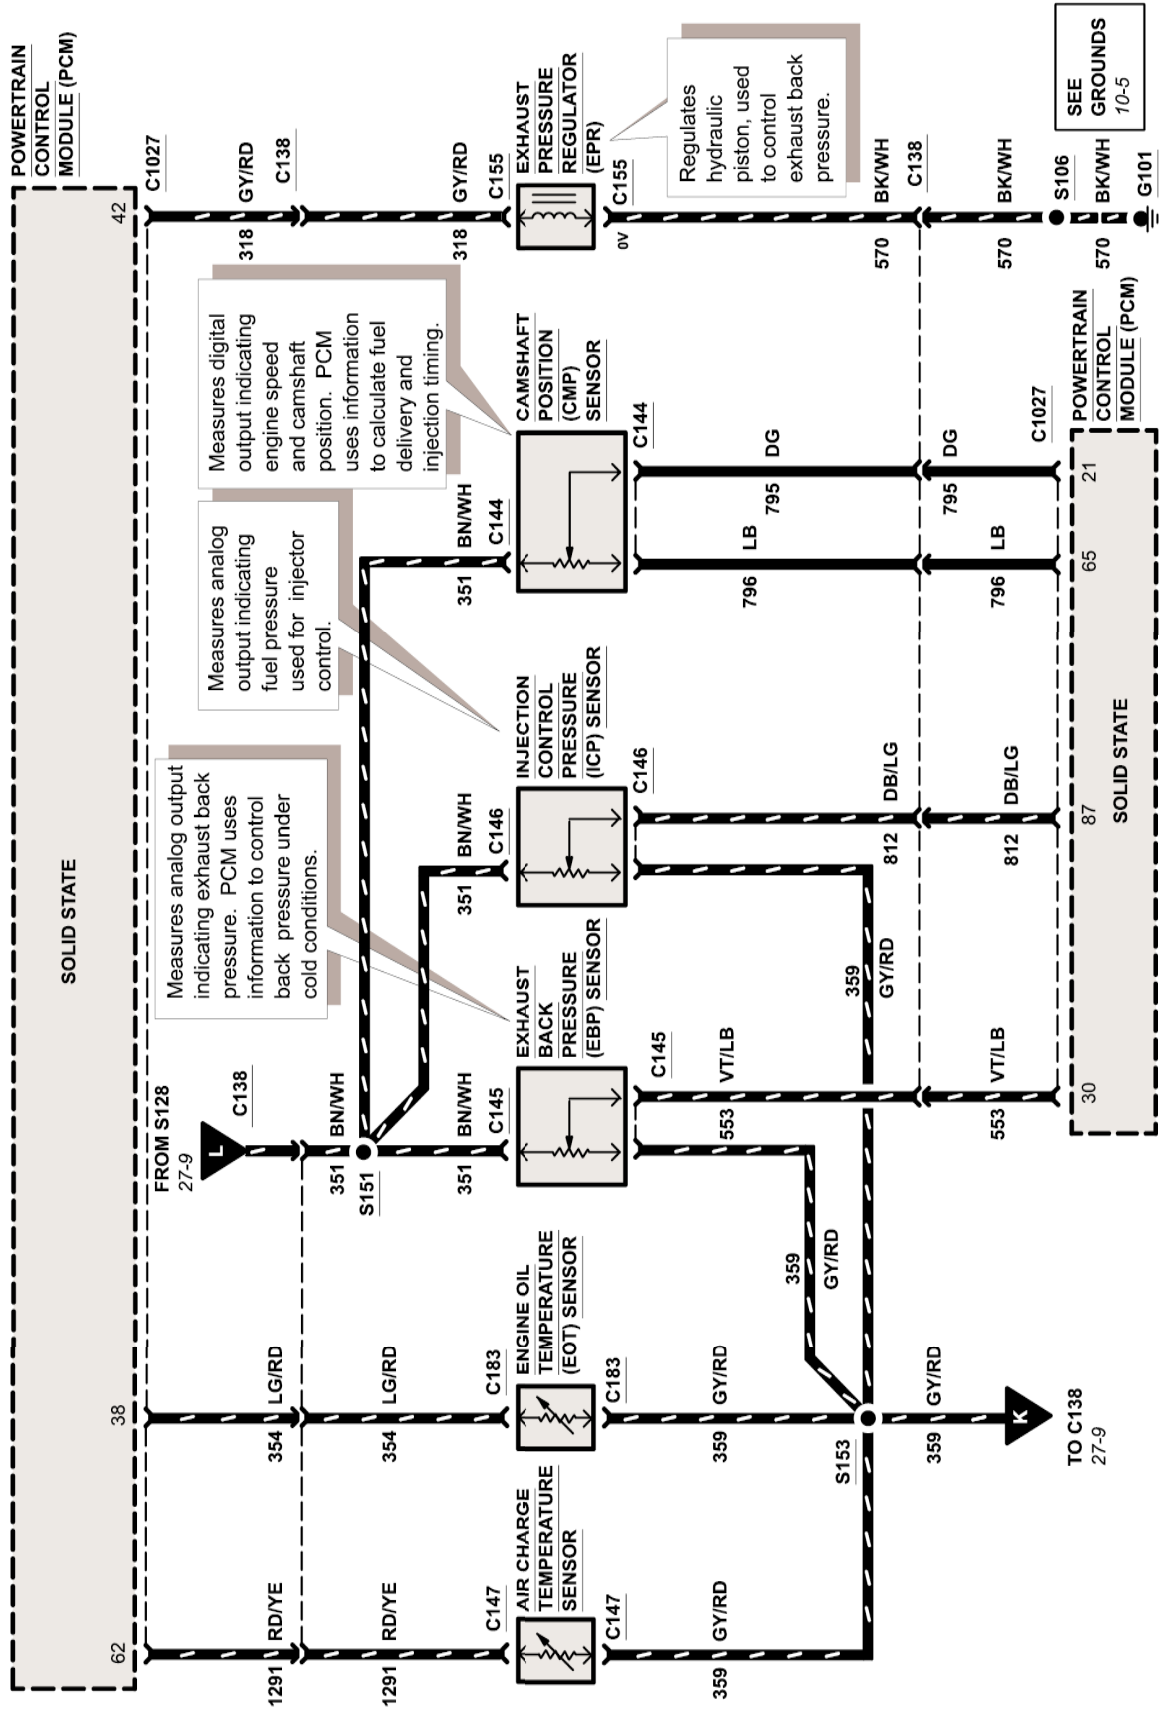

27-11 ENGINE CONTROLS (7.3L DIESEL)


2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

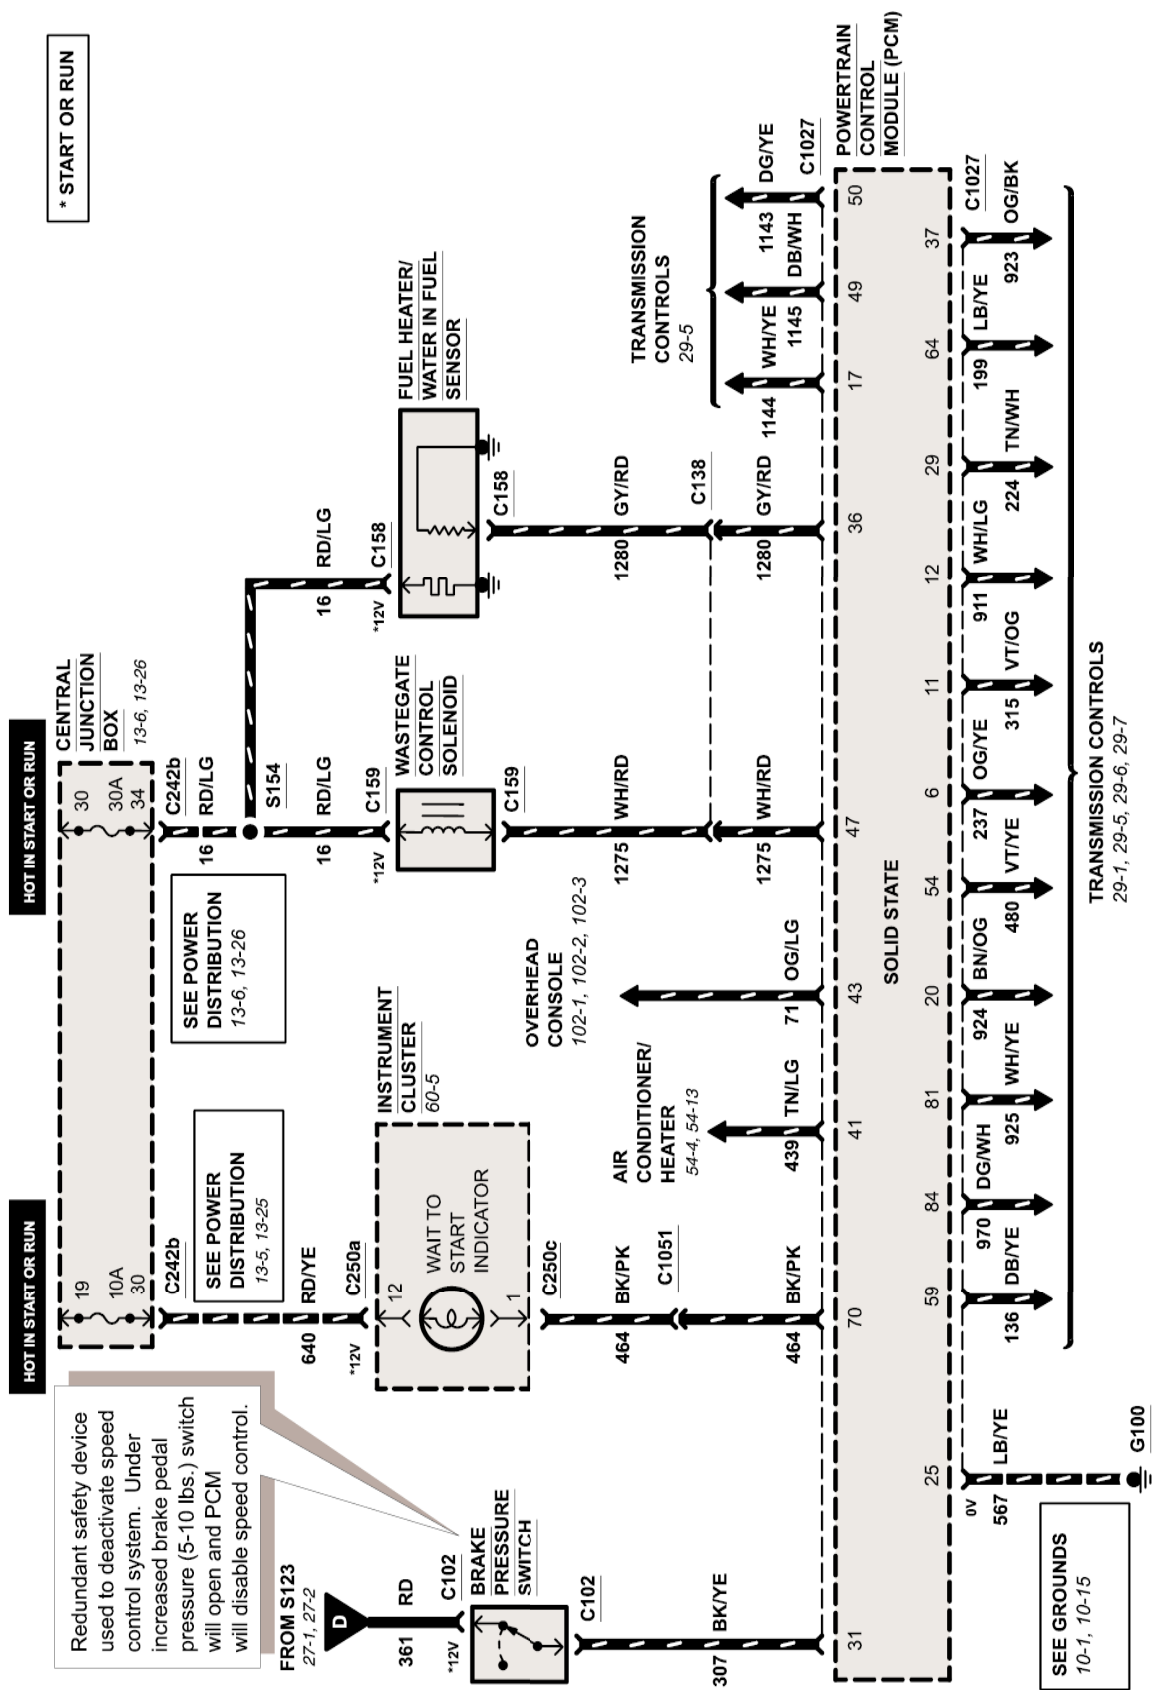

ENGINE CONTROLS (7.3L DIESEL) 27-12


2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

EXCURSION

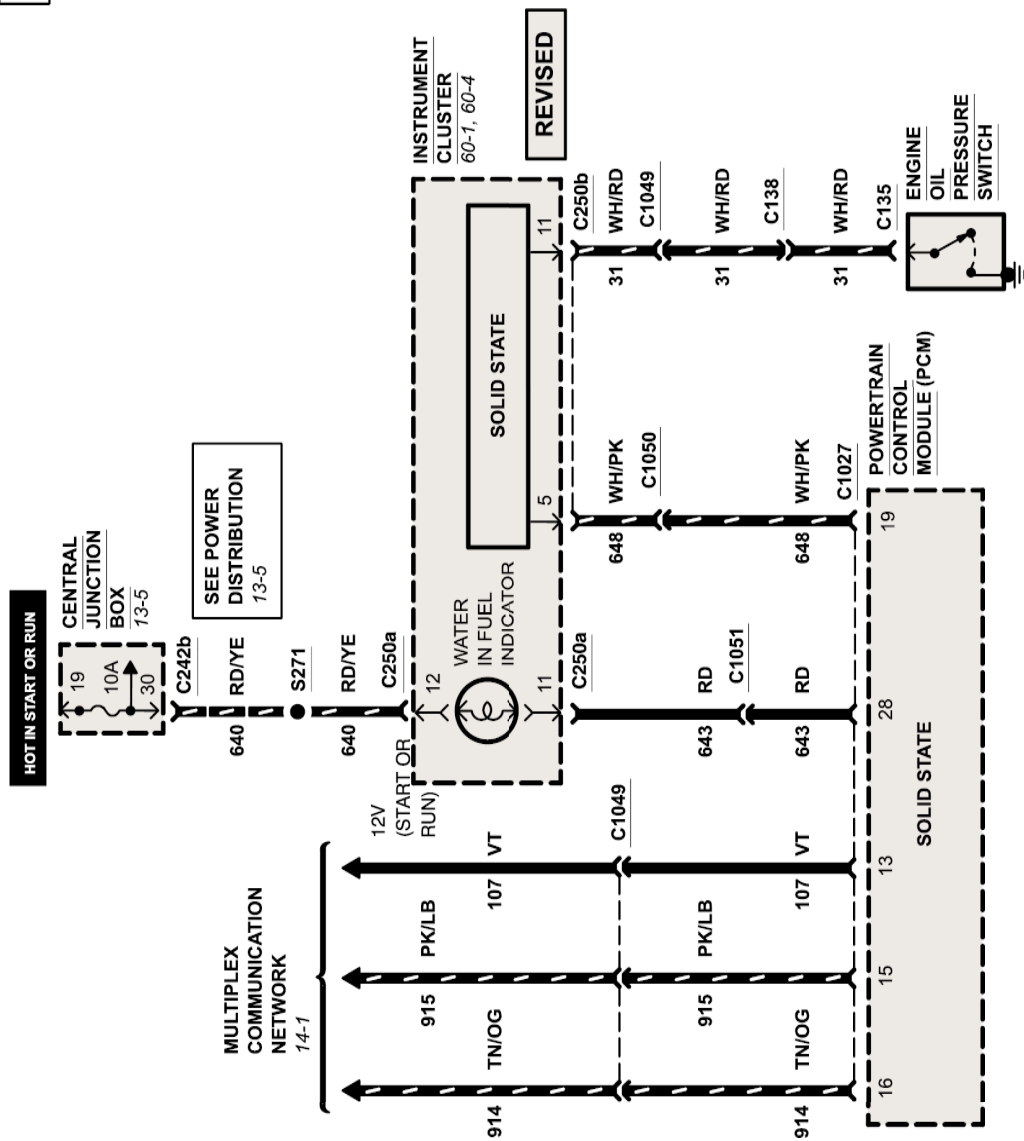


27-13 ENGINE CONTROLS (7.3L DIESEL)

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

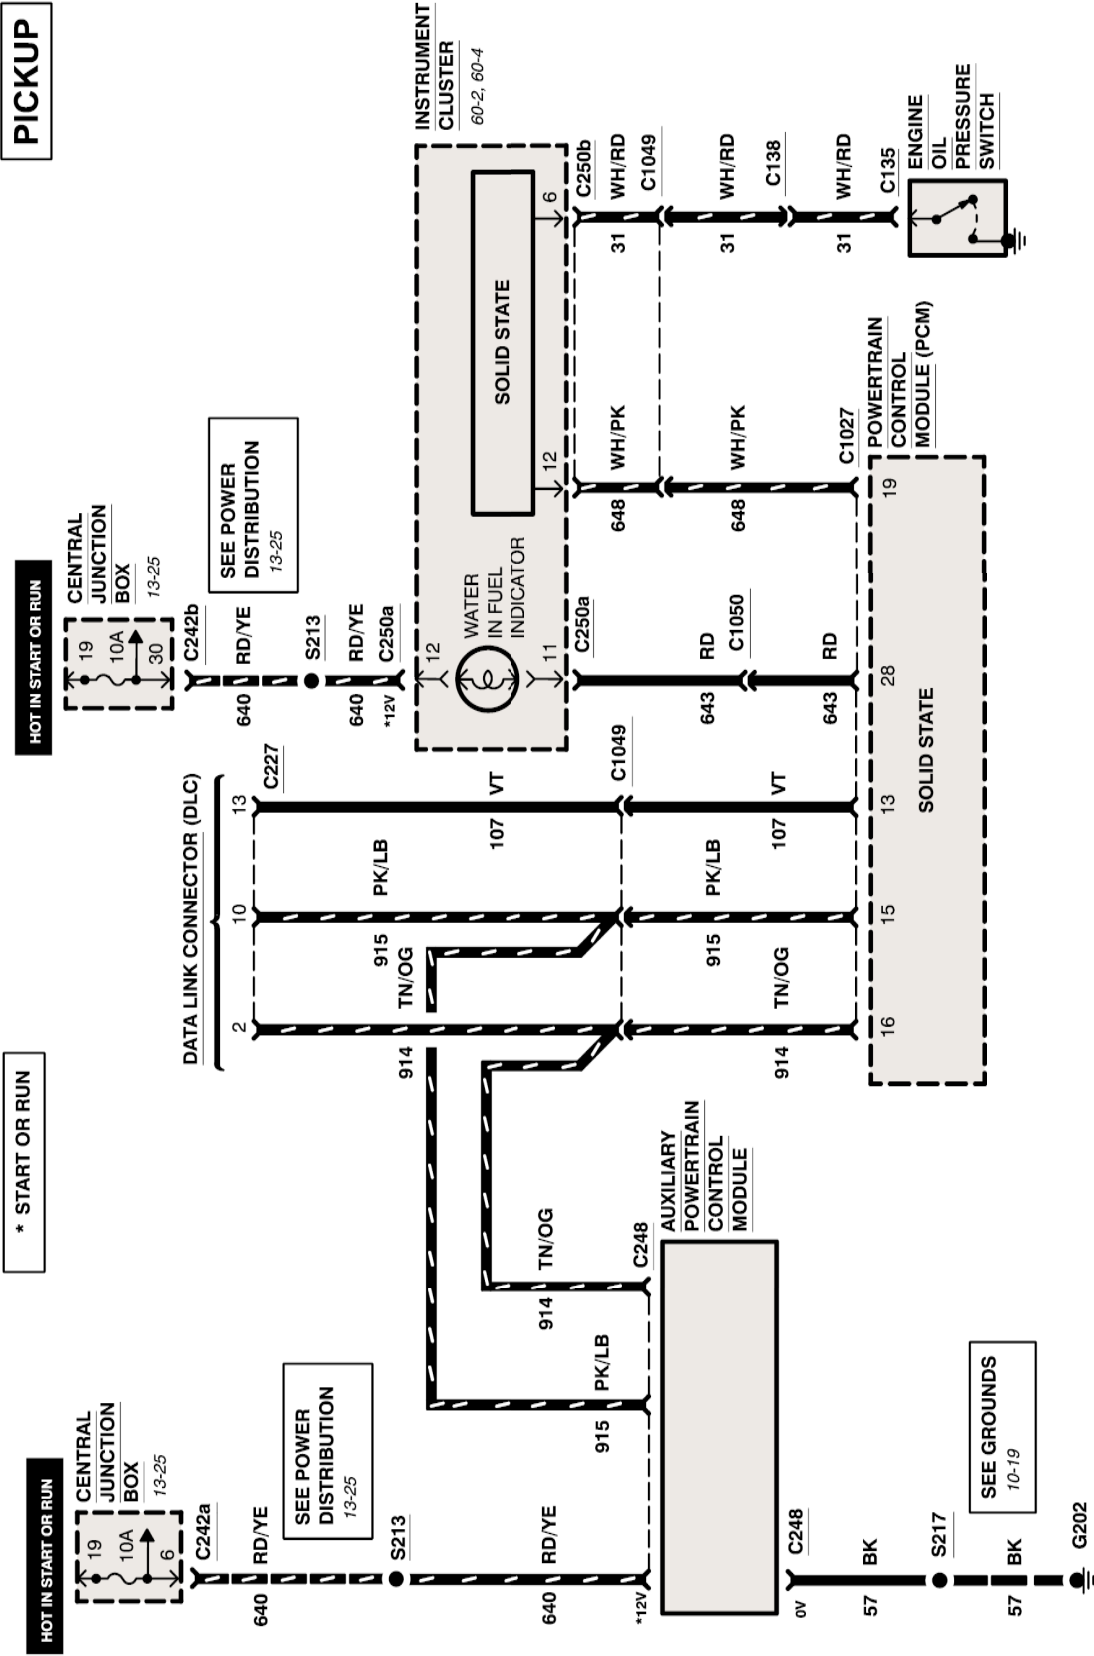

ENGINE CONTROLS (7.3L DIESEL) 27-14

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

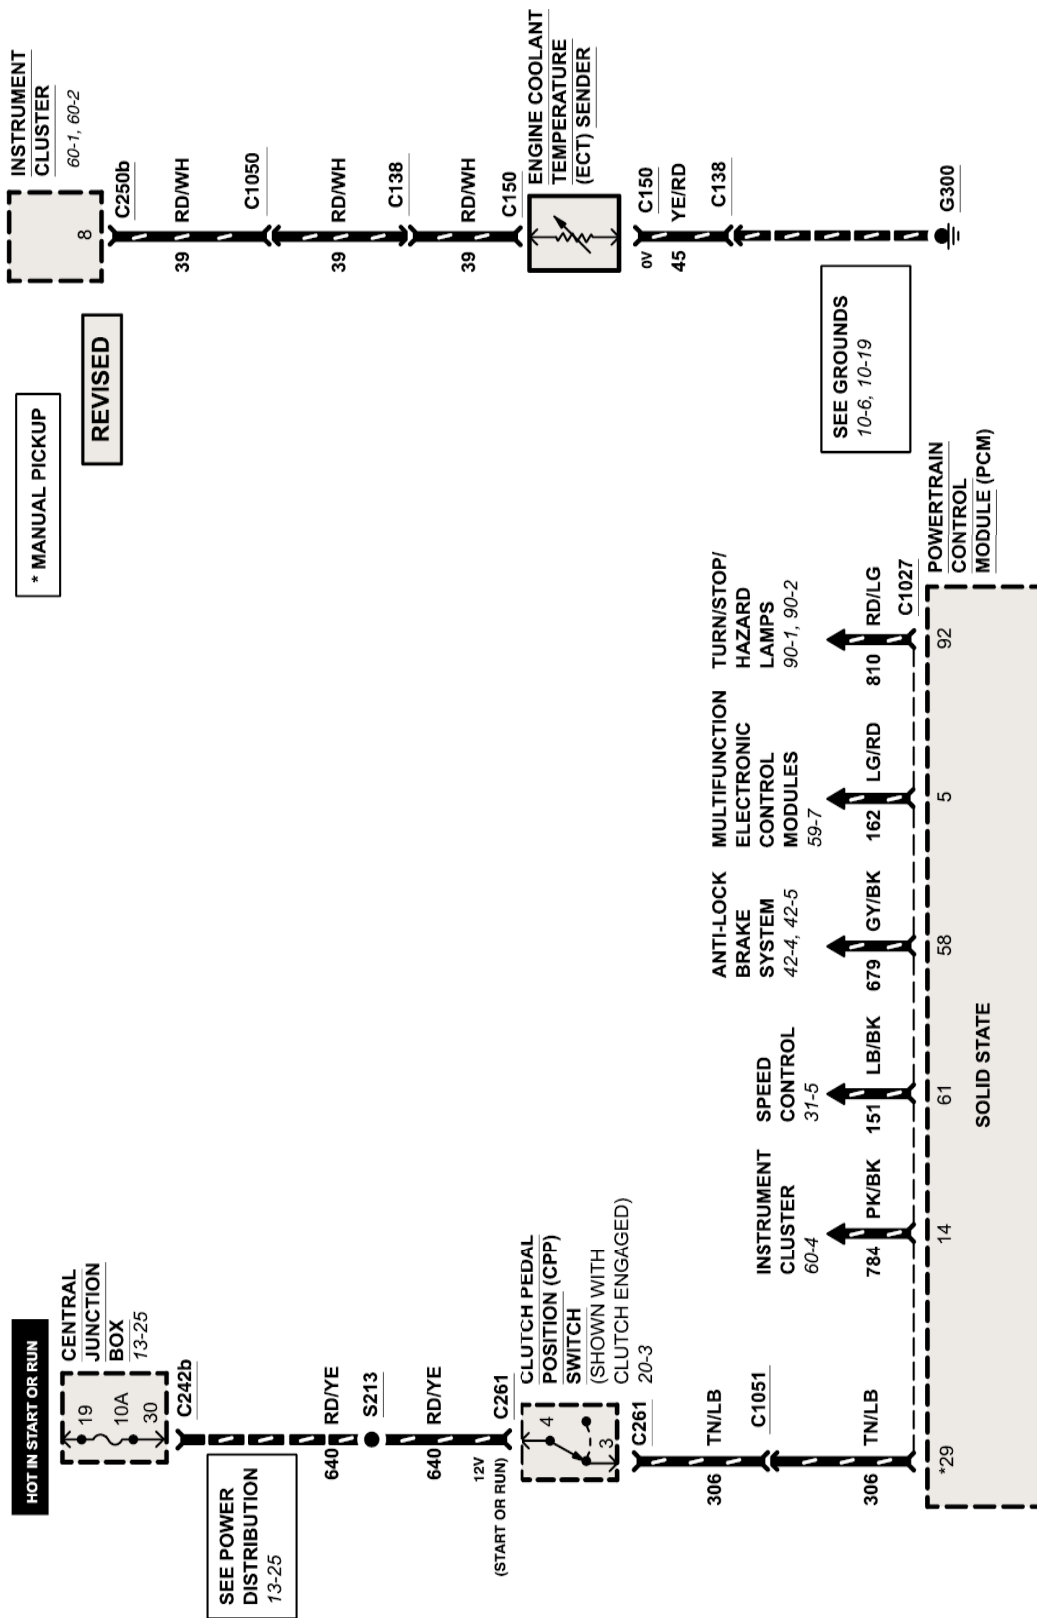


27-15 ENGINE CONTROLS (7.3L DIESEL)

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

CALIFORNIA

REVISED

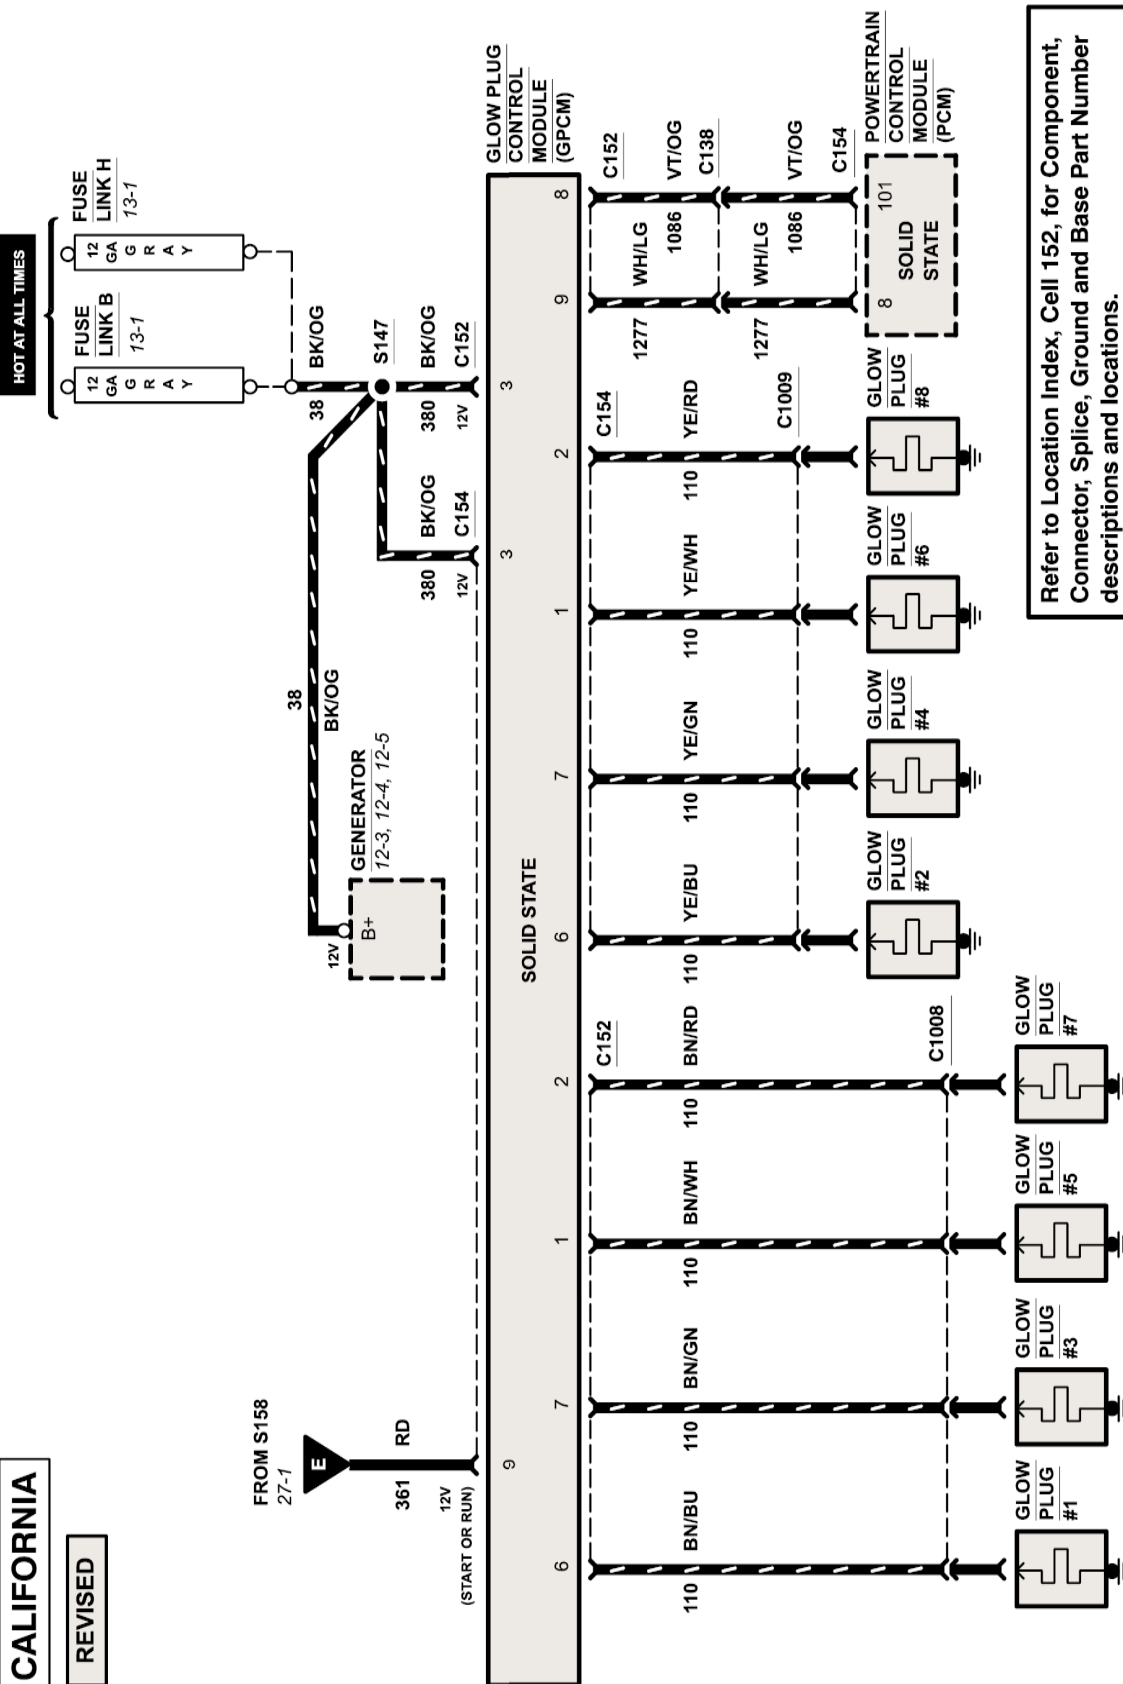

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.