


# 34-1 ELECTRIC SHIFT CONTROL

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

For diagnostic information, refer to Section 308-07A of the Workshop Manual.


\* EXCURSION

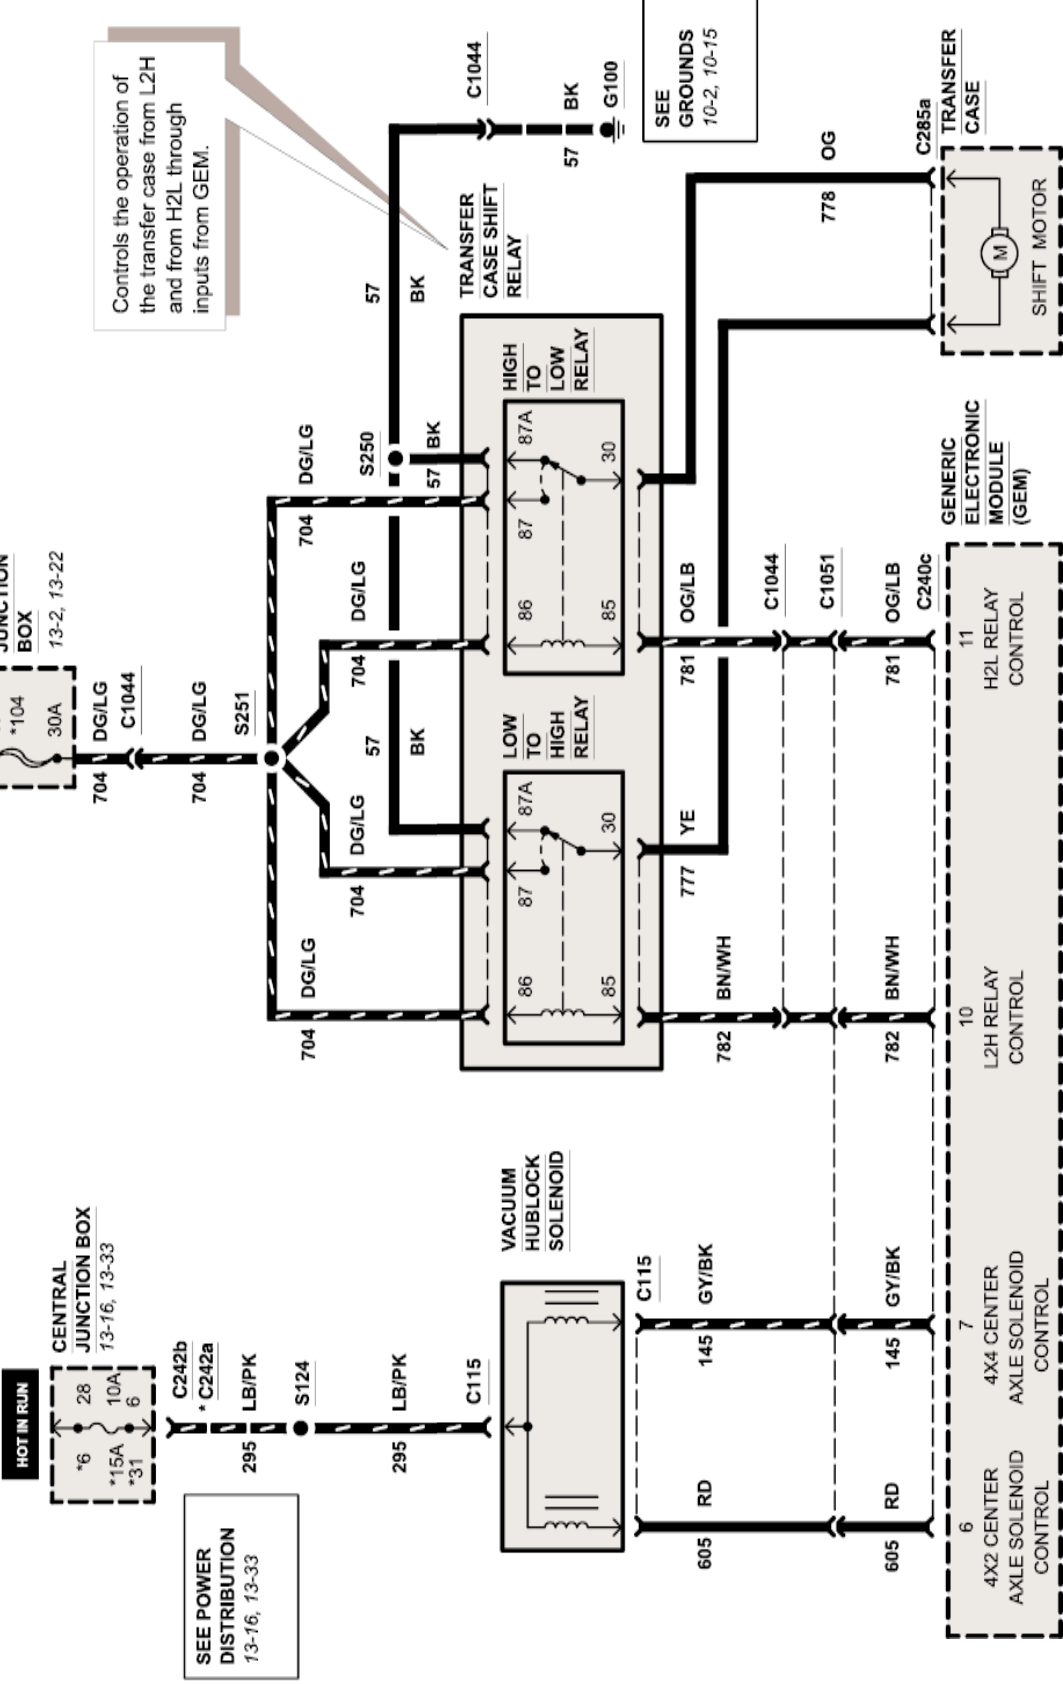

# ELECTRIC SHIFT CONTROL 34-2


2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

## EXCURSION

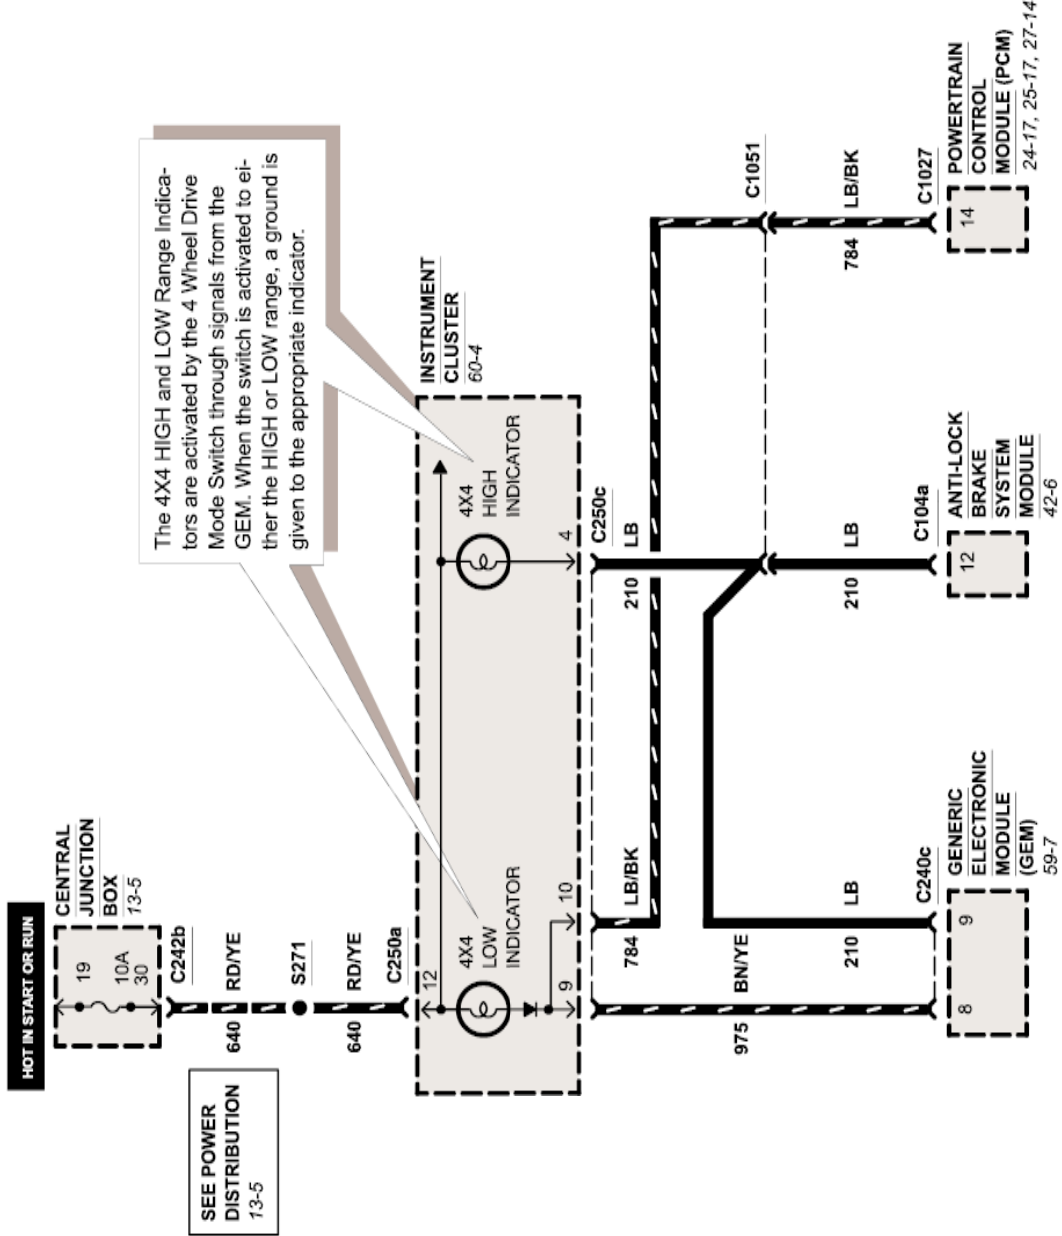


# 34-3 ELECTRIC SHIFT CONTROL

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

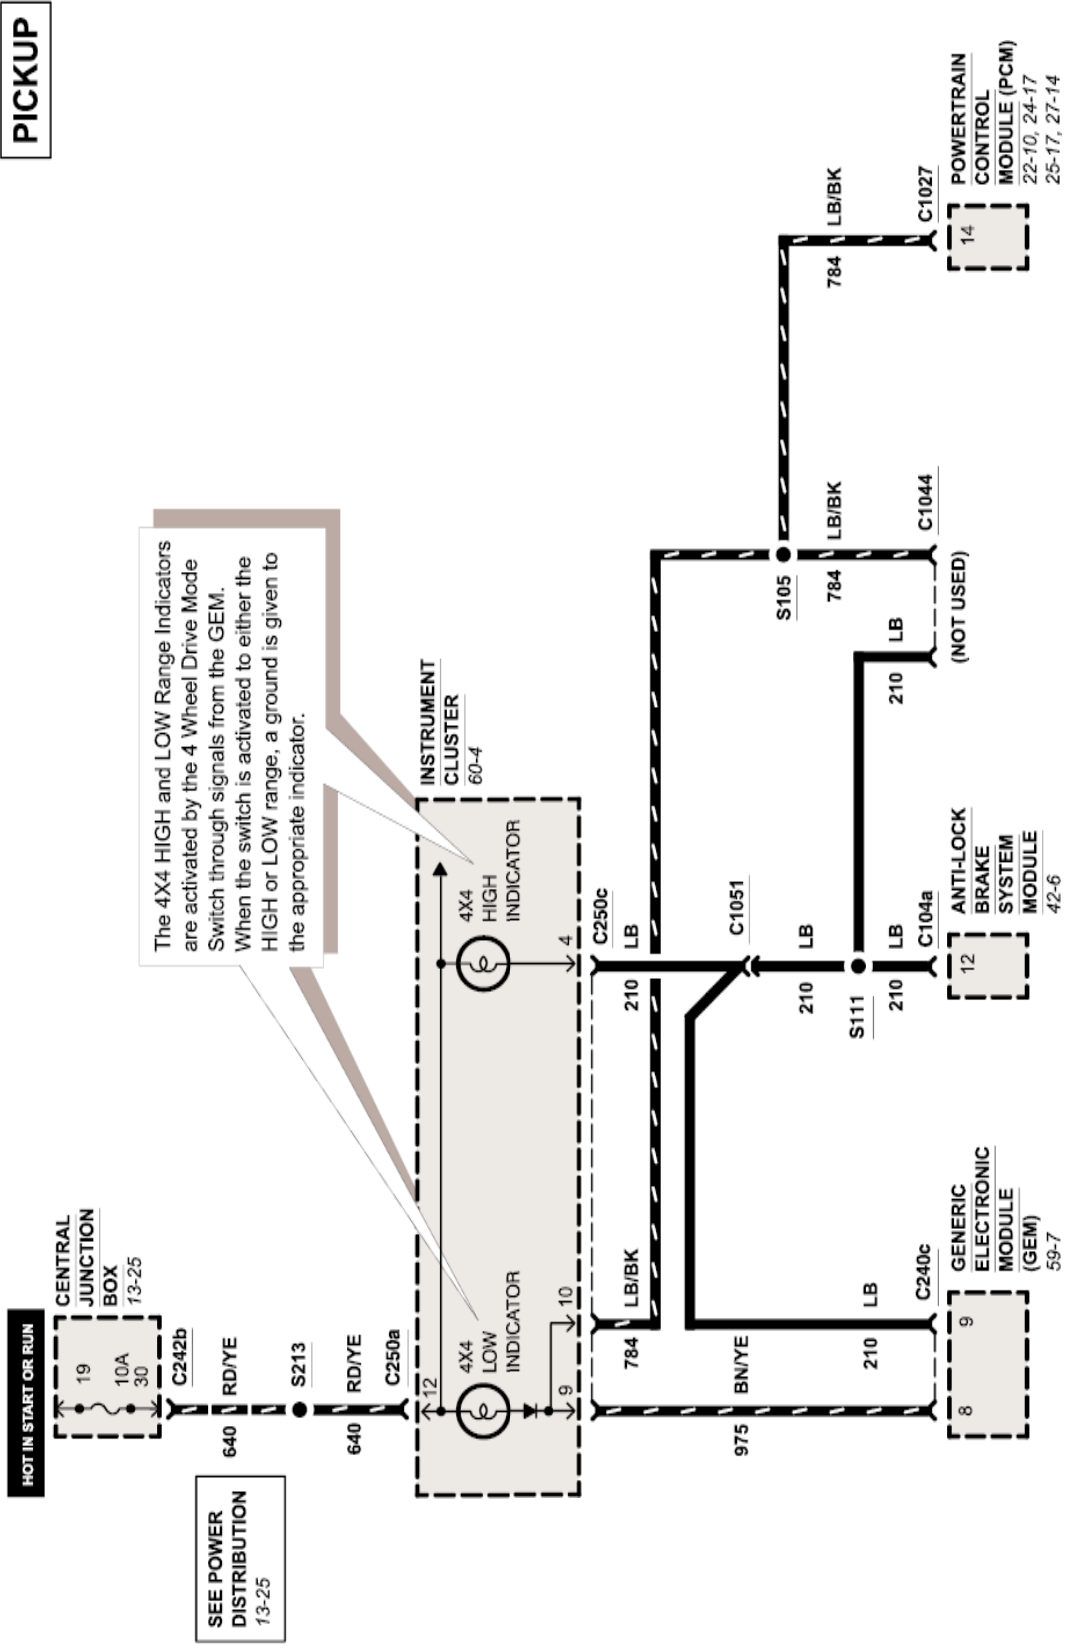

# ELECTRIC SHIFT CONTROL 34-4

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

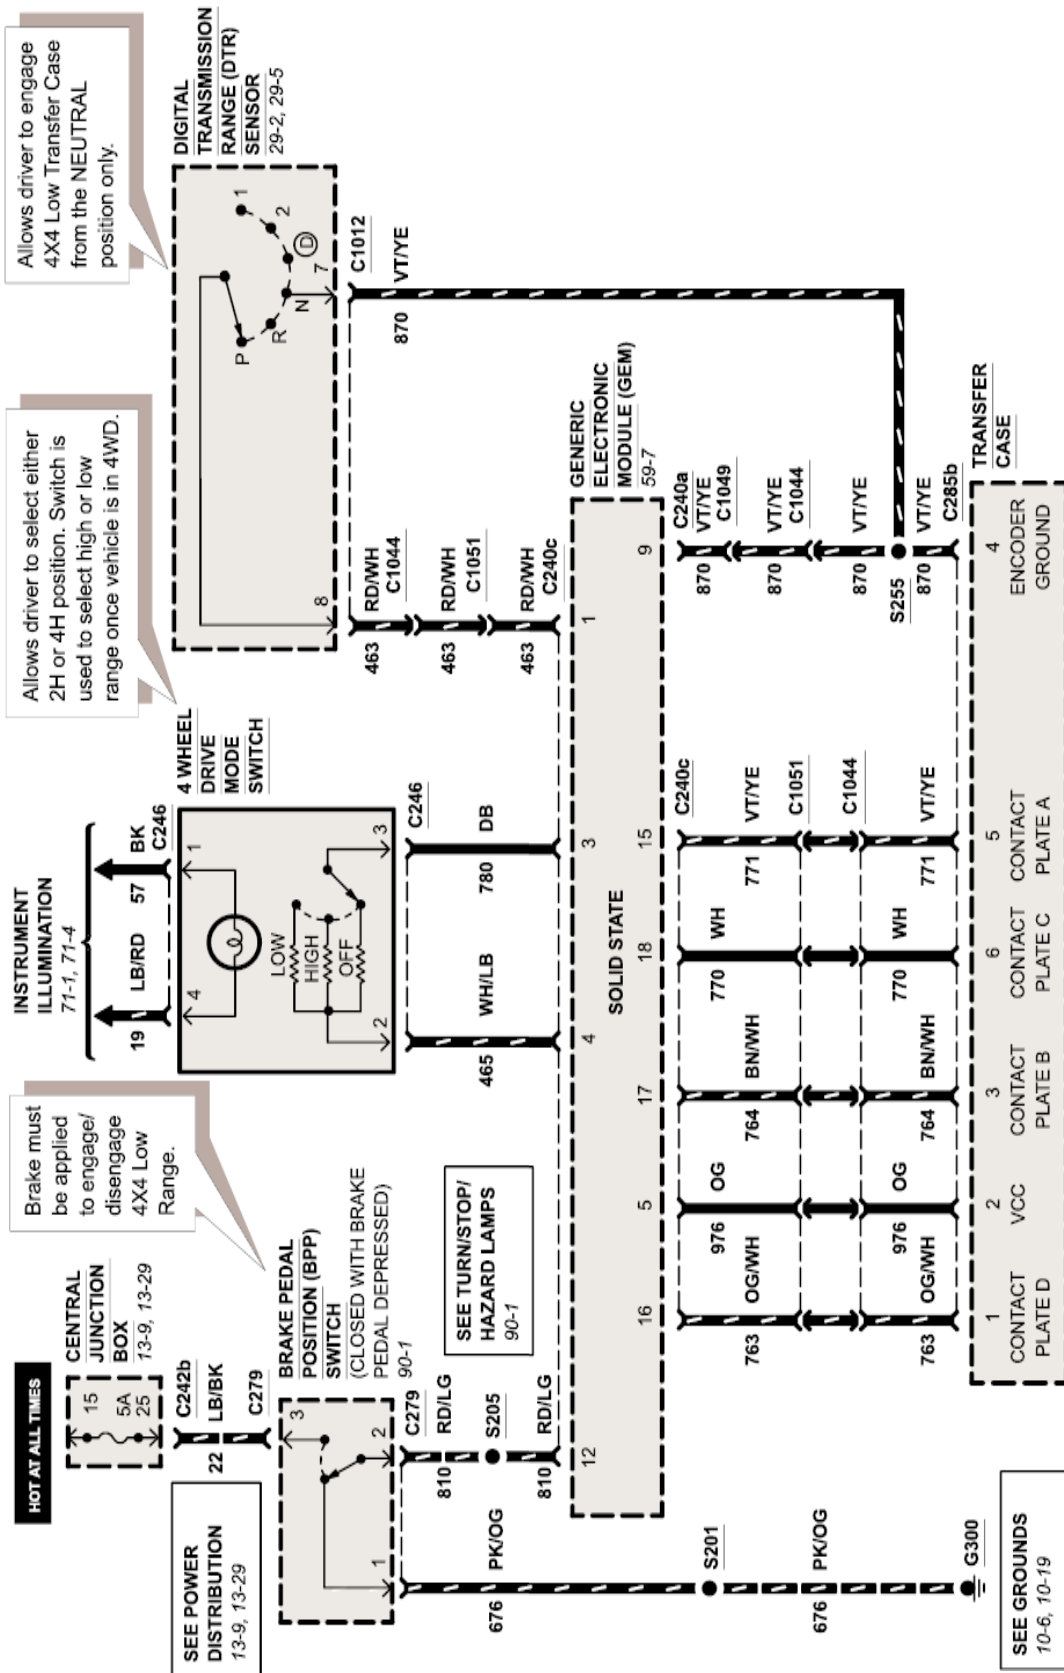

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.

REVISED