


# 66-1 WARNING CHIME

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

For diagnostic information, refer to Section 413-09 of the Workshop Manual.

SEE EXTERIOR LAMPS 92-1

14 BN C273b

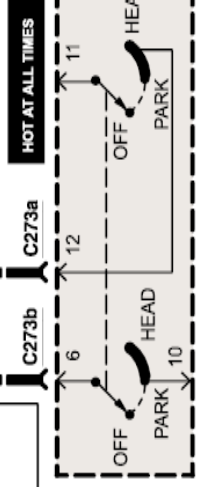


11 OFF HEAD

12 OFF HEAD PARK

13 AIR BAG TONE DRIVER OUTPUT


EXCURSION

\* W/HEATED SEATS

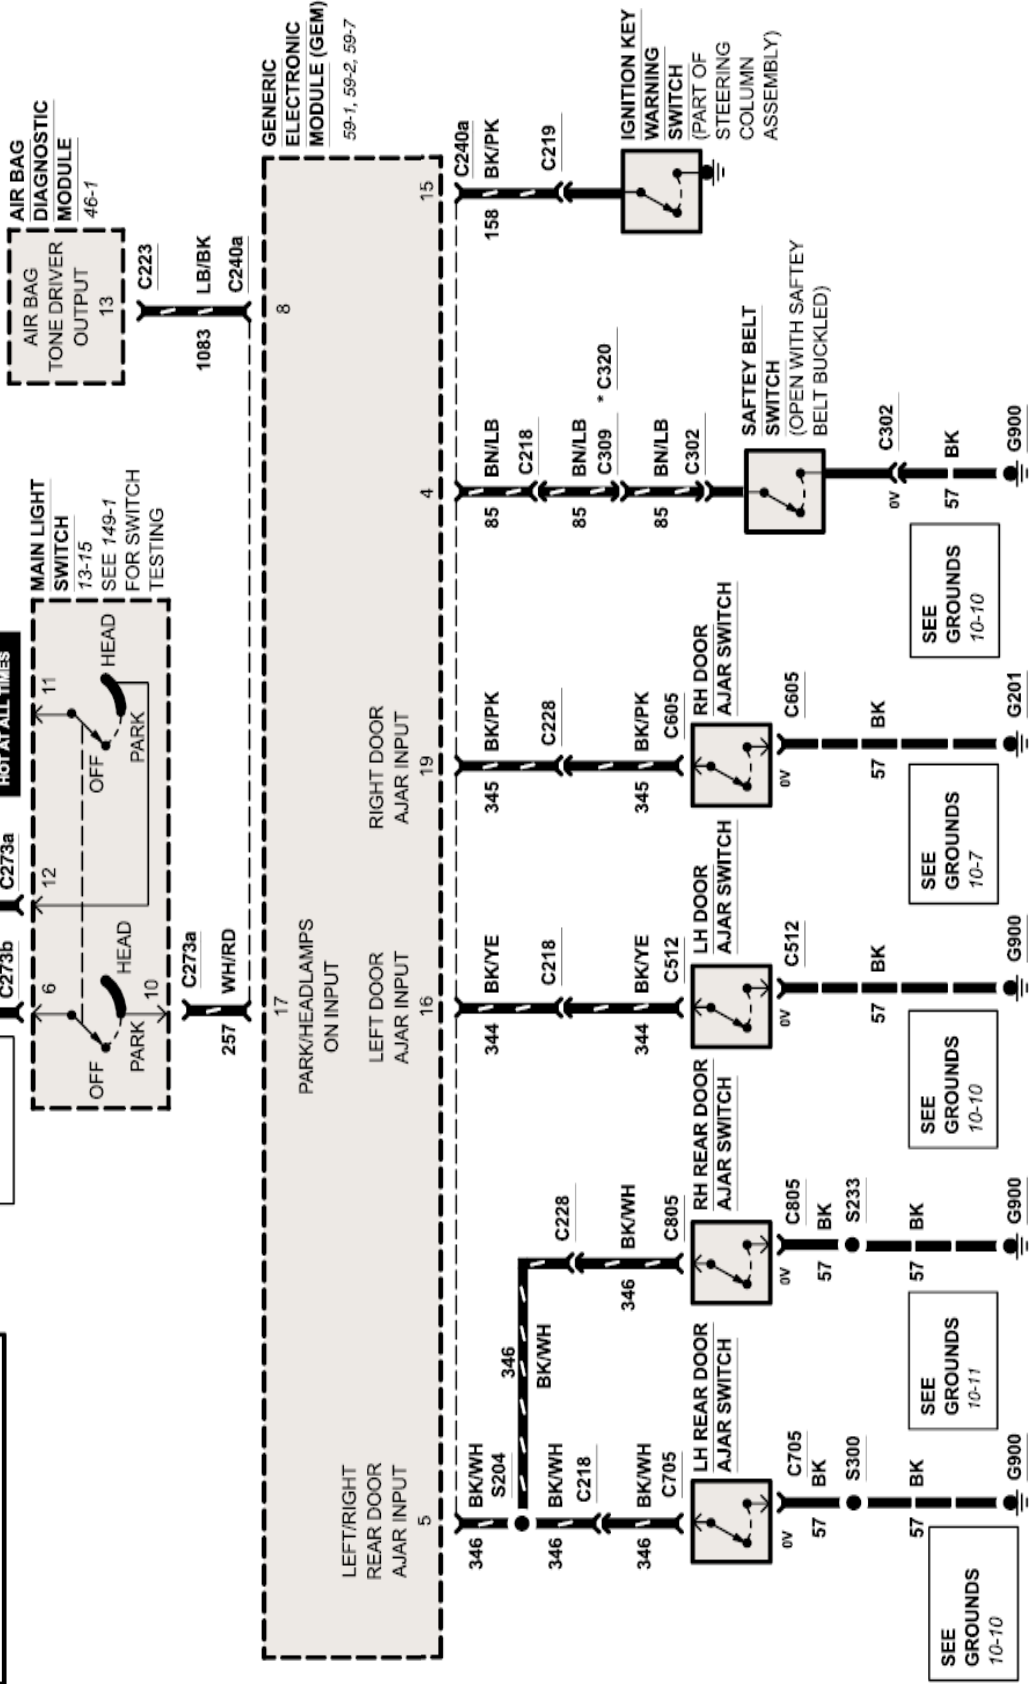

# WARNING CHIME 66-2


2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

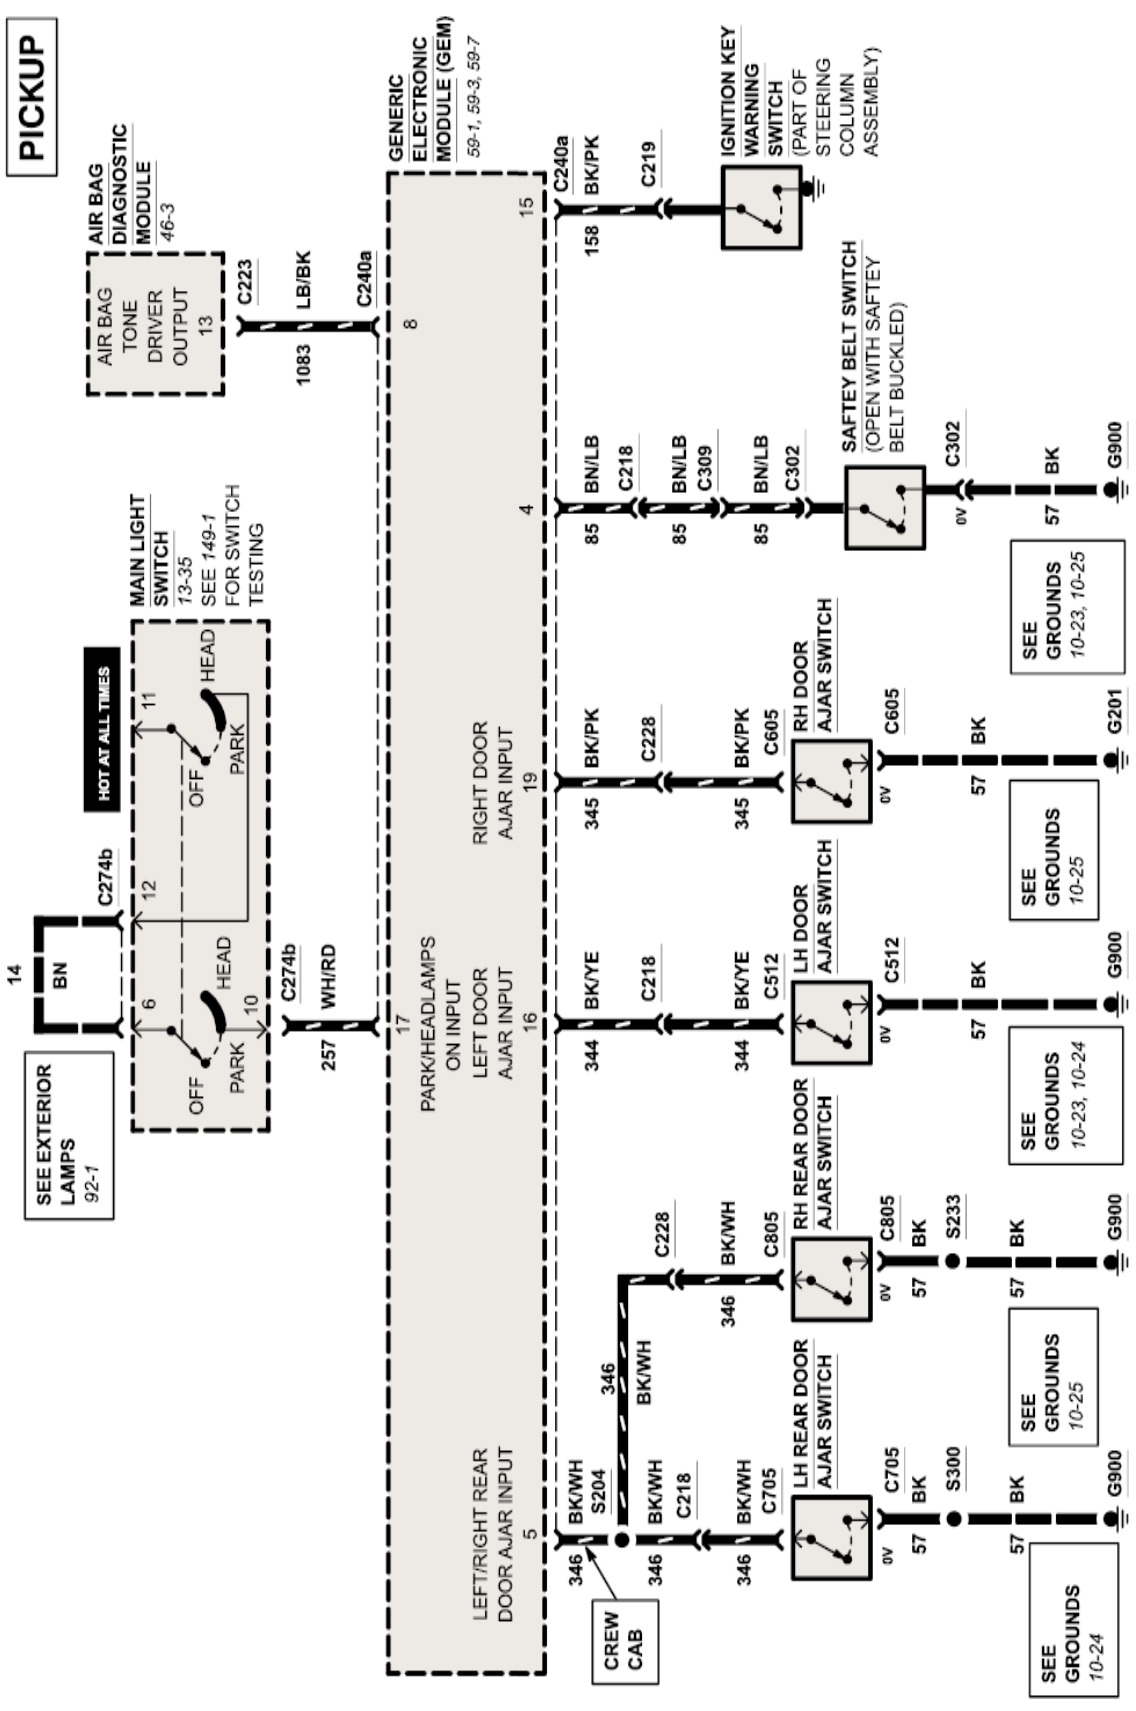

# 66-3 WARNING CHIME

2000 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

## EXCURSION

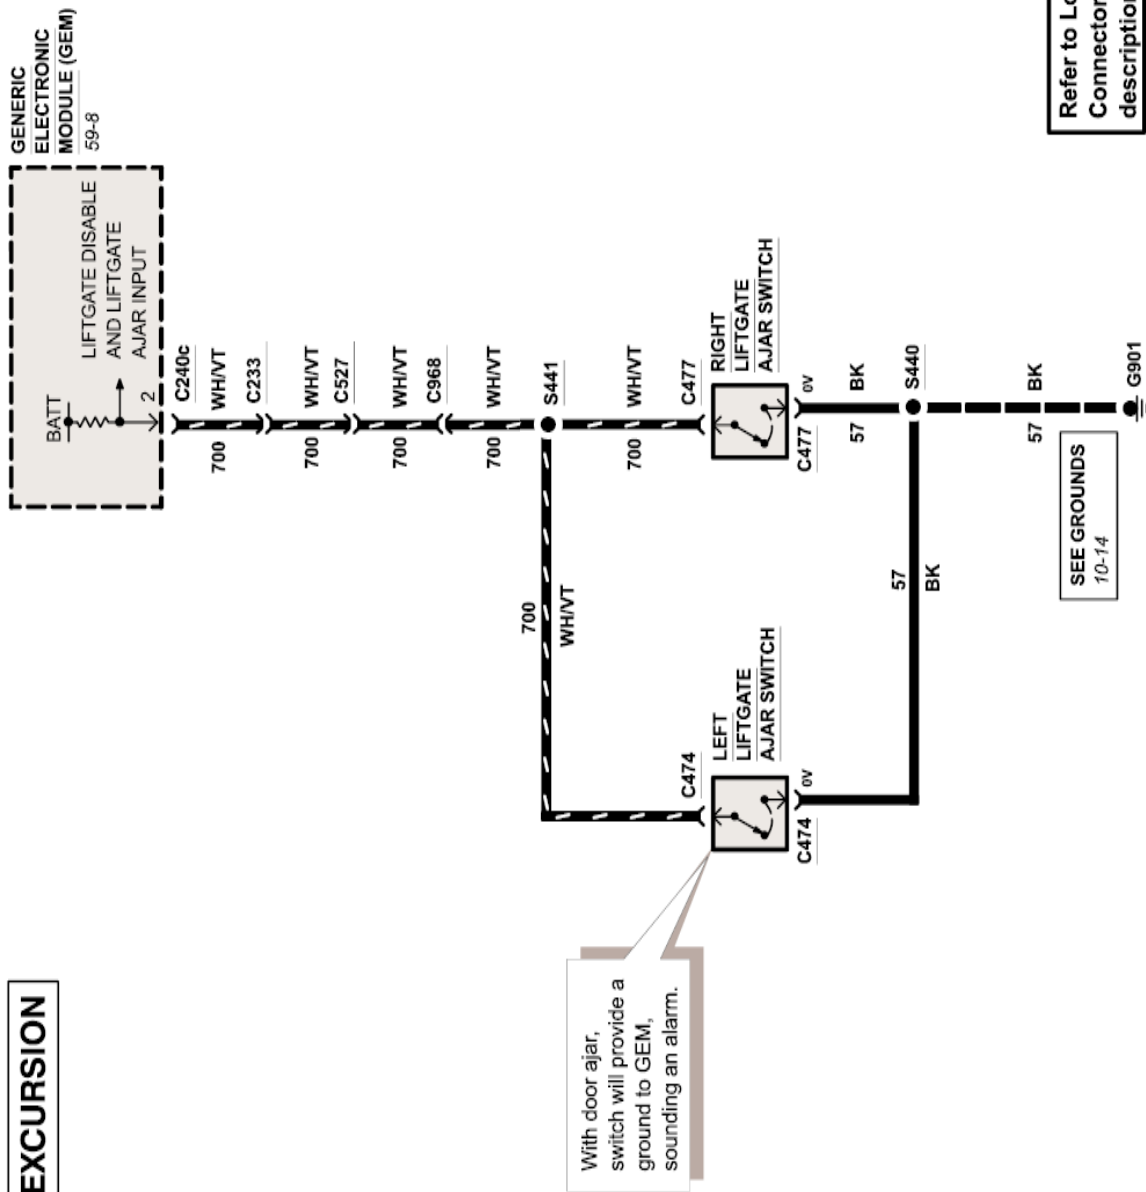

With door ajar, switch will provide a ground to GEM, sounding an alarm.

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.

SEE GROUNDS  
10-14