
AL: Symptom Chart 11

[← AL: Introduction](#)**AL1 CHECK TCIL**

Is TCIL flashing?

Yes	No
GO to AL3 .	GO to AL2 .

AL2 TOGGLE TCIL

- Toggle TCIL by pushing TCS switch several times.

Does TCIL toggle on and off?

Yes	No
TCIL is OK.	GO to AL3 .

AL3 OBSERVE CHECK ENGINE LIGHT

Is Check Engine Light on?

Yes	No
GO to Pinpoint Test AH .	GO to AL4 .

AL4 RUN QUICK TEST

- Go to [Section 2](#) , Diagnostic Methods. Perform Quick Test Operation.

Is a fault indicated?

Yes	No
GO to appropriate pinpoint test.	GO to Pinpoint Test AH .
