


27-1 ENGINE CONTROLS (7.3L DIESEL)

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

For diagnostic information, refer to the Powertrain Control/Emissions Diagnosis Manual.


EXCURSION

* START OR RUN

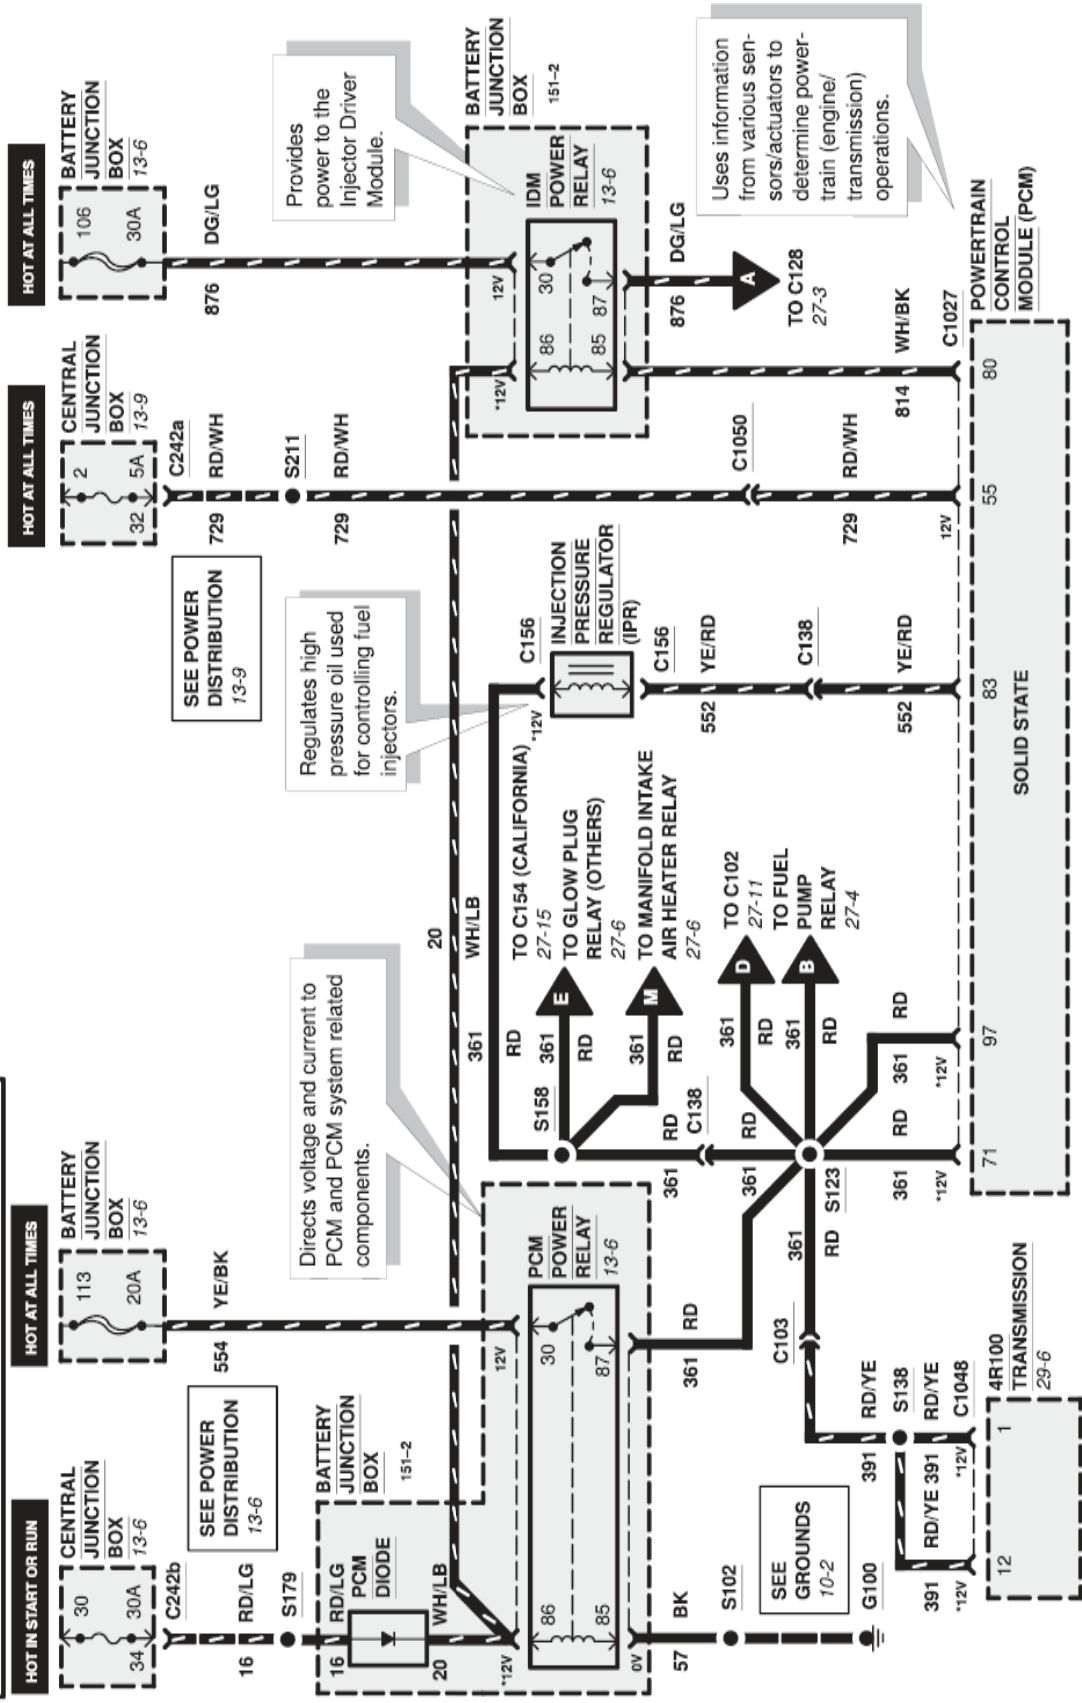


ENGINE CONTROLS (7.3L DIESEL) 27-2

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

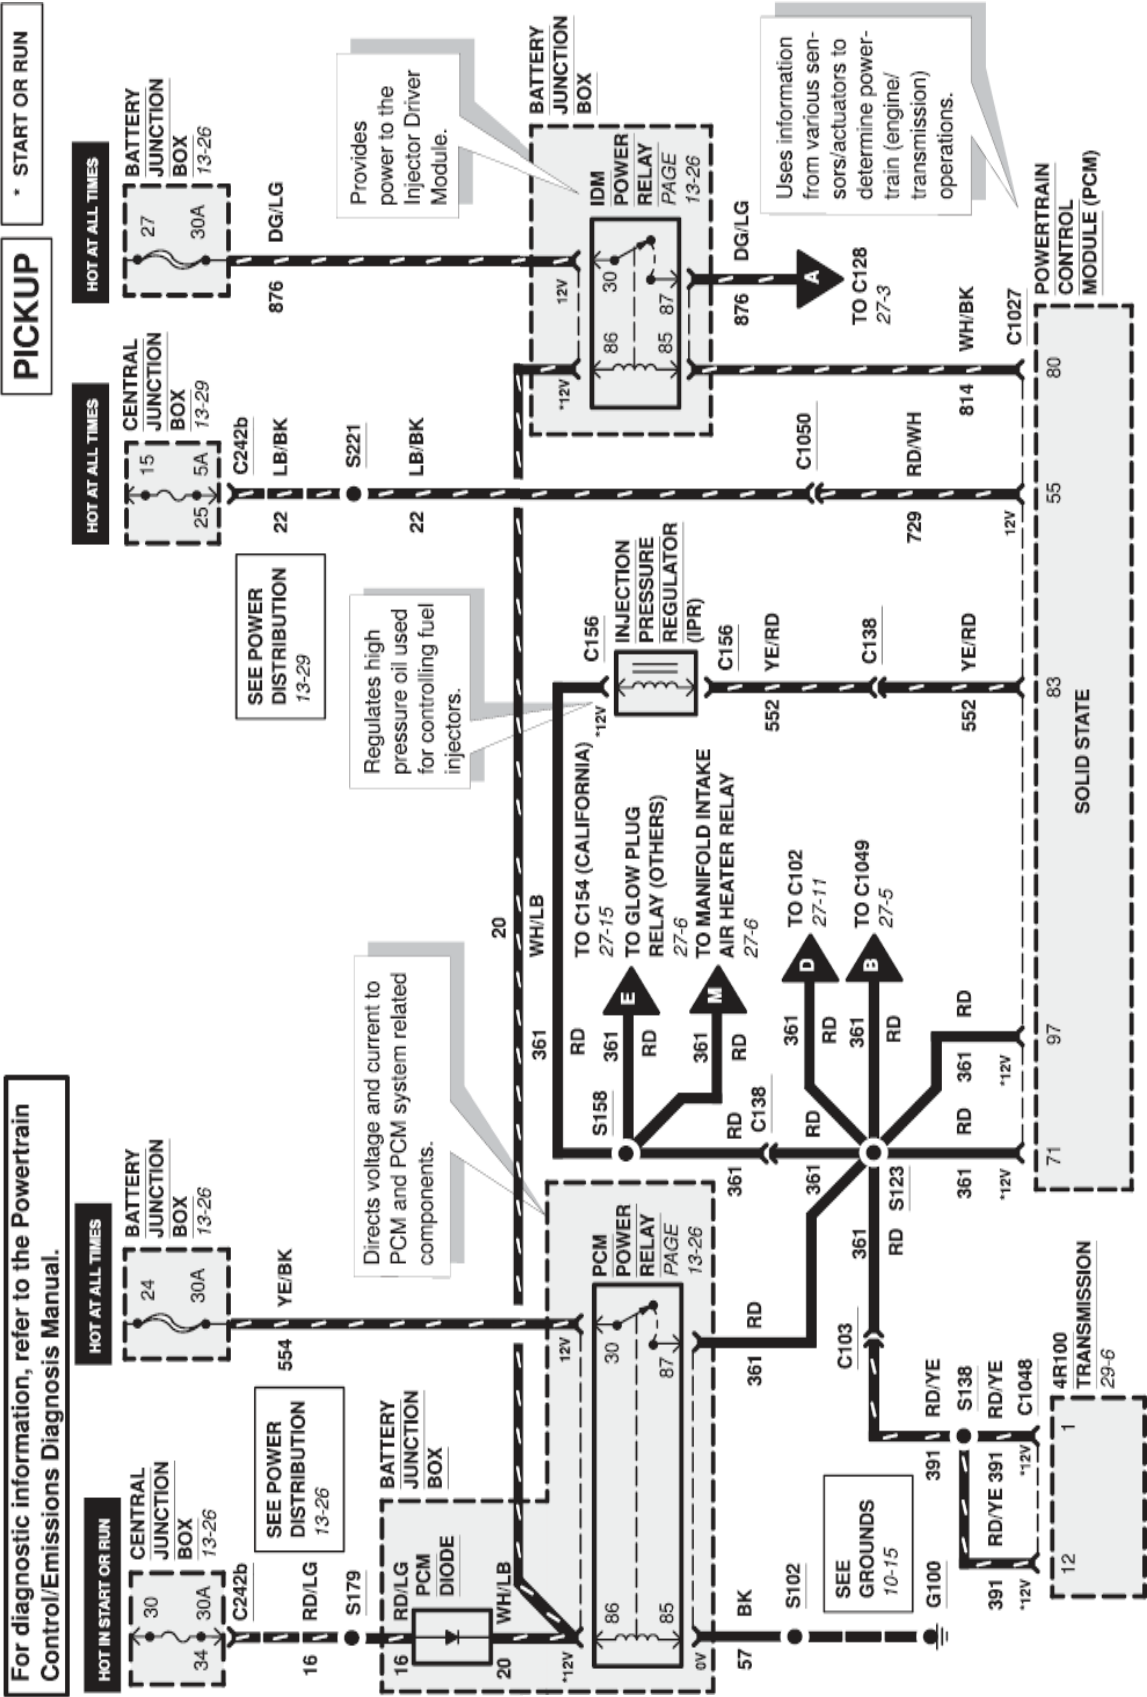


27-3 ENGINE CONTROLS (7.3L DIESEL)

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

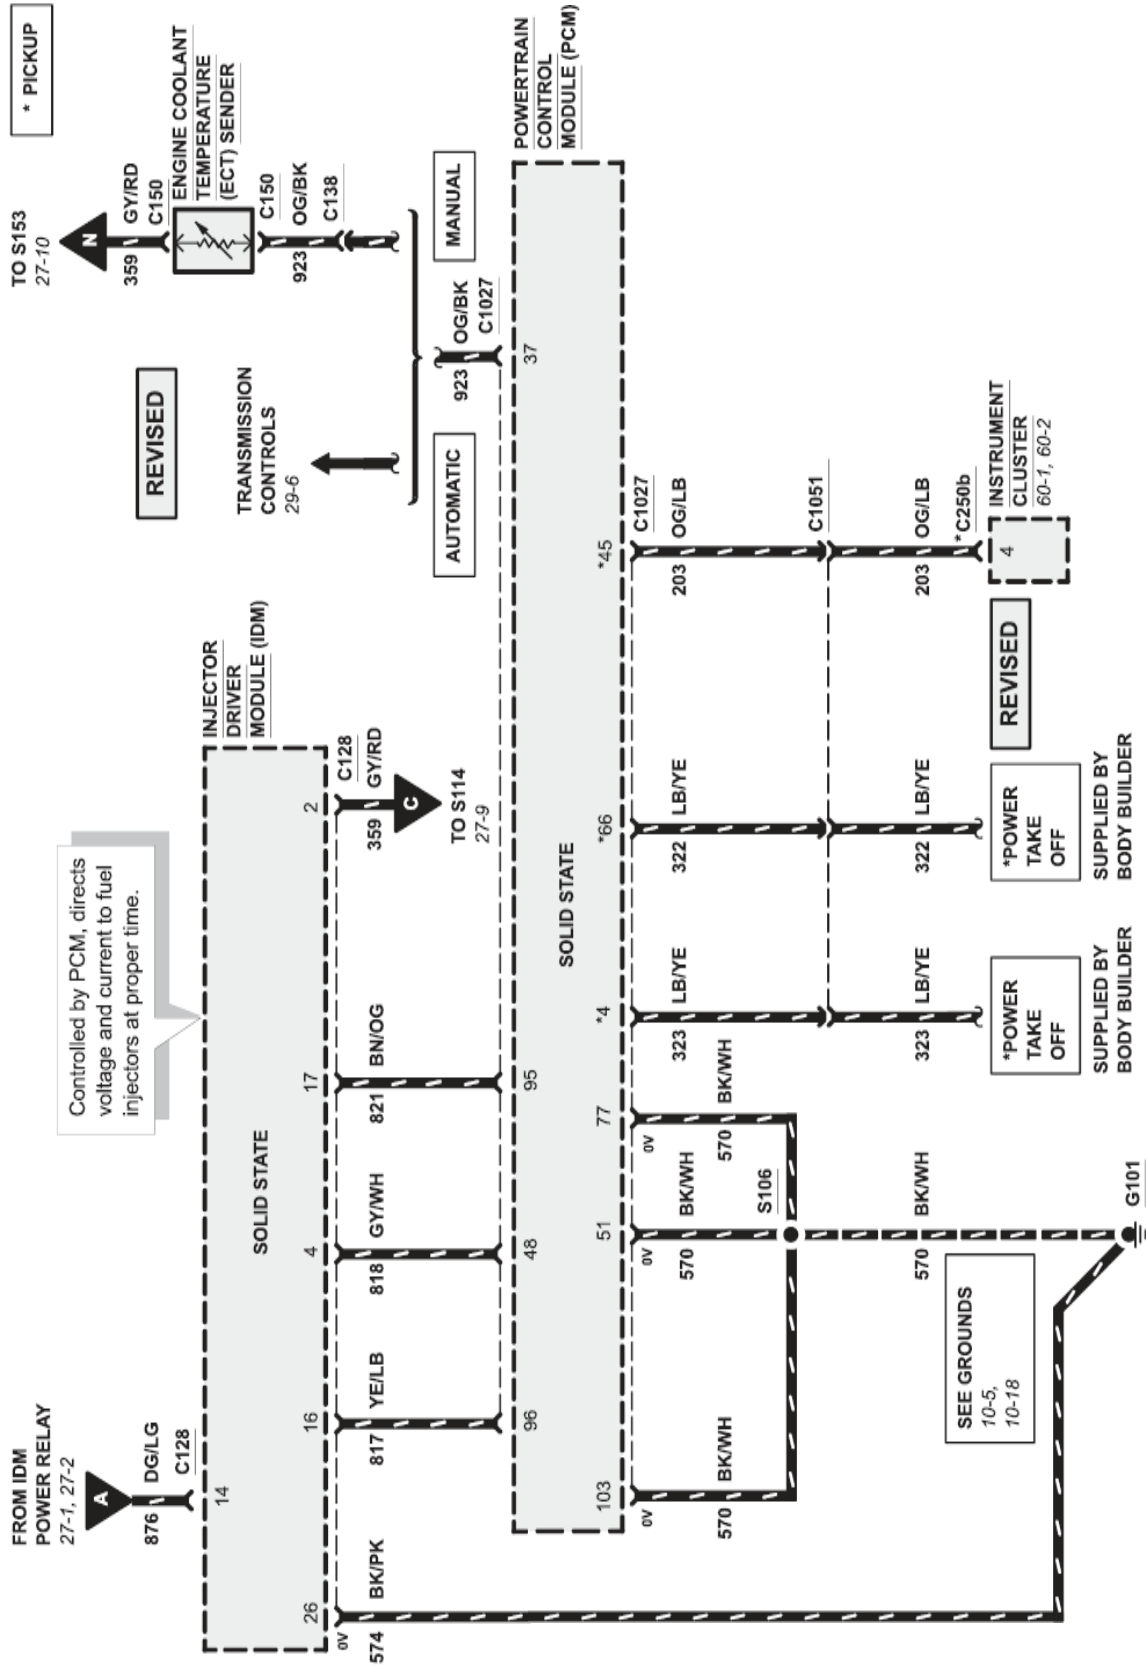


ENGINE CONTROLS (7.3L DIESEL) 27-4

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

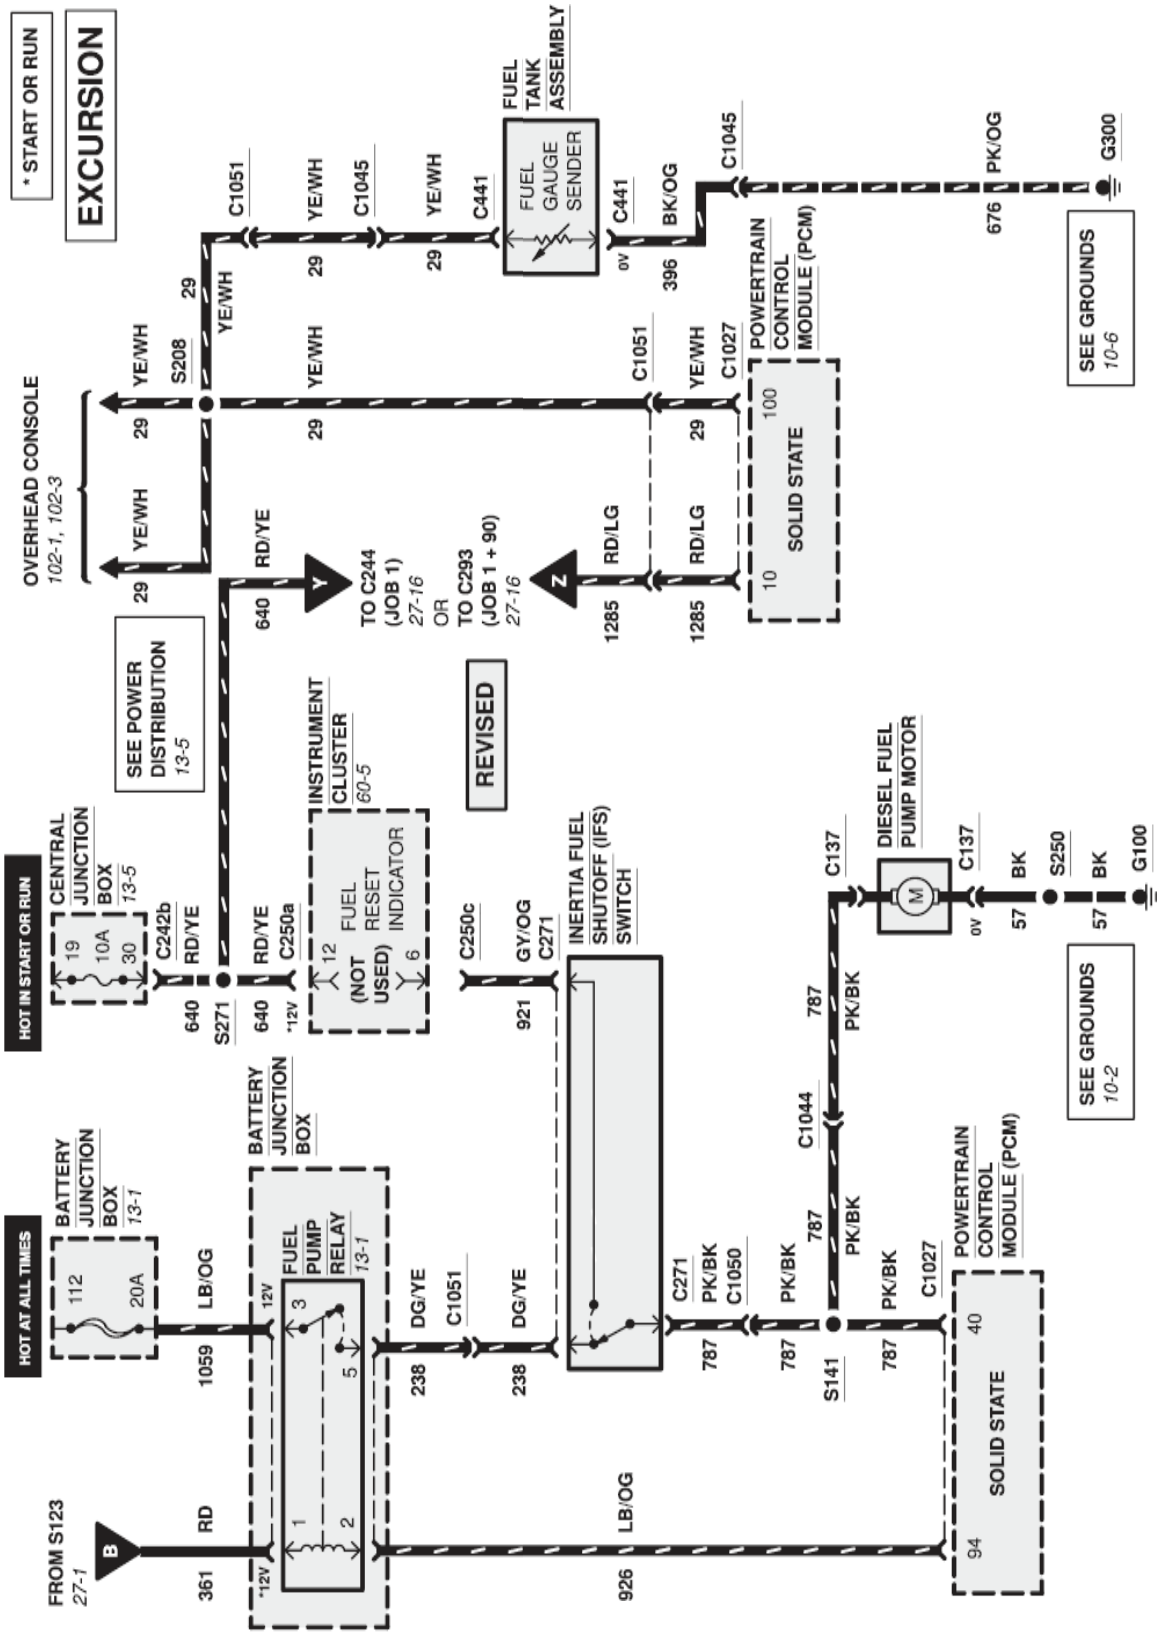


27-5 ENGINE CONTROLS (7.3L DIESEL)

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

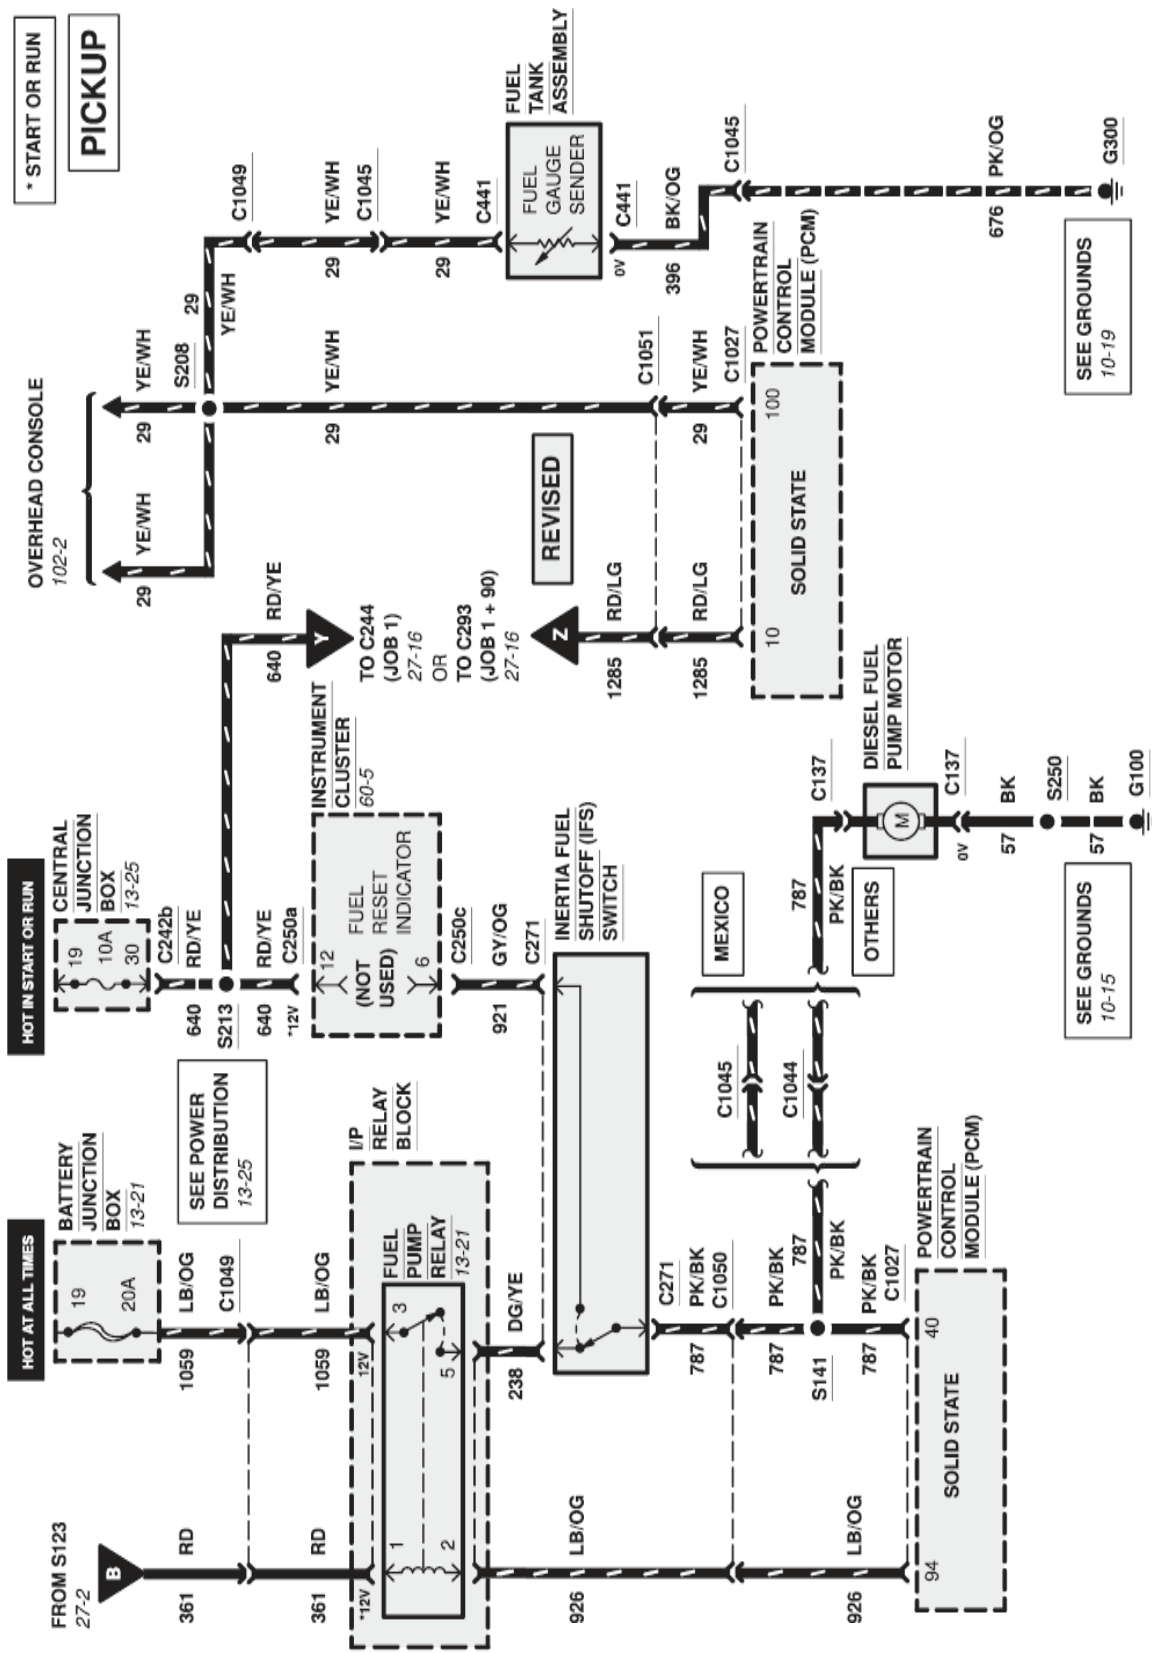


ENGINE CONTROLS (7.3L DIESEL) 27-6

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

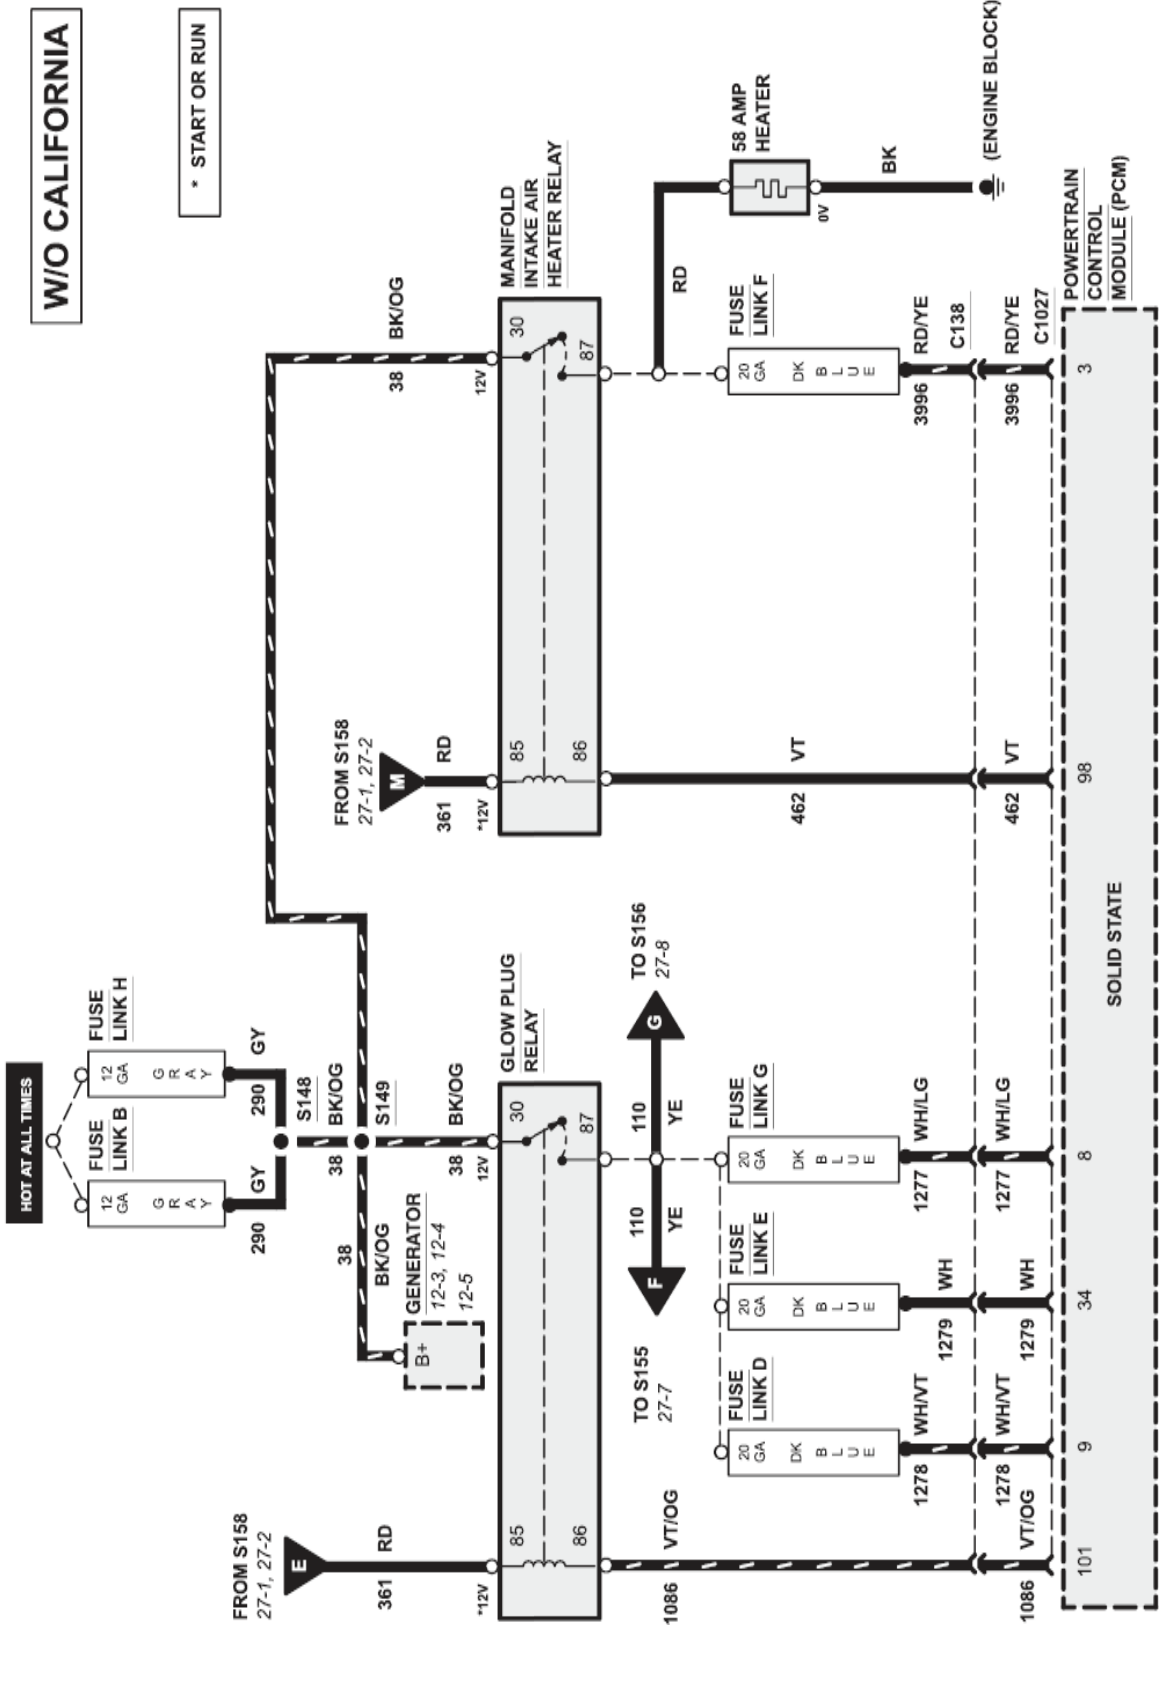

27-7 ENGINE CONTROLS (7.3L DIESEL)


2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

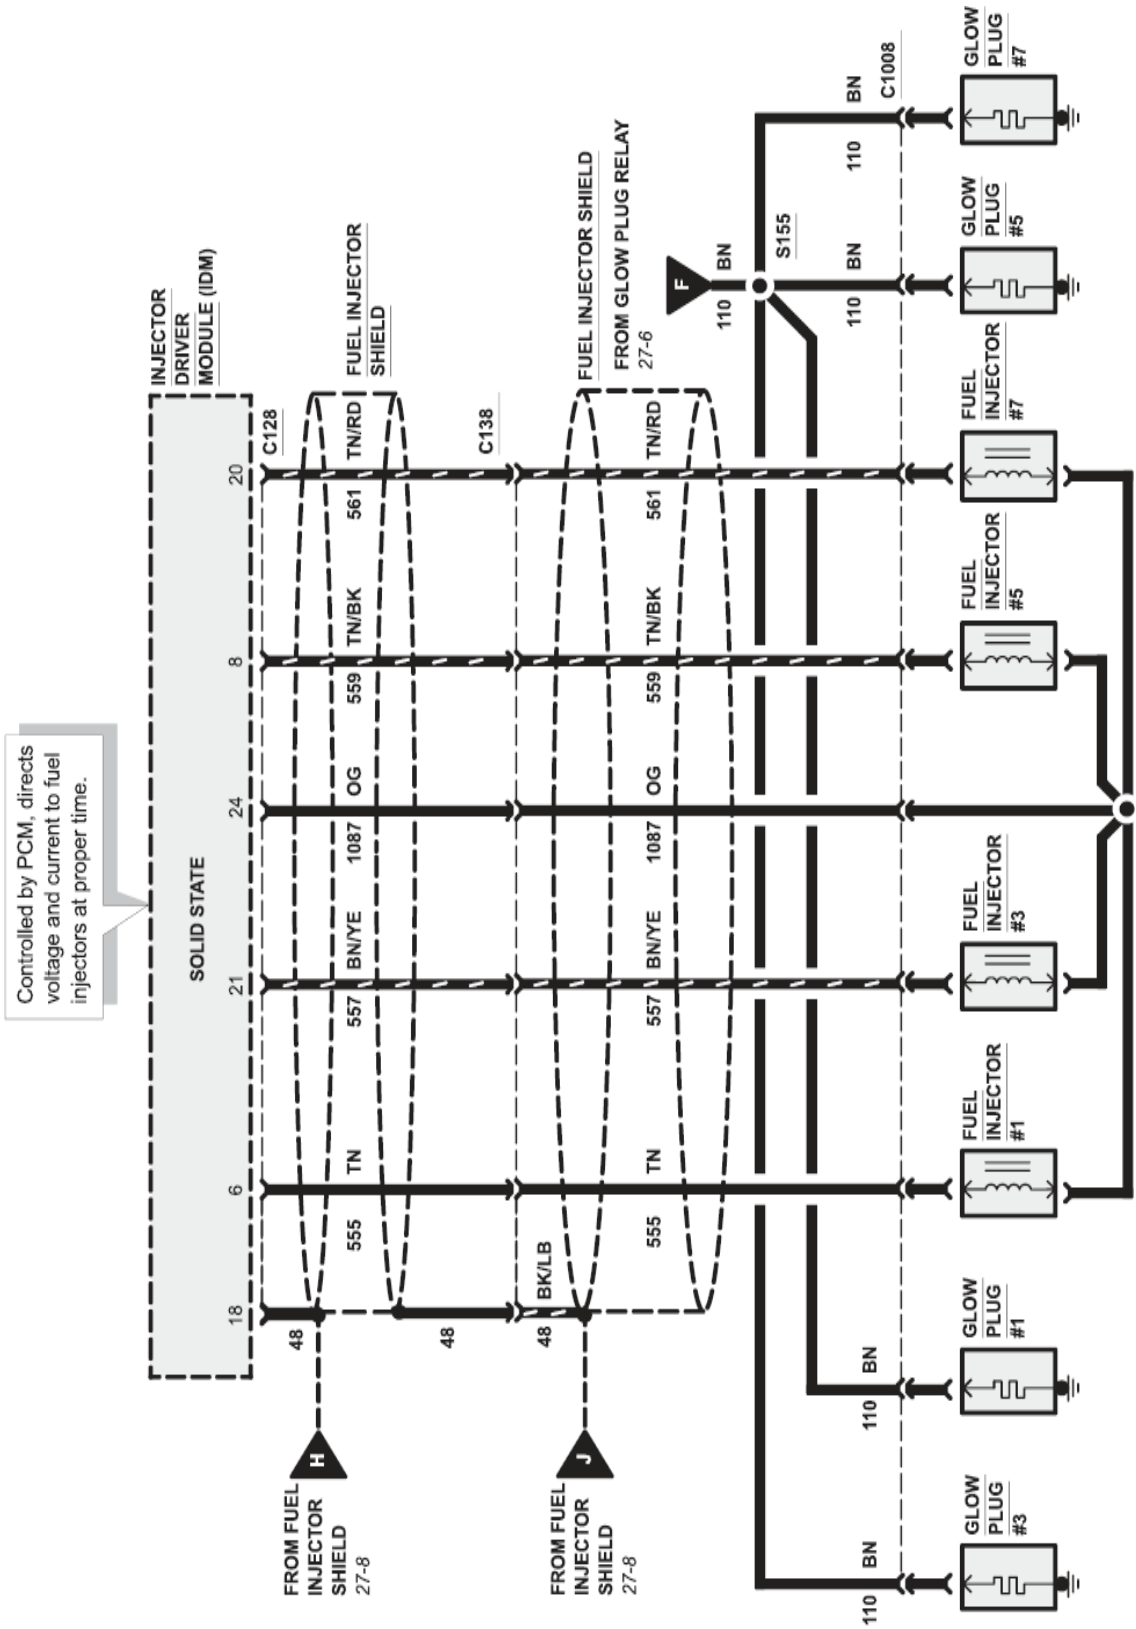

ENGINE CONTROLS (7.3L DIESEL) 27-8


2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

Controlled by PCM, directs voltage and current to fuel injectors at proper time.

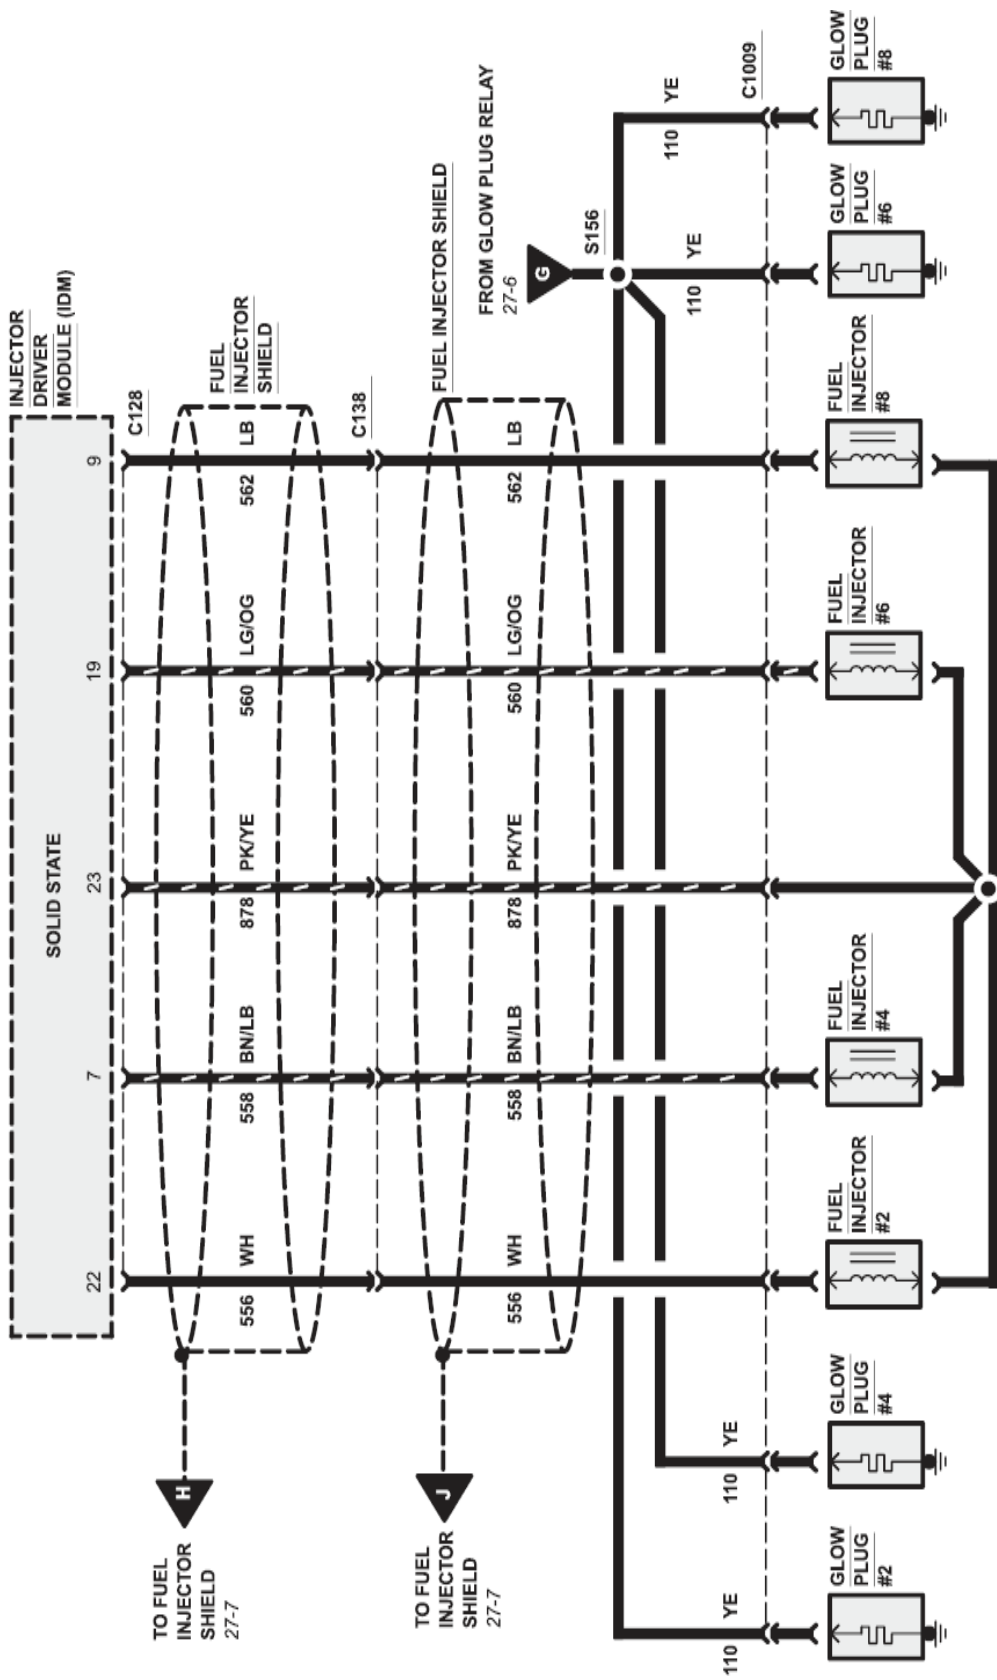


27-9 ENGINE CONTROLS (7.3L DIESEL)

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

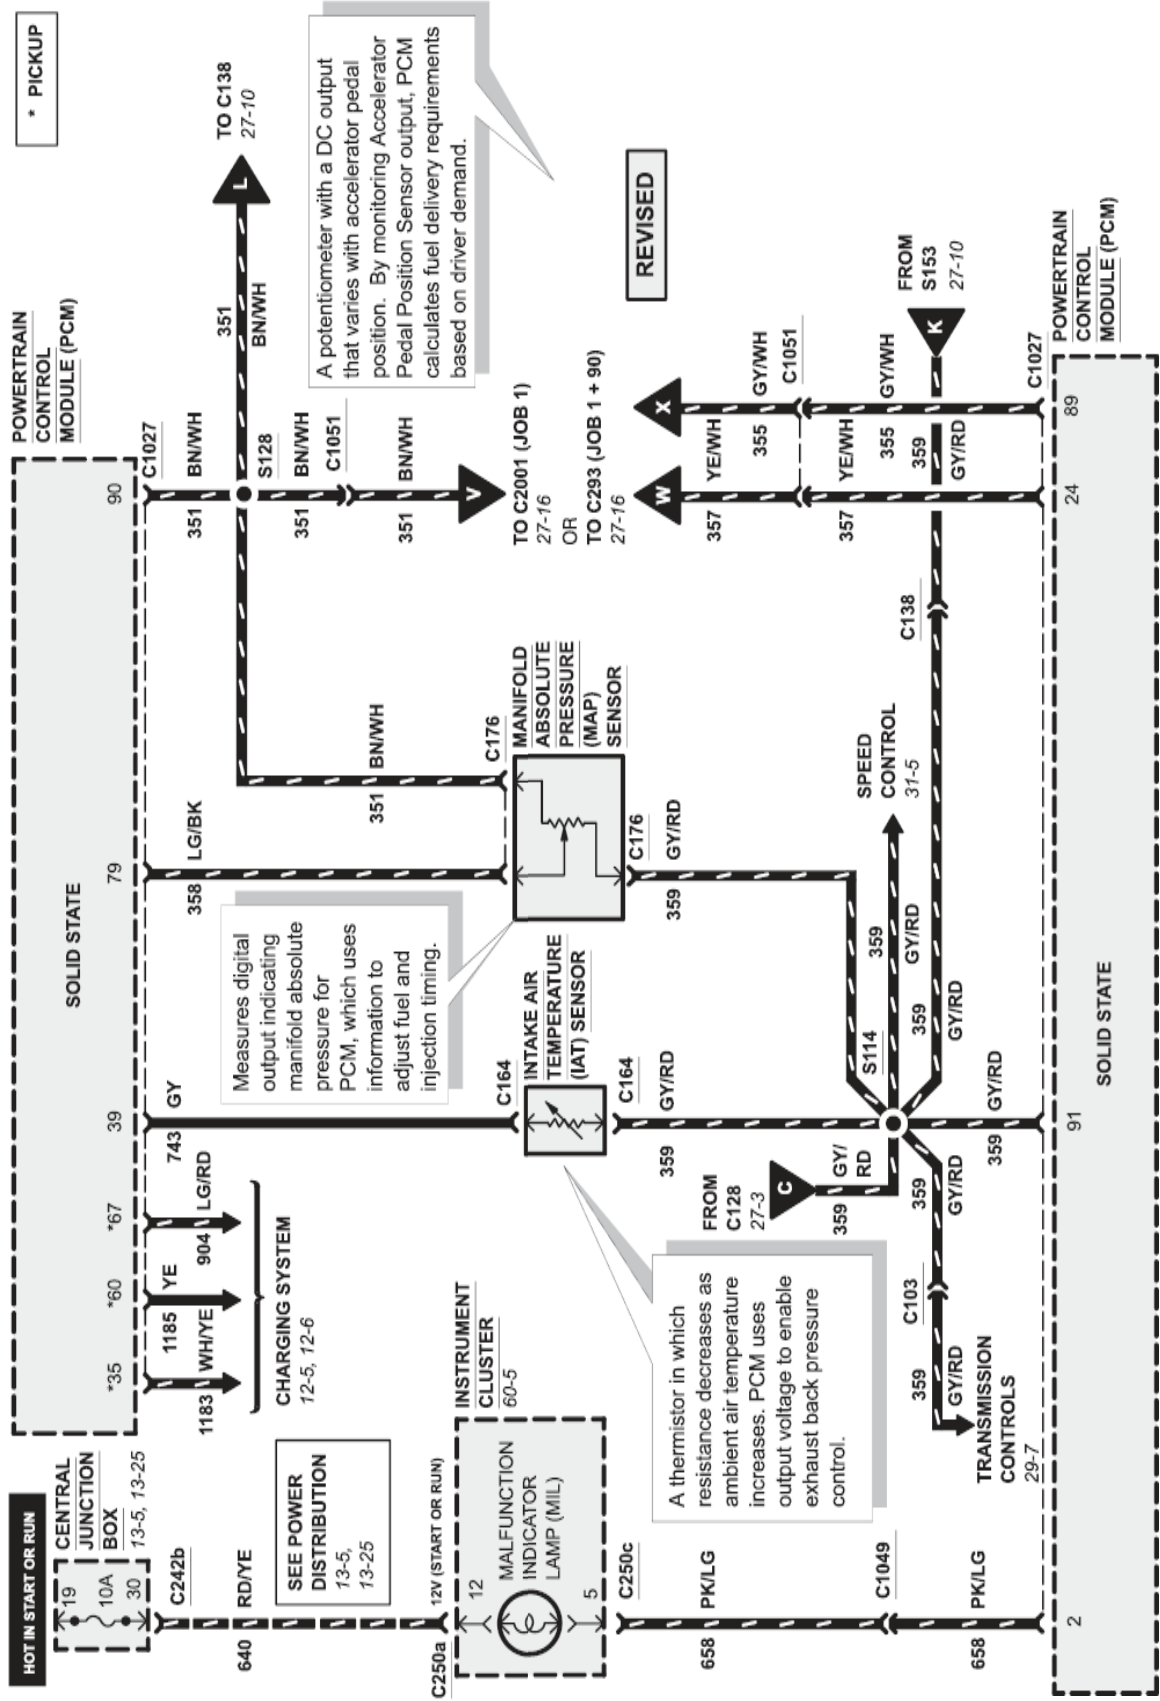


ENGINE CONTROLS (7.3L DIESEL) 27-10

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

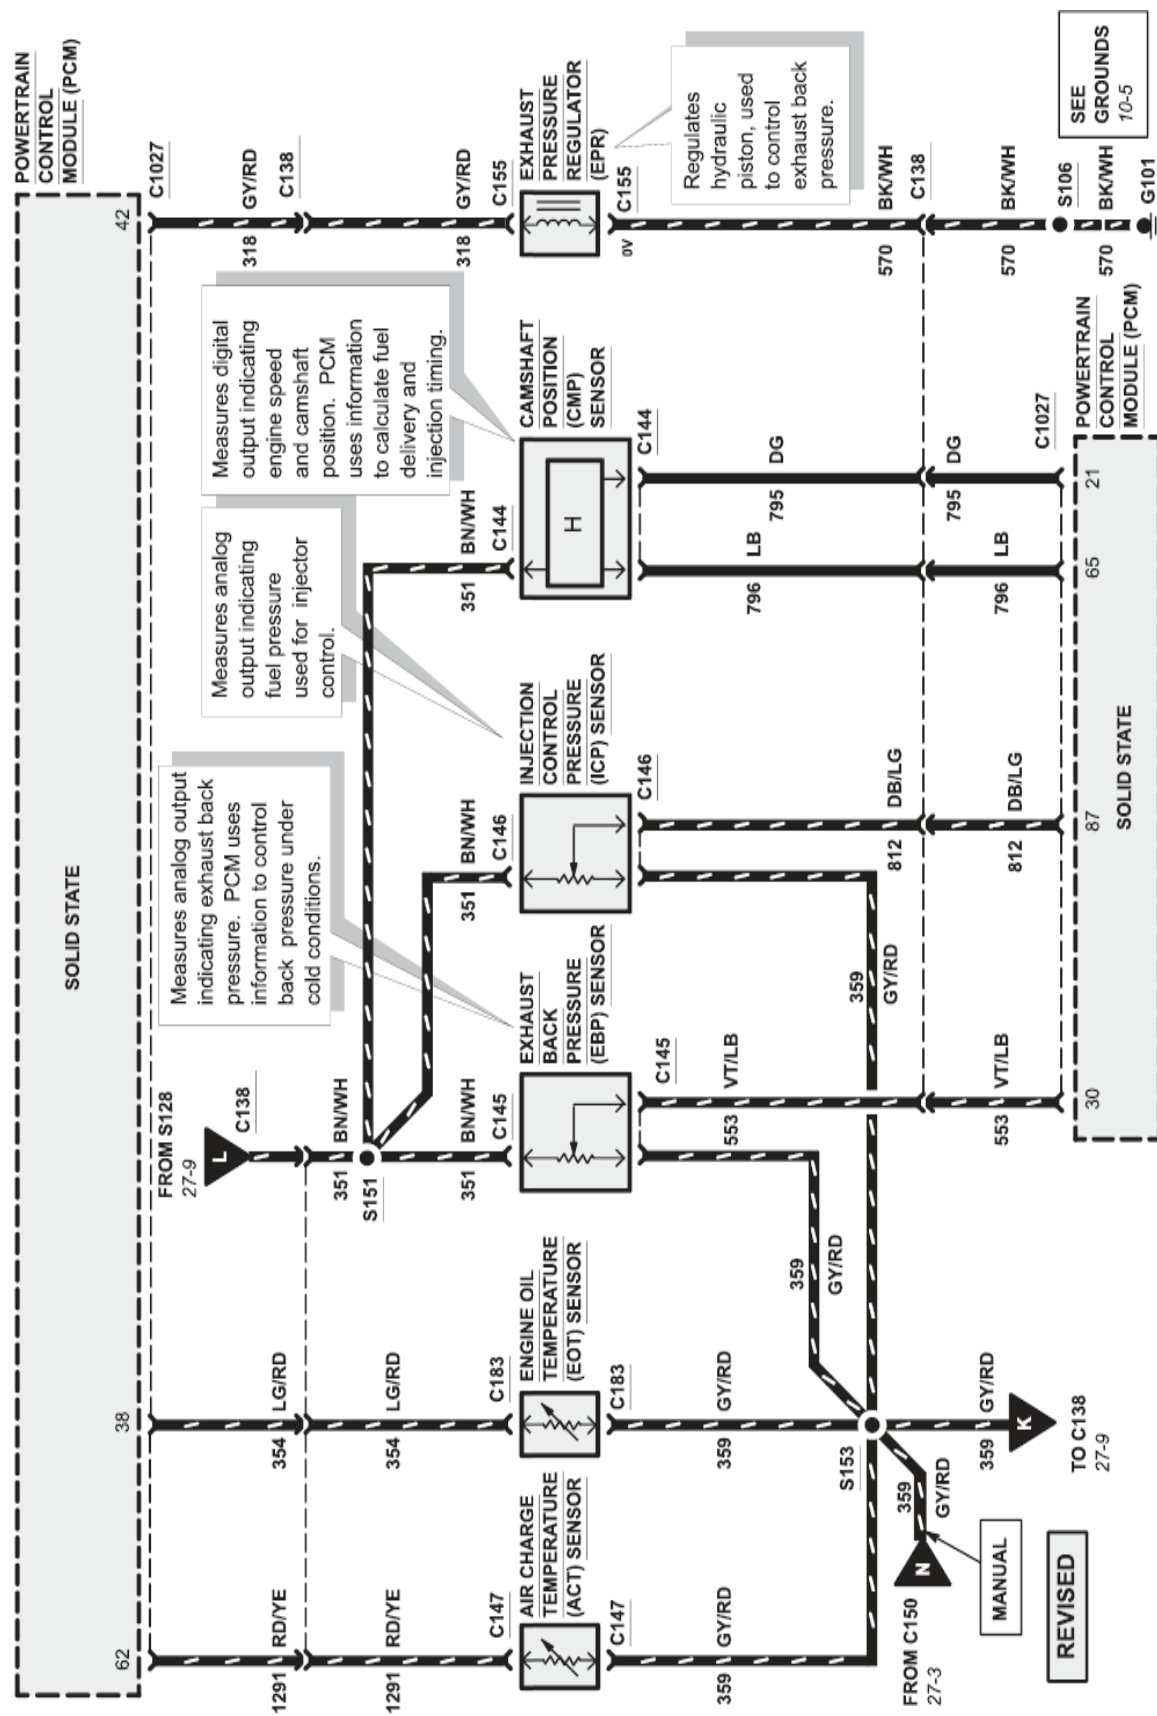

27-11 ENGINE CONTROLS (7.3L DIESEL)


2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

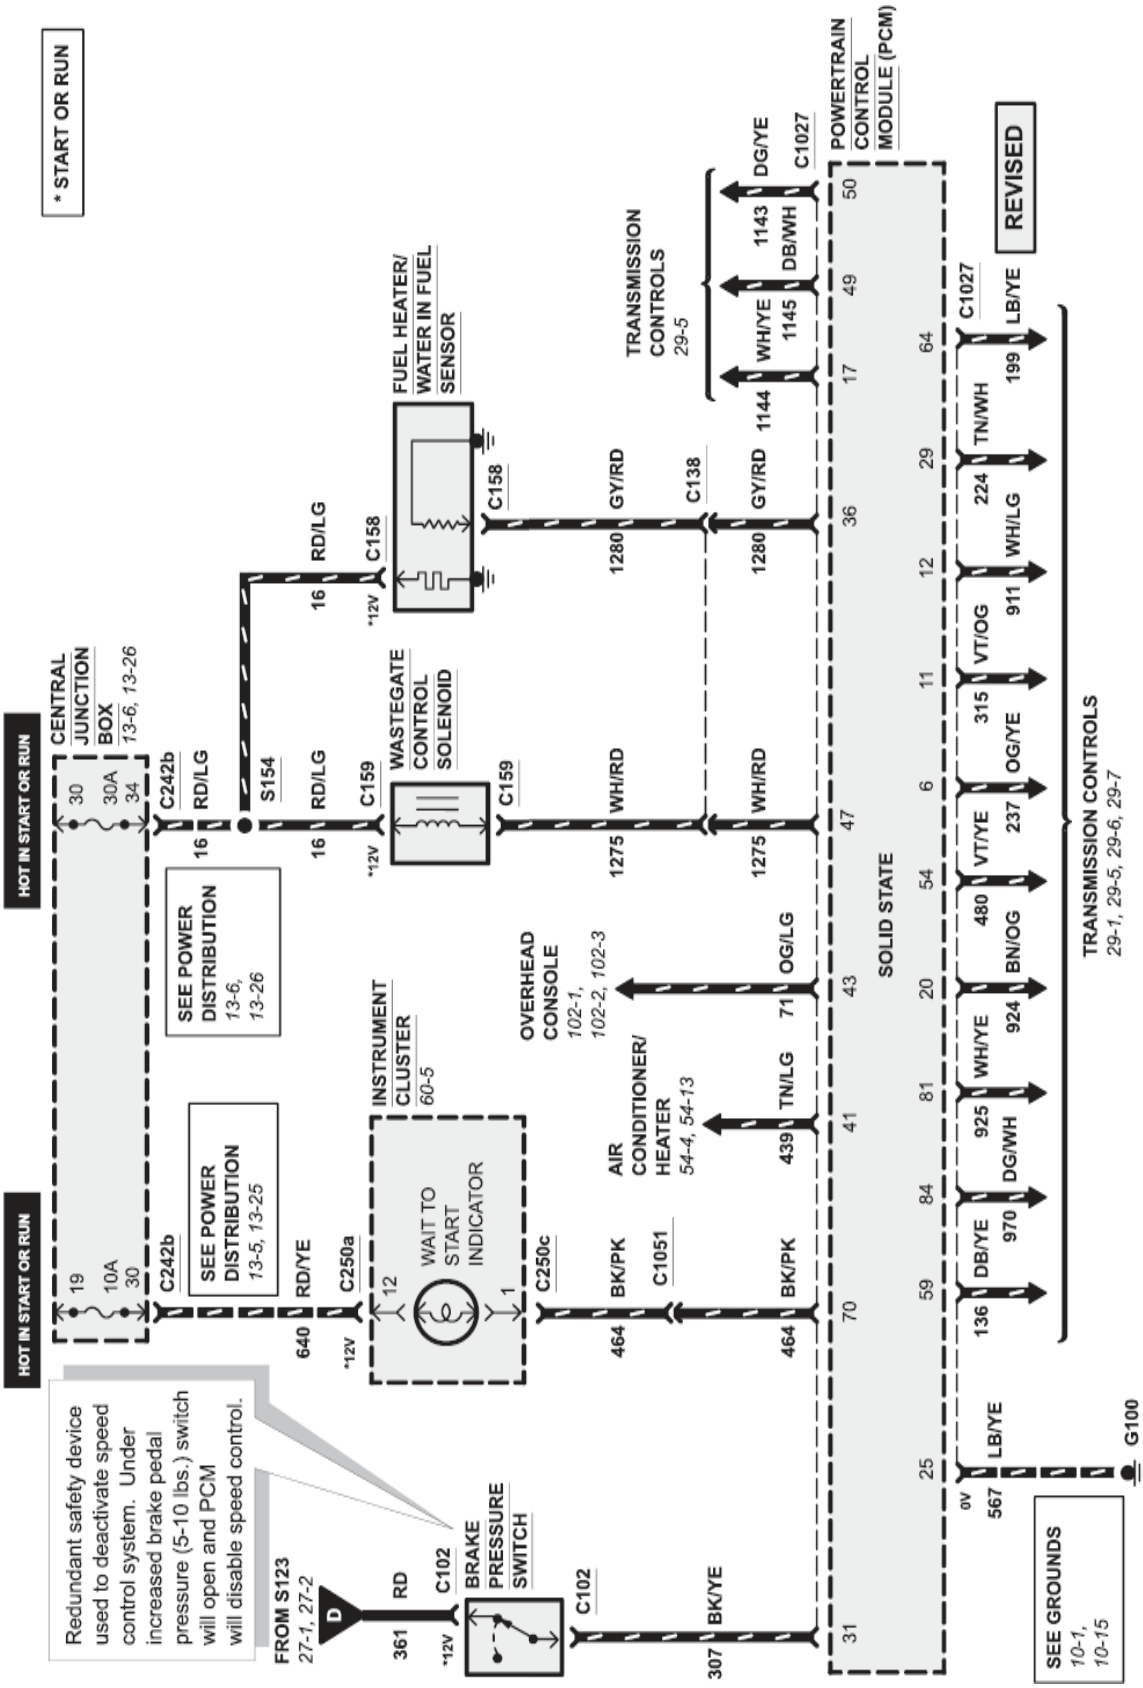

ENGINE CONTROLS (7.3L DIESEL) 27-12


2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

EXCURSION

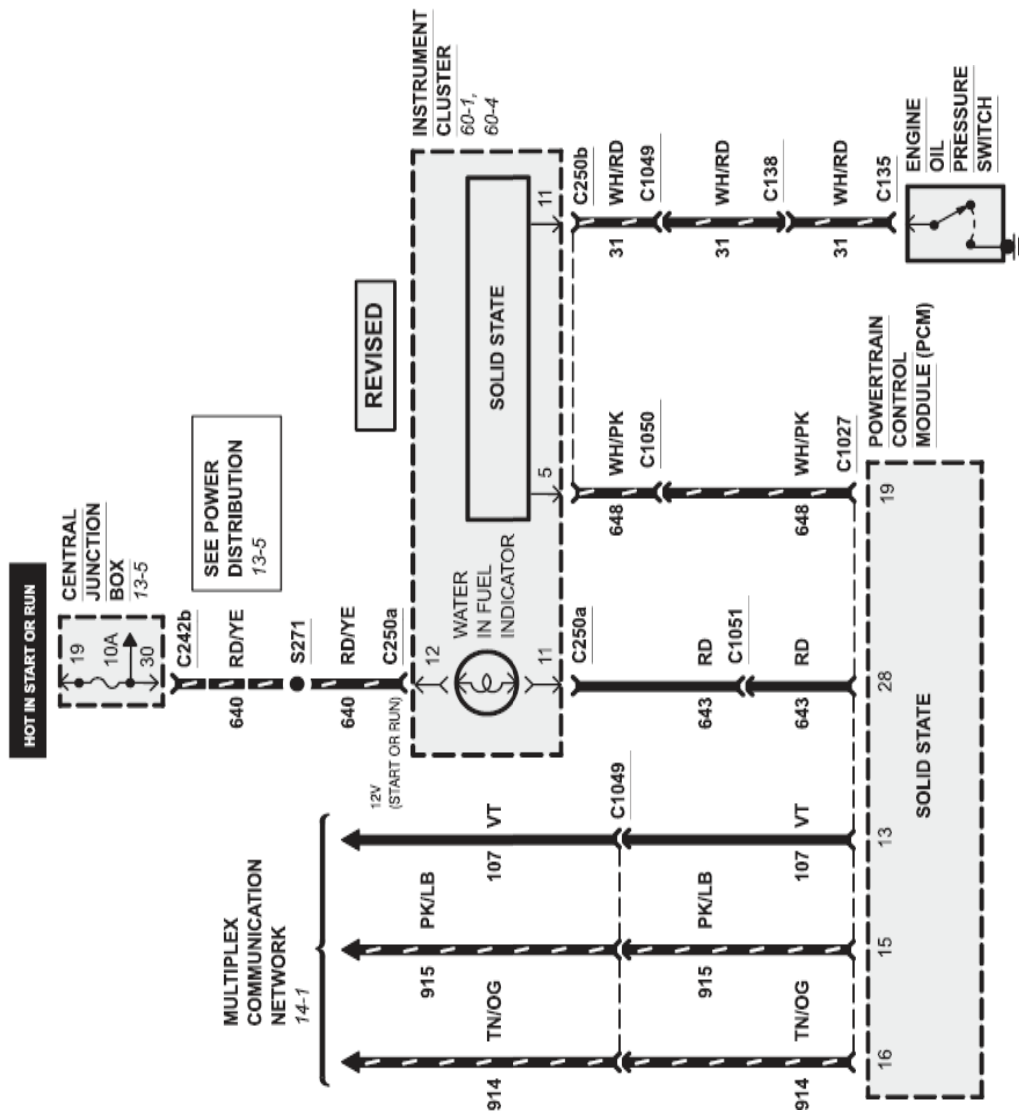


27-13 ENGINE CONTROLS (7.3L DIESEL)

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

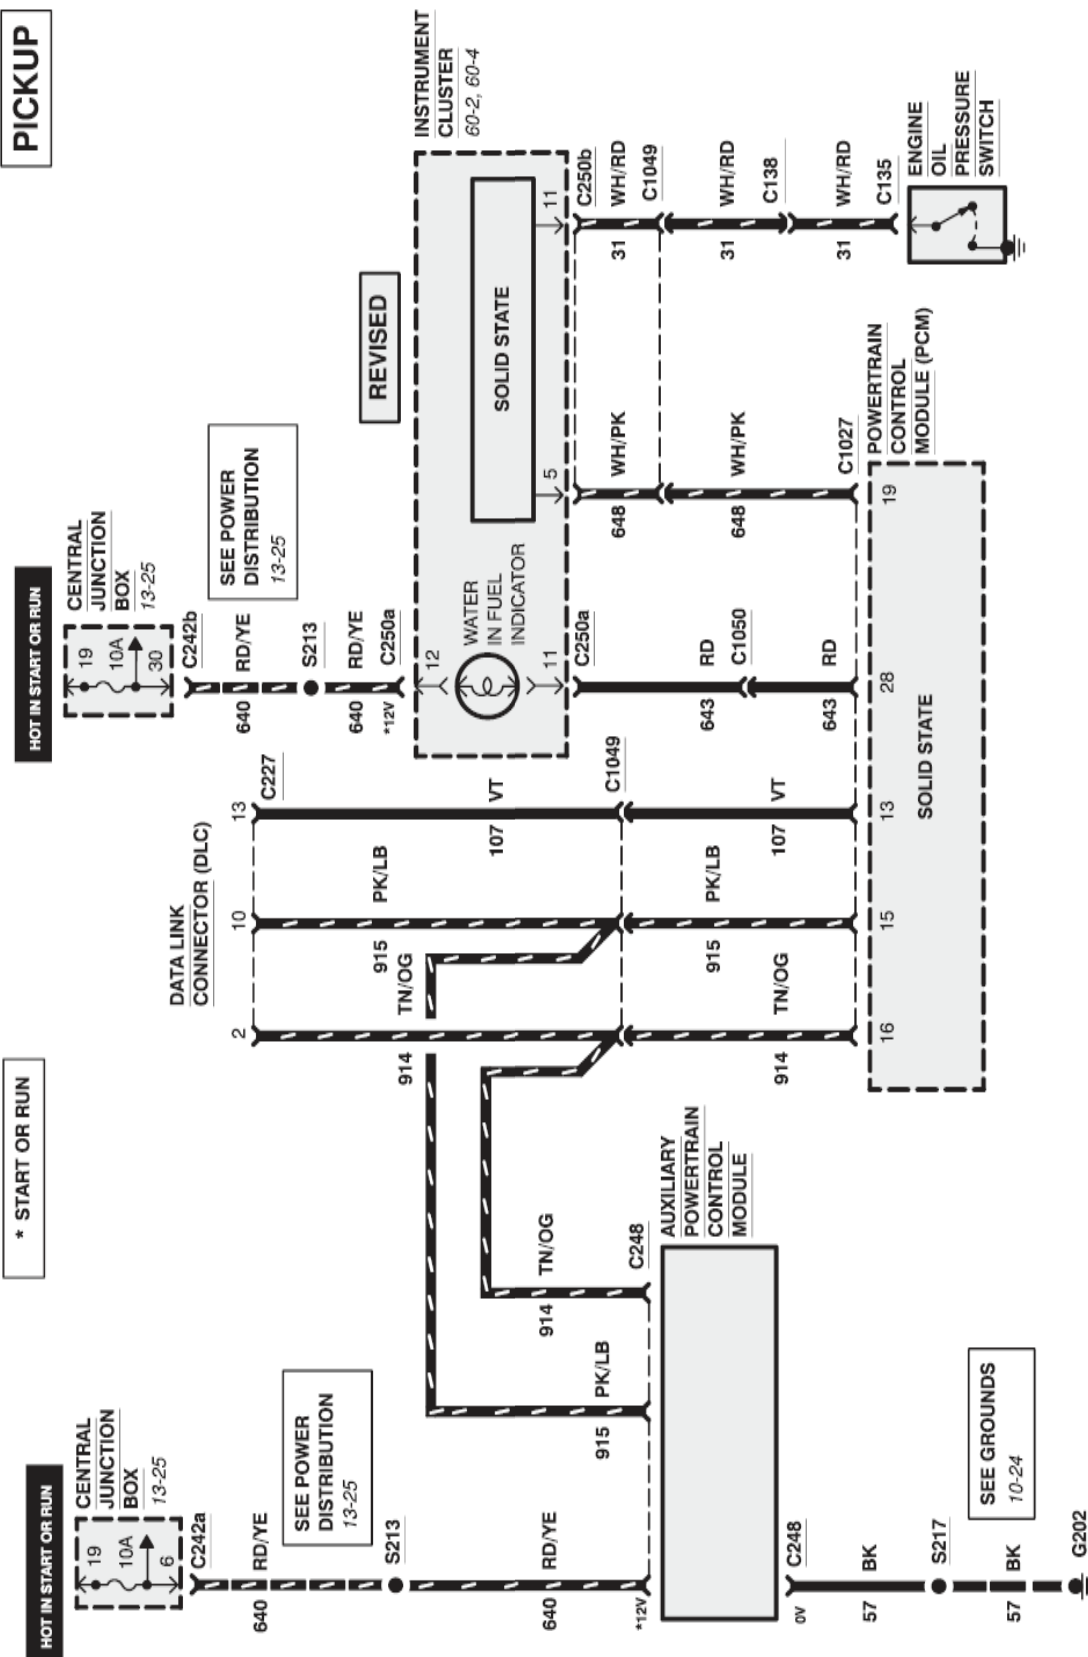

ENGINE CONTROLS (7.3L DIESEL) 27-14


2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

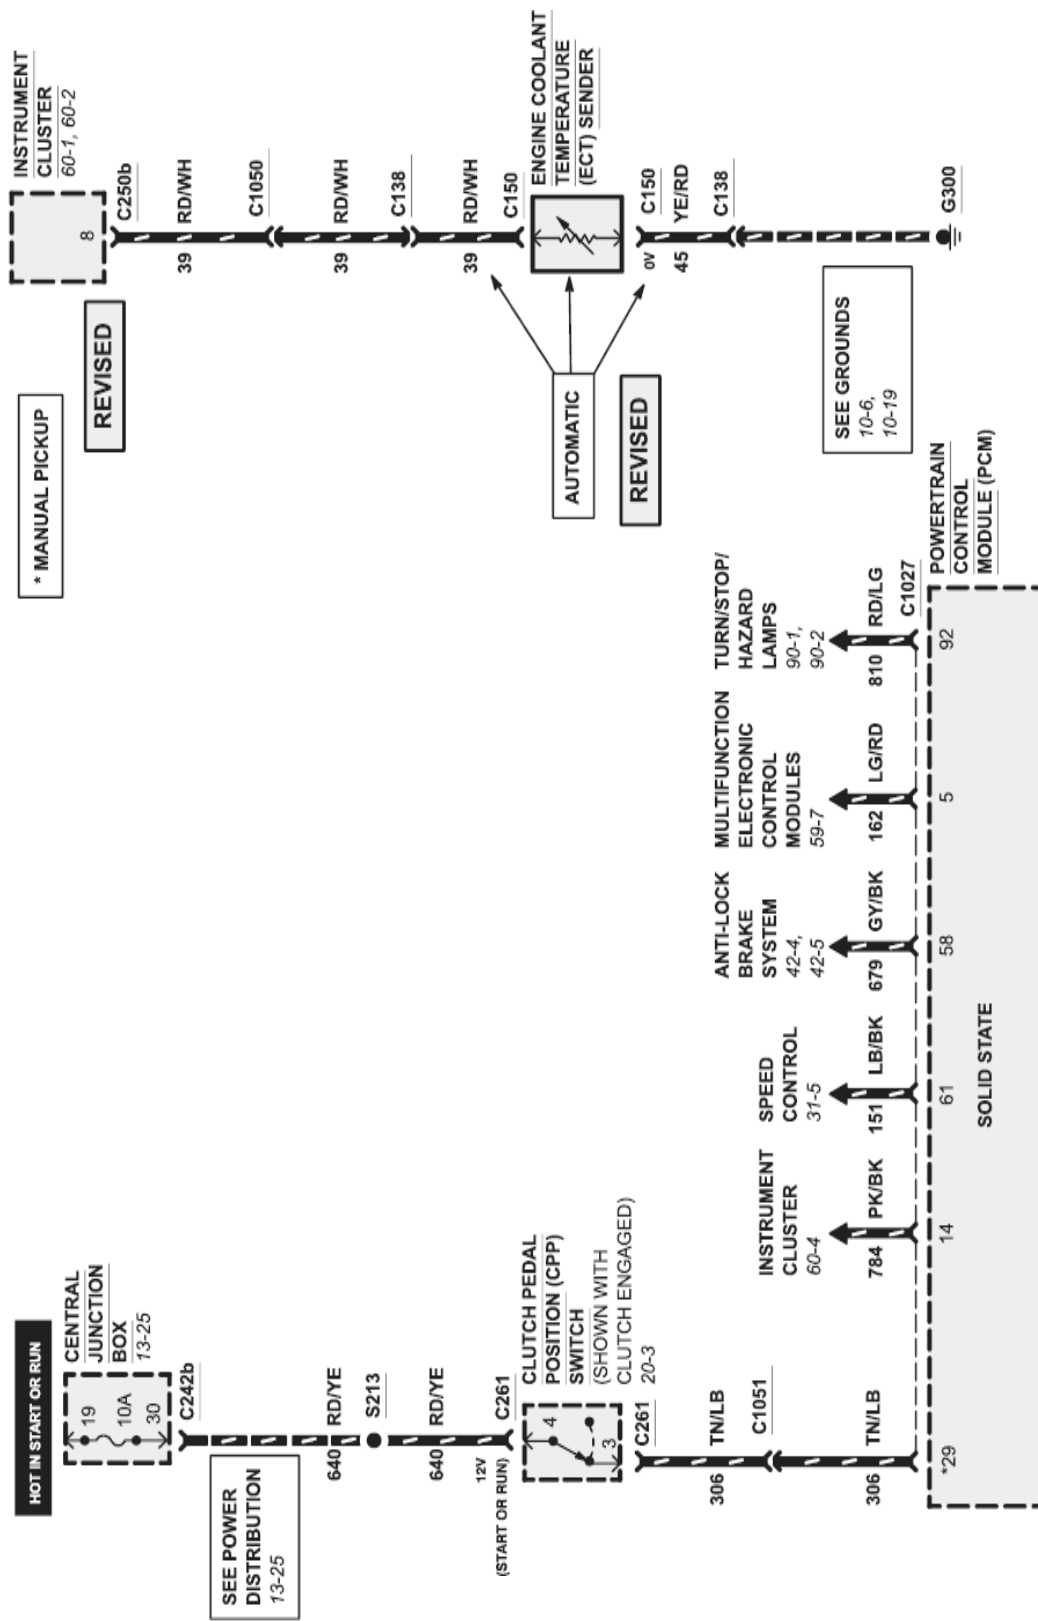

27-15 ENGINE CONTROLS (7.3L DIESEL)

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

CALIFORNIA

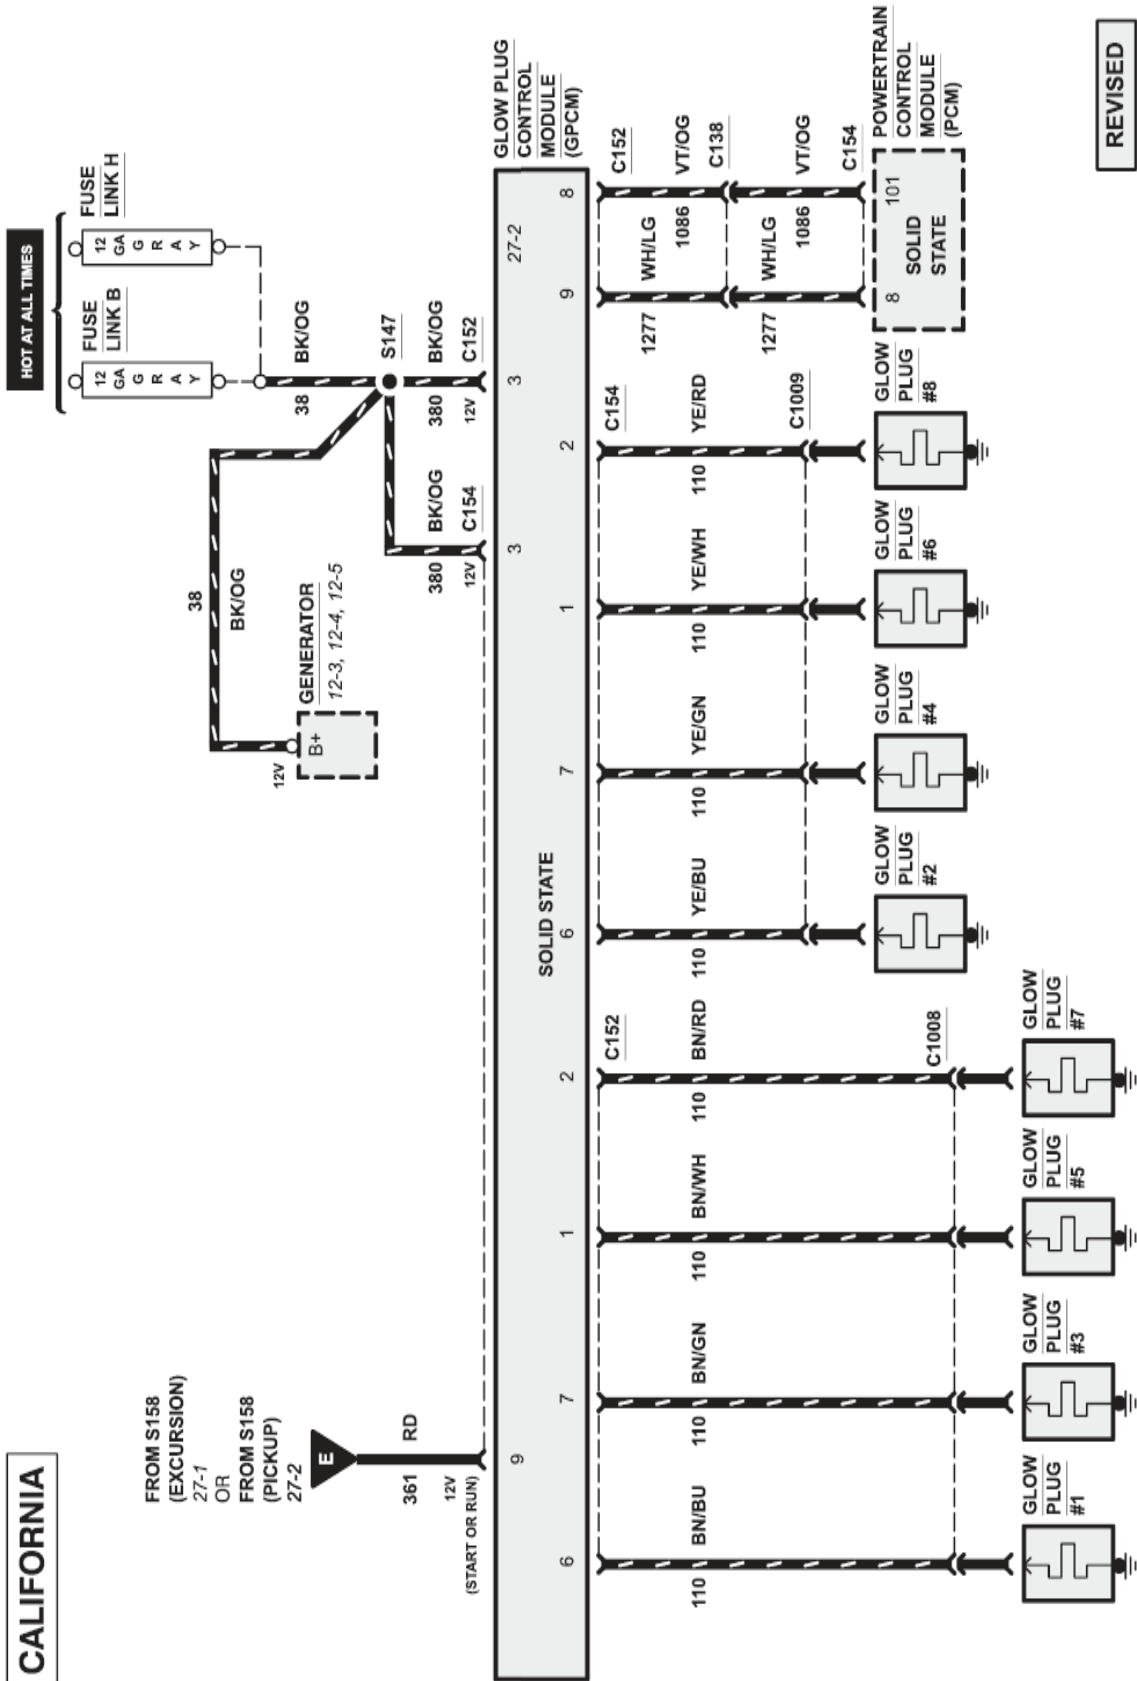


REVISED

ENGINE CONTROLS (7.3L DIESEL) 27-16

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

REVISED

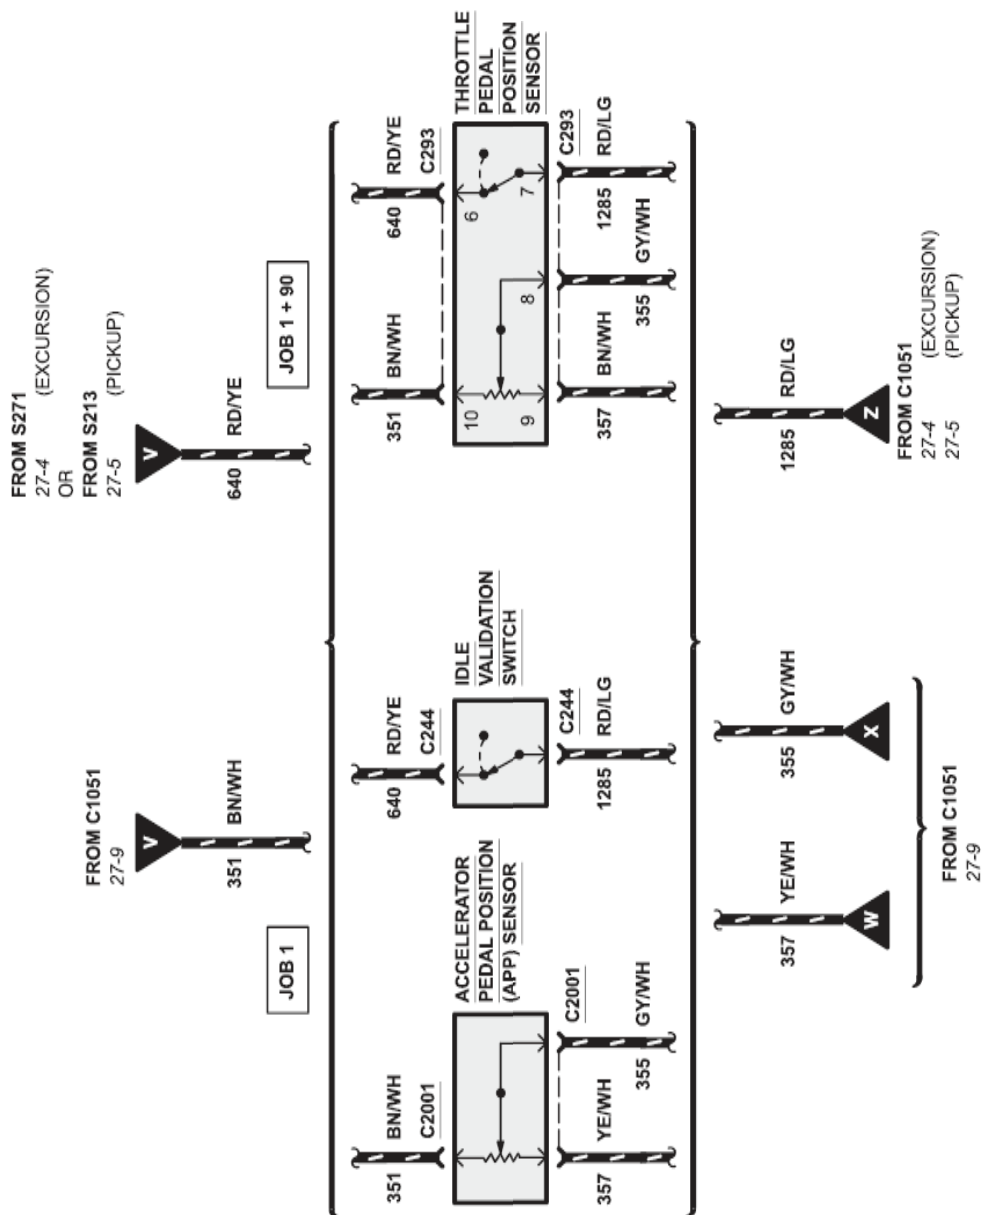

Refer to Location Index, Cell 152, for Component, Connector, Splice, Ground and Base Part Number descriptions and locations.