


TRANSMISSION CONTROLS (4R100) 29-2

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550


GAS/BI-FUEL

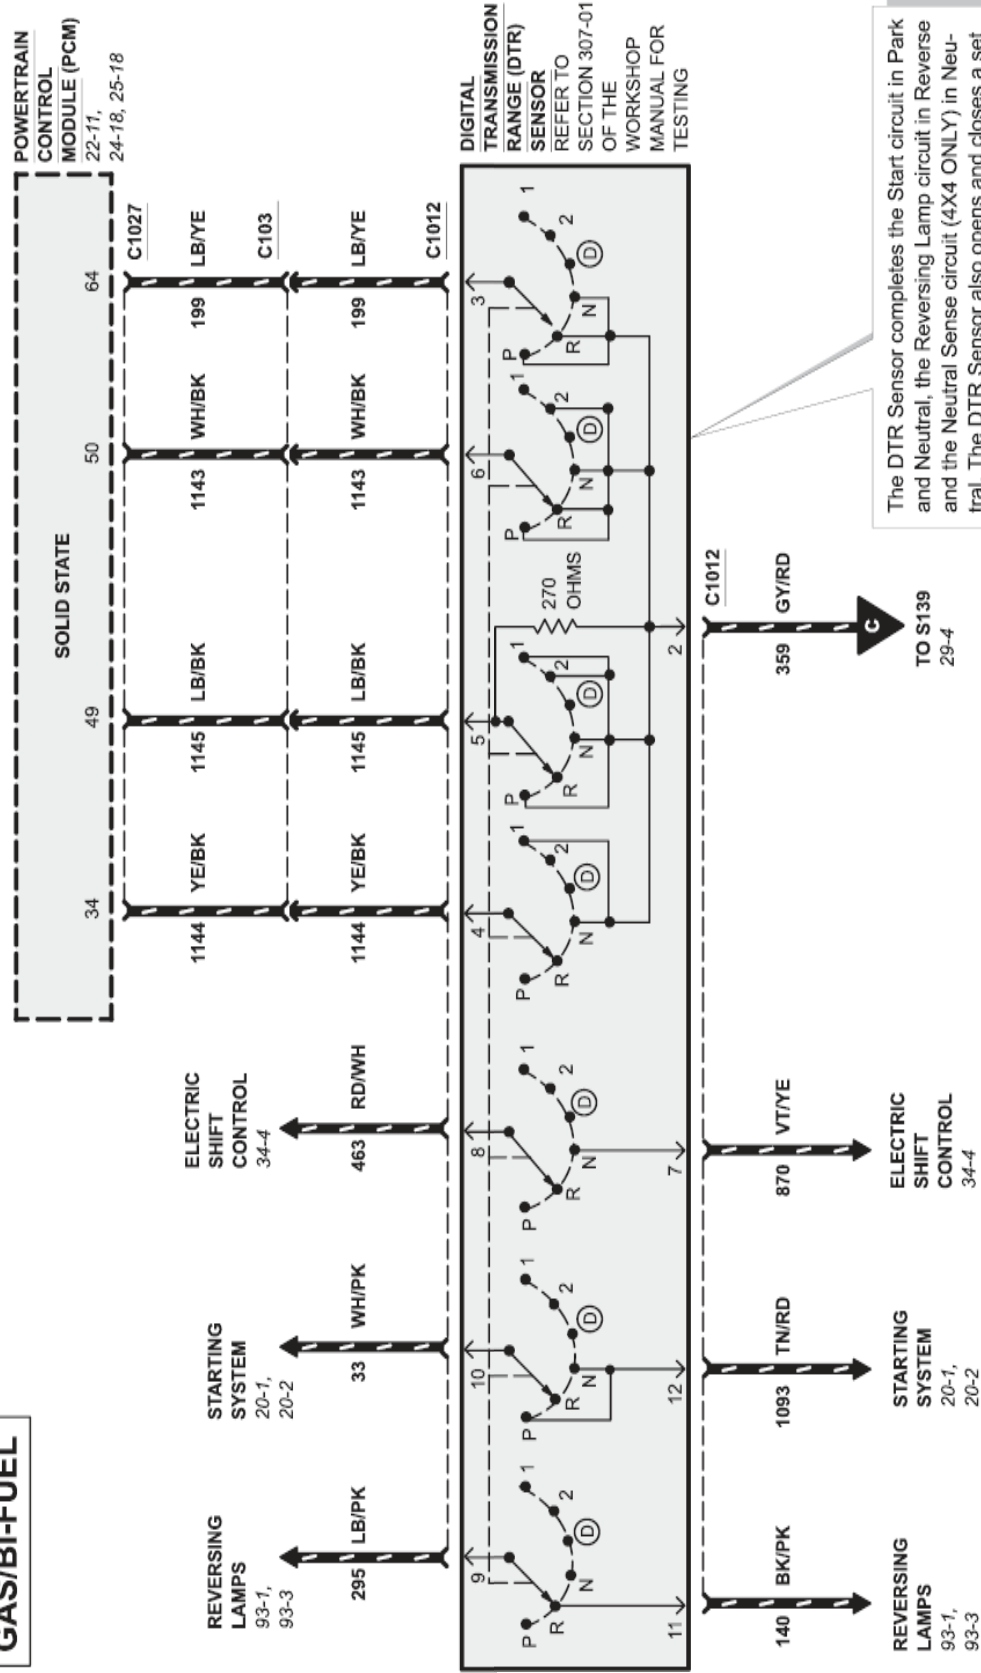

The DTR Sensor completes the Start circuit in Park and Neutral, the Reversing Lamp circuit in Reverse and the Neutral Sense circuit (4X4 ONLY) in Neutral. The DTR Sensor also opens and closes a set of four switches that are monitored by the Powertrain Control Module (PCM) indicating the position of the manual lever (P, R, N, D, 2, 1).


TRANSMISSION CONTROLS (4R100) 29-4

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

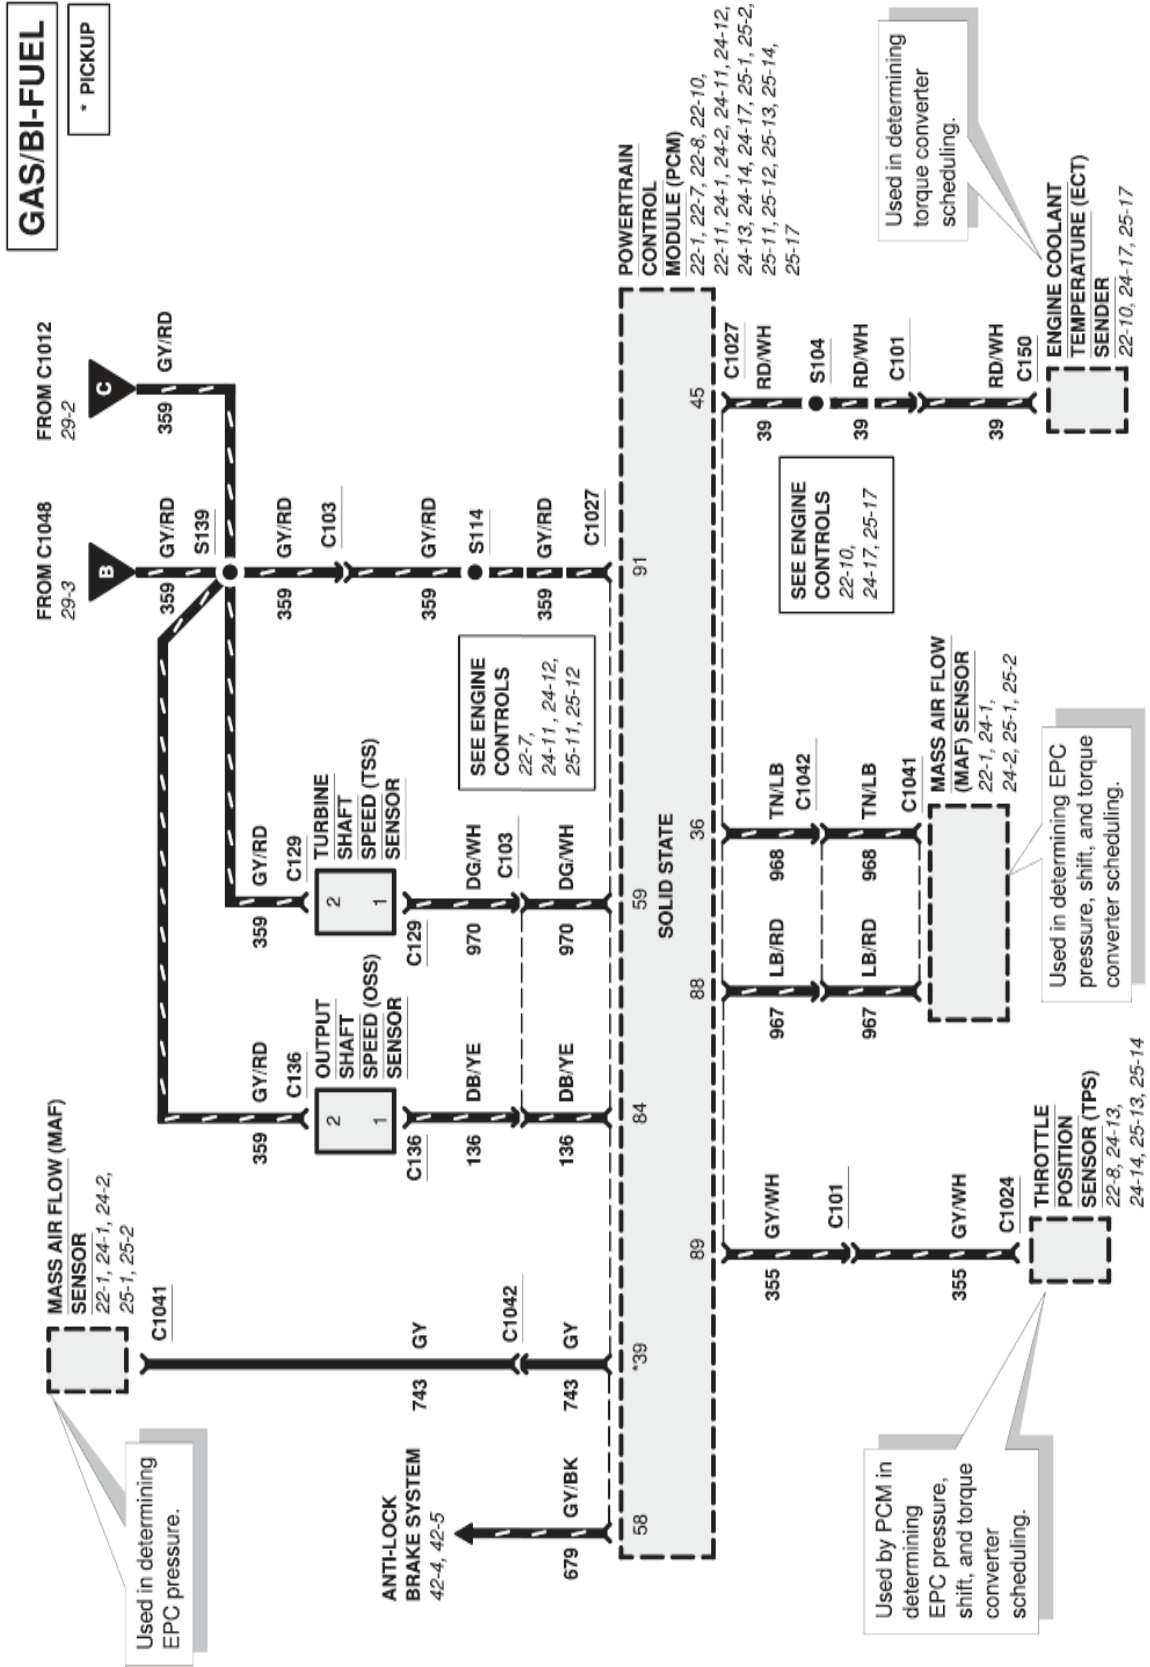

TRANSMISSION CONTROLS (4R100) 29-6

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

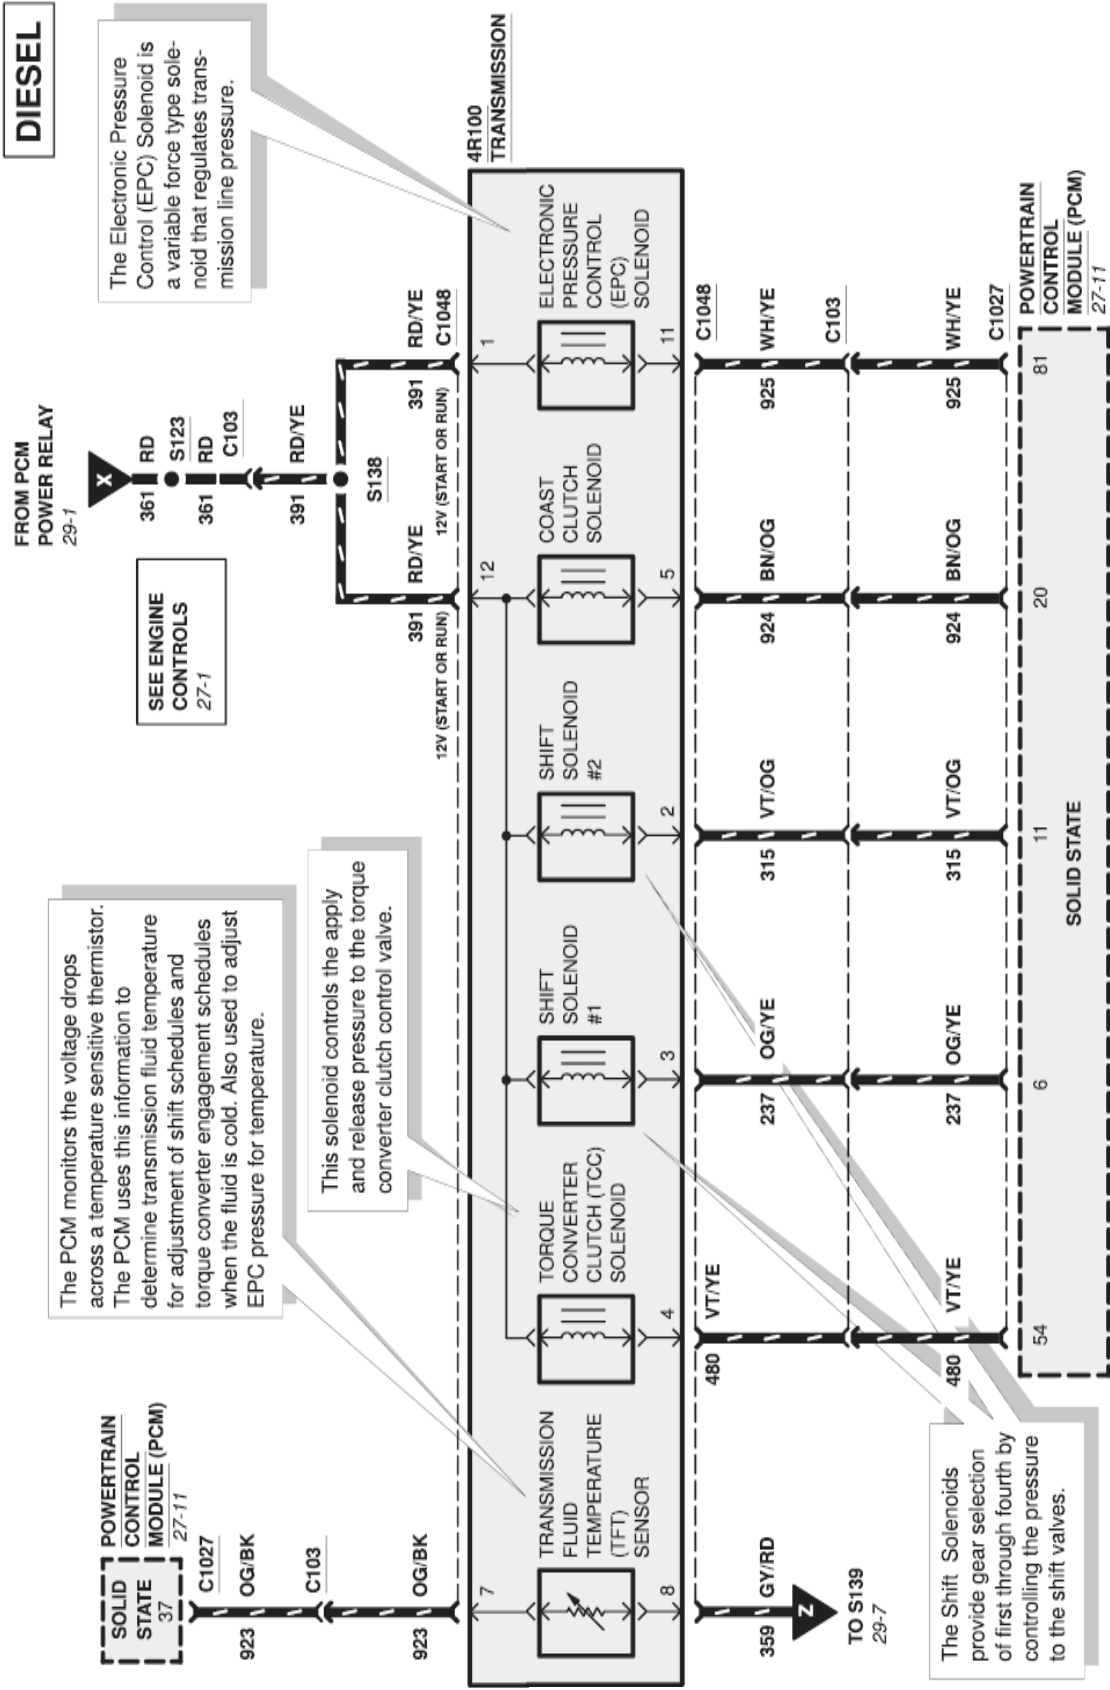

29-7 TRANSMISSION CONTROLS (4R100)

2001 EXCURSION, SUPER DUTY SERIES F-250, F-350, F-450, F-550

