


151-1 Component Location Views

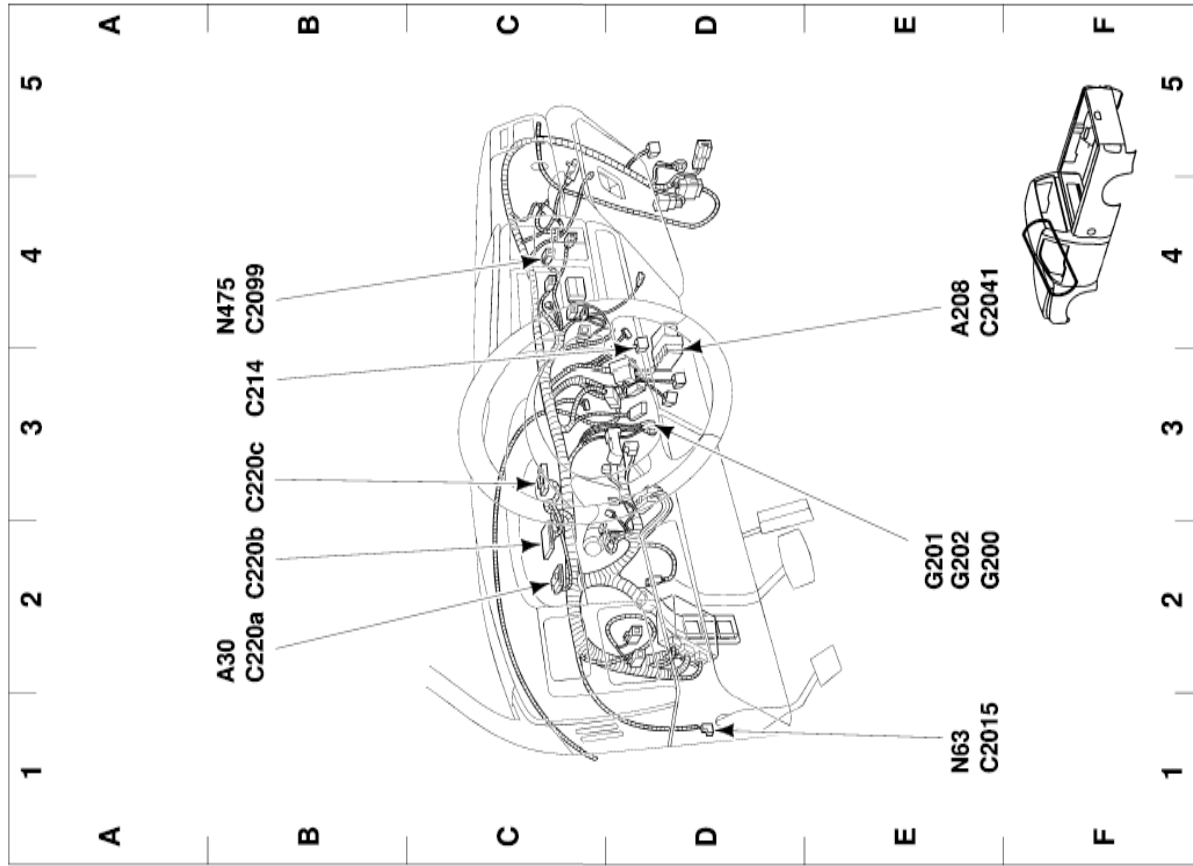


dash panel

A30	Instrument cluster	B 2
A208	Restraints control module (14B321)	E 4
C214		B 3
C220a		B 2
C220b		B 2
C220c		B 3
C2015		E 1
C2041		E 4
C2099		B 4
G200		E 2
G201		E 2
G202		E 2
N63	Parking brake switch (15A851)	E 1
N475	Passenger Air bag Deactivation (PAD) switch	B 4

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02


Component Location Views 151-2

dash panel

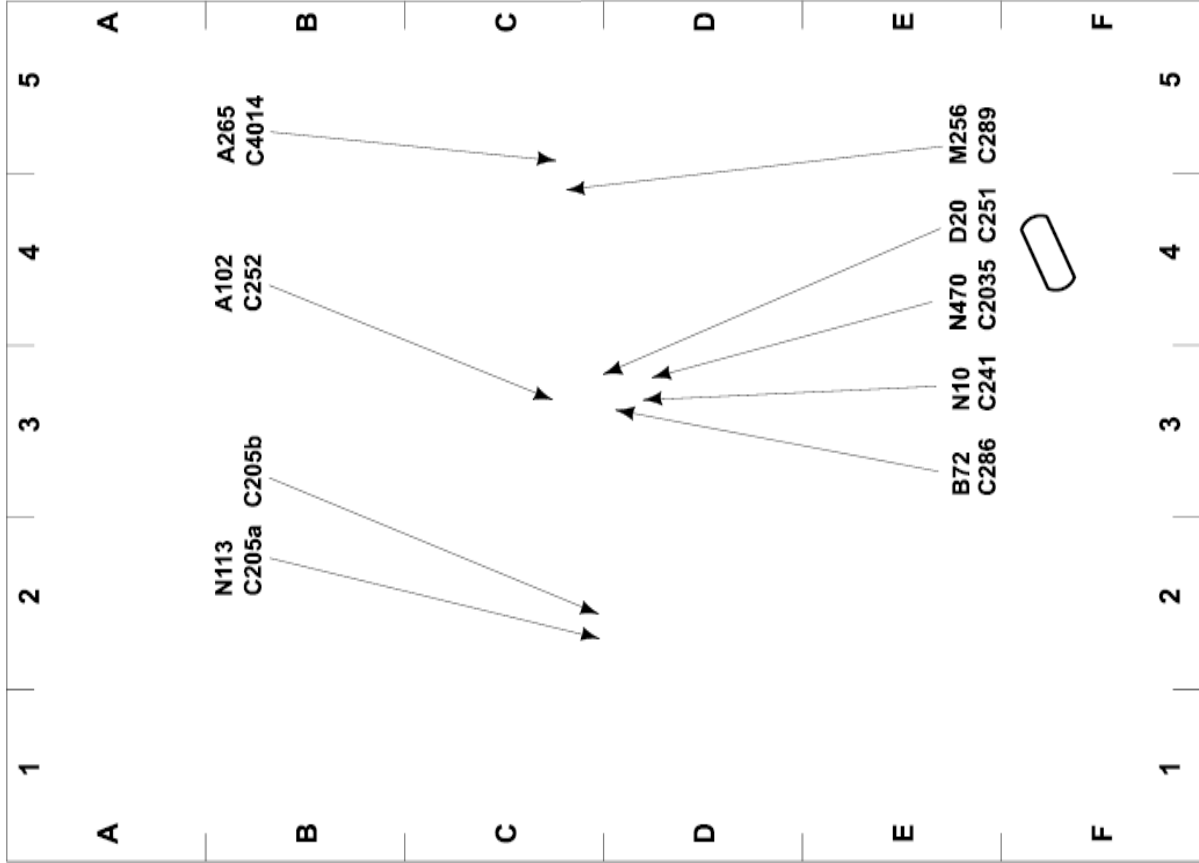

- A102 Passive anti theft transceiver module (15607) B 4
- A265 . Parking Aid Module (PAM) (15K866) B 5
- B72 . . Sunload sensor (19E663) E 3
- C205a..... B 2
- C205b..... B 3
- C241..... E 3
- C251..... E 4
- C252..... B 4
- C286..... E 3
- C289..... E 5
- C2035..... E 4
- C4014..... B 5
- D20 . Data Link Connector (DLC) (14489) E 4
- M256 Temperature blend door actuator (19E616) E 5
- N10 . Rear window defrost switch (18578) E 3
- N113 Main light switch (11654) B 2
- N470 Parking aid disable switch (15A860) E 4

151-3 Component Location Views

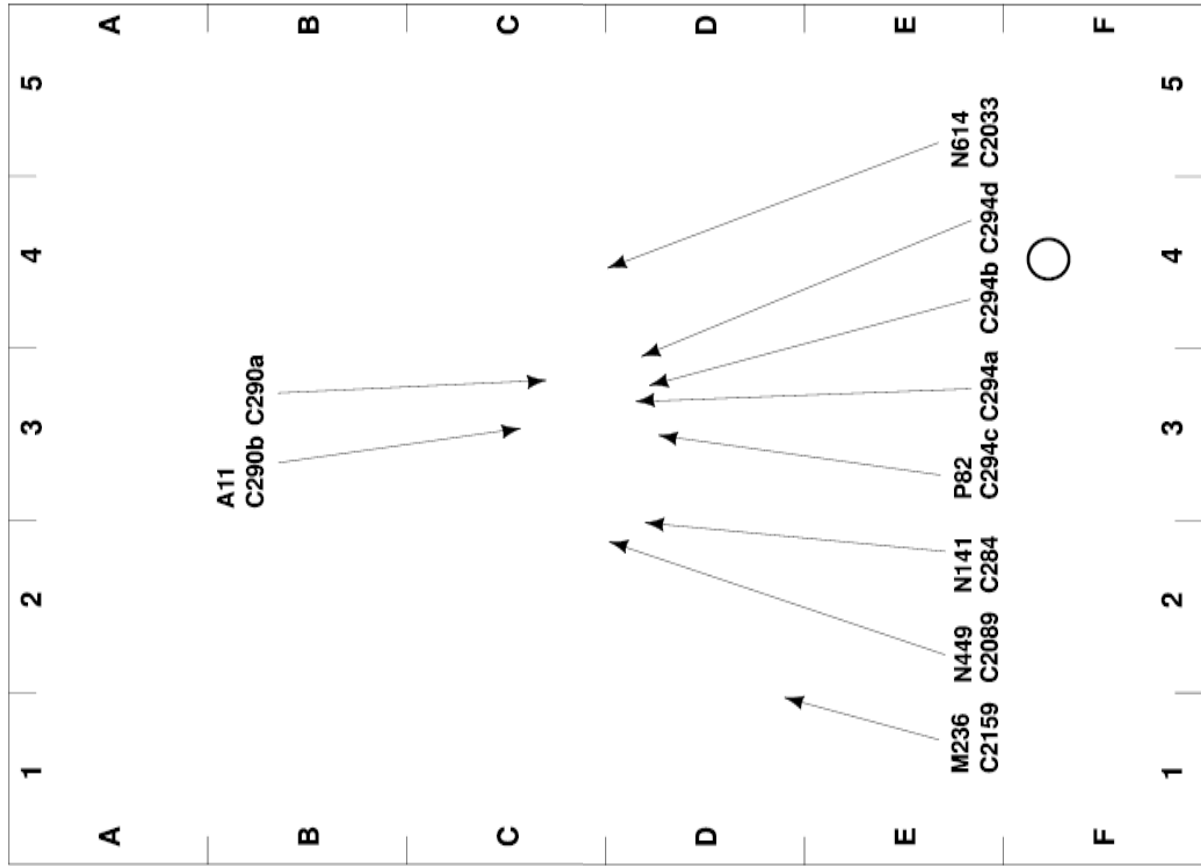


dash panel, center

A11 . Radio (18806)	B 3
C284	E 2
C290a	B 3
C290b	B 3
C294a	E 3
C294b	E 4
C294c	E 3
C294d	E 4
C2033	E 5
C2089	E 2
C2159	E 1
M236 Adjustable pedal motor (2C429)	E 1
N141 Four . . . wheel drive switch	E 2
N449 Adjustable pedal switch	E 2
N614 Power point, instrument panel (19N236)	E 5
P82 . . . Function selector switch assembly, front	E 3

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02


Component Location Views 151-4

behind dash panel, RH side

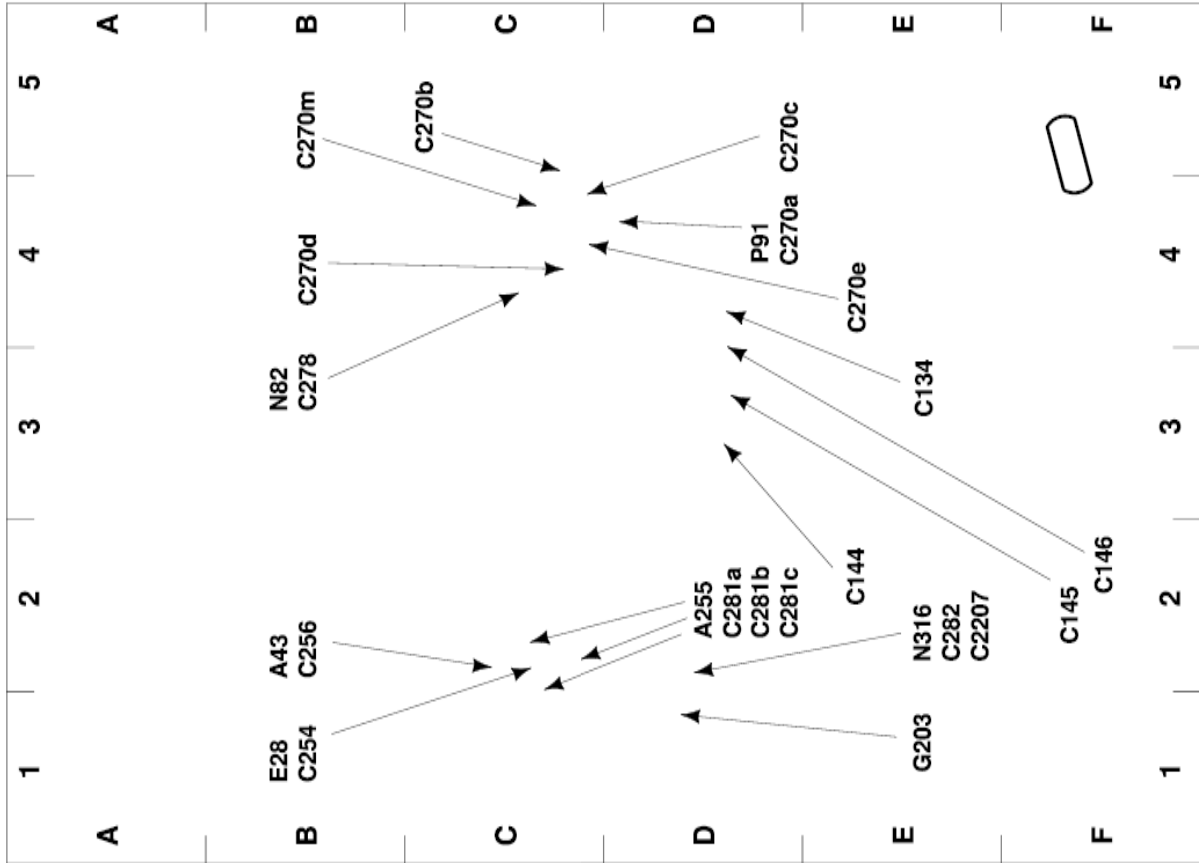

A43	Passenger air bag module (15044A74)	B 2
A255	Four wheel drive control module	D 2
C134		E 3
C144		E 2
C145		F 2
C146		F 2
C254		B 1
C256		B 2
C270a		D 4
C270b		D 5
C270c		D 5
C270d		B 4
C270e		E 4
C270m		B 5
C278		B 3
C281a		D 2
C281b		D 2
C281c		D 2
C282		E 2
C2207		E 2
E28	Glove box lamp (14413)	B 1
G203		E 1
N82	Brake pedal position switch (13480)	B 3
N316	Inertia Fuel Shutoff (IFS) switch (9D362)	E 2
P91	Central Junction Box (CJB) (14A068)	D 4

151-5 Component Location Views

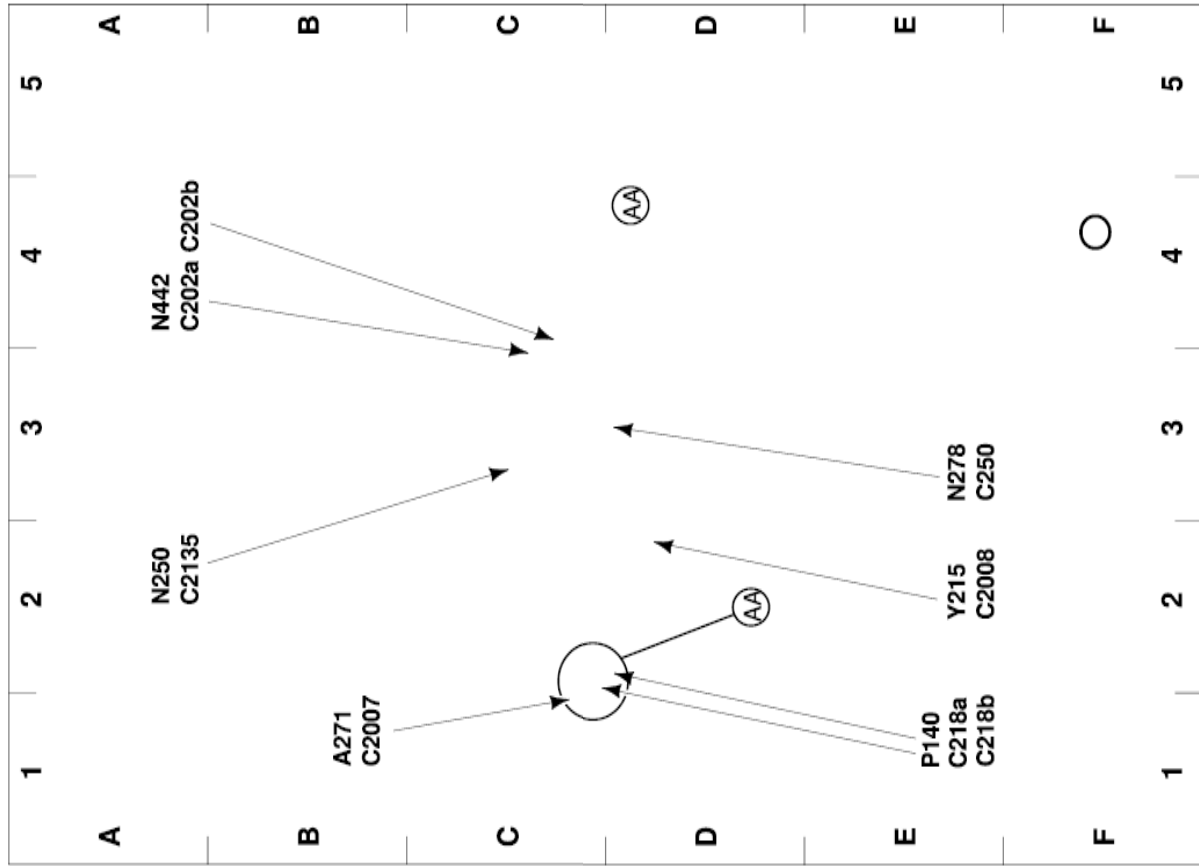


on steering column

A271	Passive anti-l. , , theft transceiver.....	B 1
C202a	A 4
C202b	A 4
C218a	E 1
C218b	E 1
C250	E 3
C2007	B 1
C2008	E 2
C2135	A 2
N250	Overdrive cancel switch (7G550).....	A 2
N278	Ignition switch (11572).....	E 3
N442	Multifunction switch.....	A 4
P140	Air bag sliding contact (14A664).....	E 1
Y215	Brake shift interlock.....	E 2

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02


Component Location Views 151-6

under dash panel, LH side

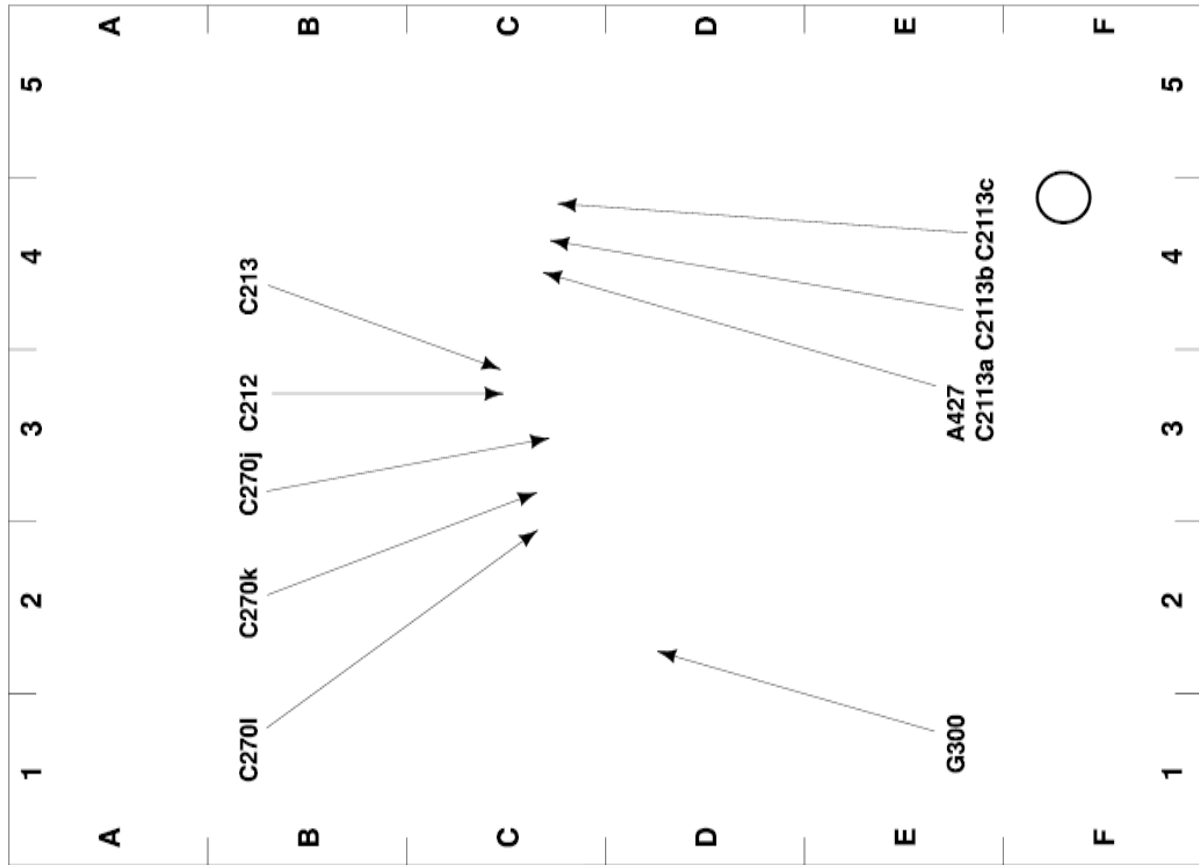

A427	Vehicle Security Module (VSM)	E3
C212		B3
C213		B4
C270j		B3
C270k		B2
C270l		B1
C2113a		E3
C2113b		E4
C2113c		E4
G300		E1

151-7 Component Location Views

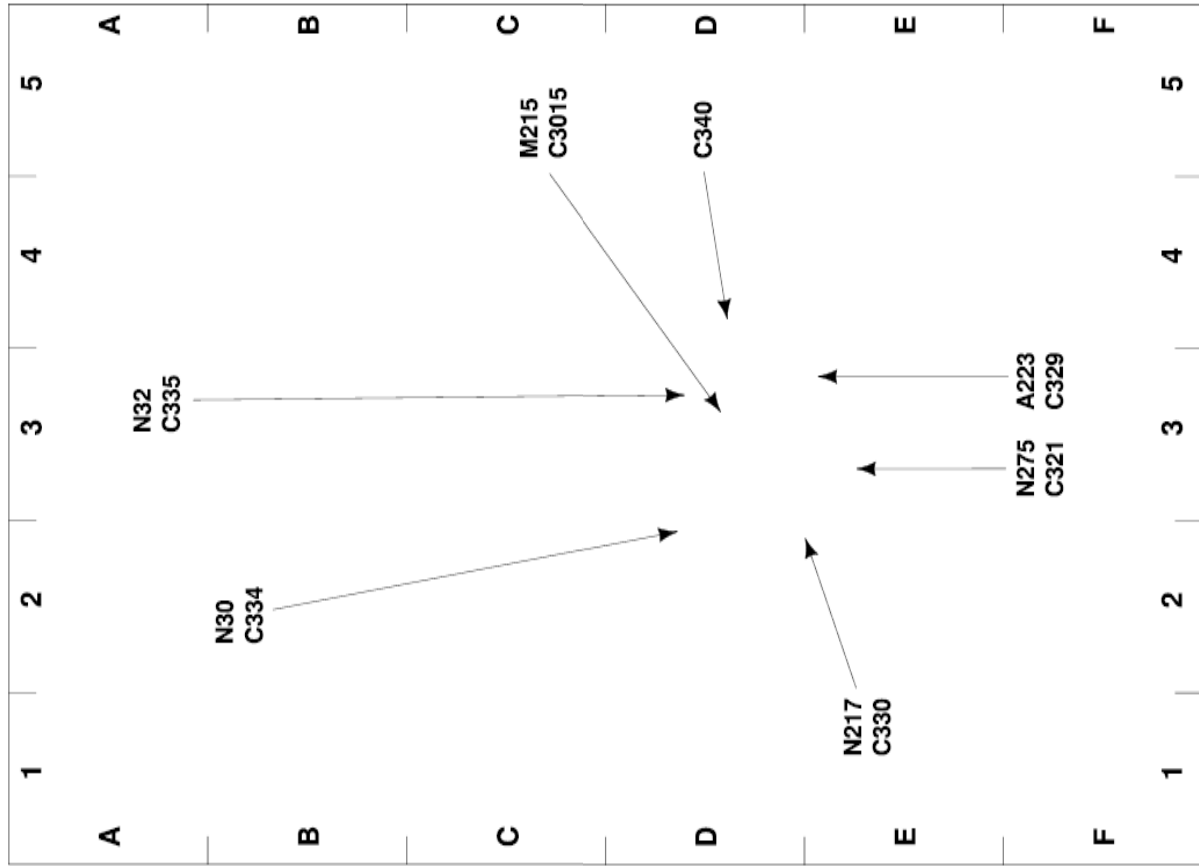


passenger seat


A223	Heated seat module, passenger side front	F3
C321		F3
C329		F3
C330		E1
C334		B2
C335		A3
C340		D5
C3015		C5
M215	Power seat motor assembly, right	C5
N30	Seat cushion heater, right front	B2
N32	Seat back heater, right front	A3
N217	Seat adjust switch, passenger side front	E1
N275	Seat heater switch, passenger side	F3

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02

Component Location Views 151-8

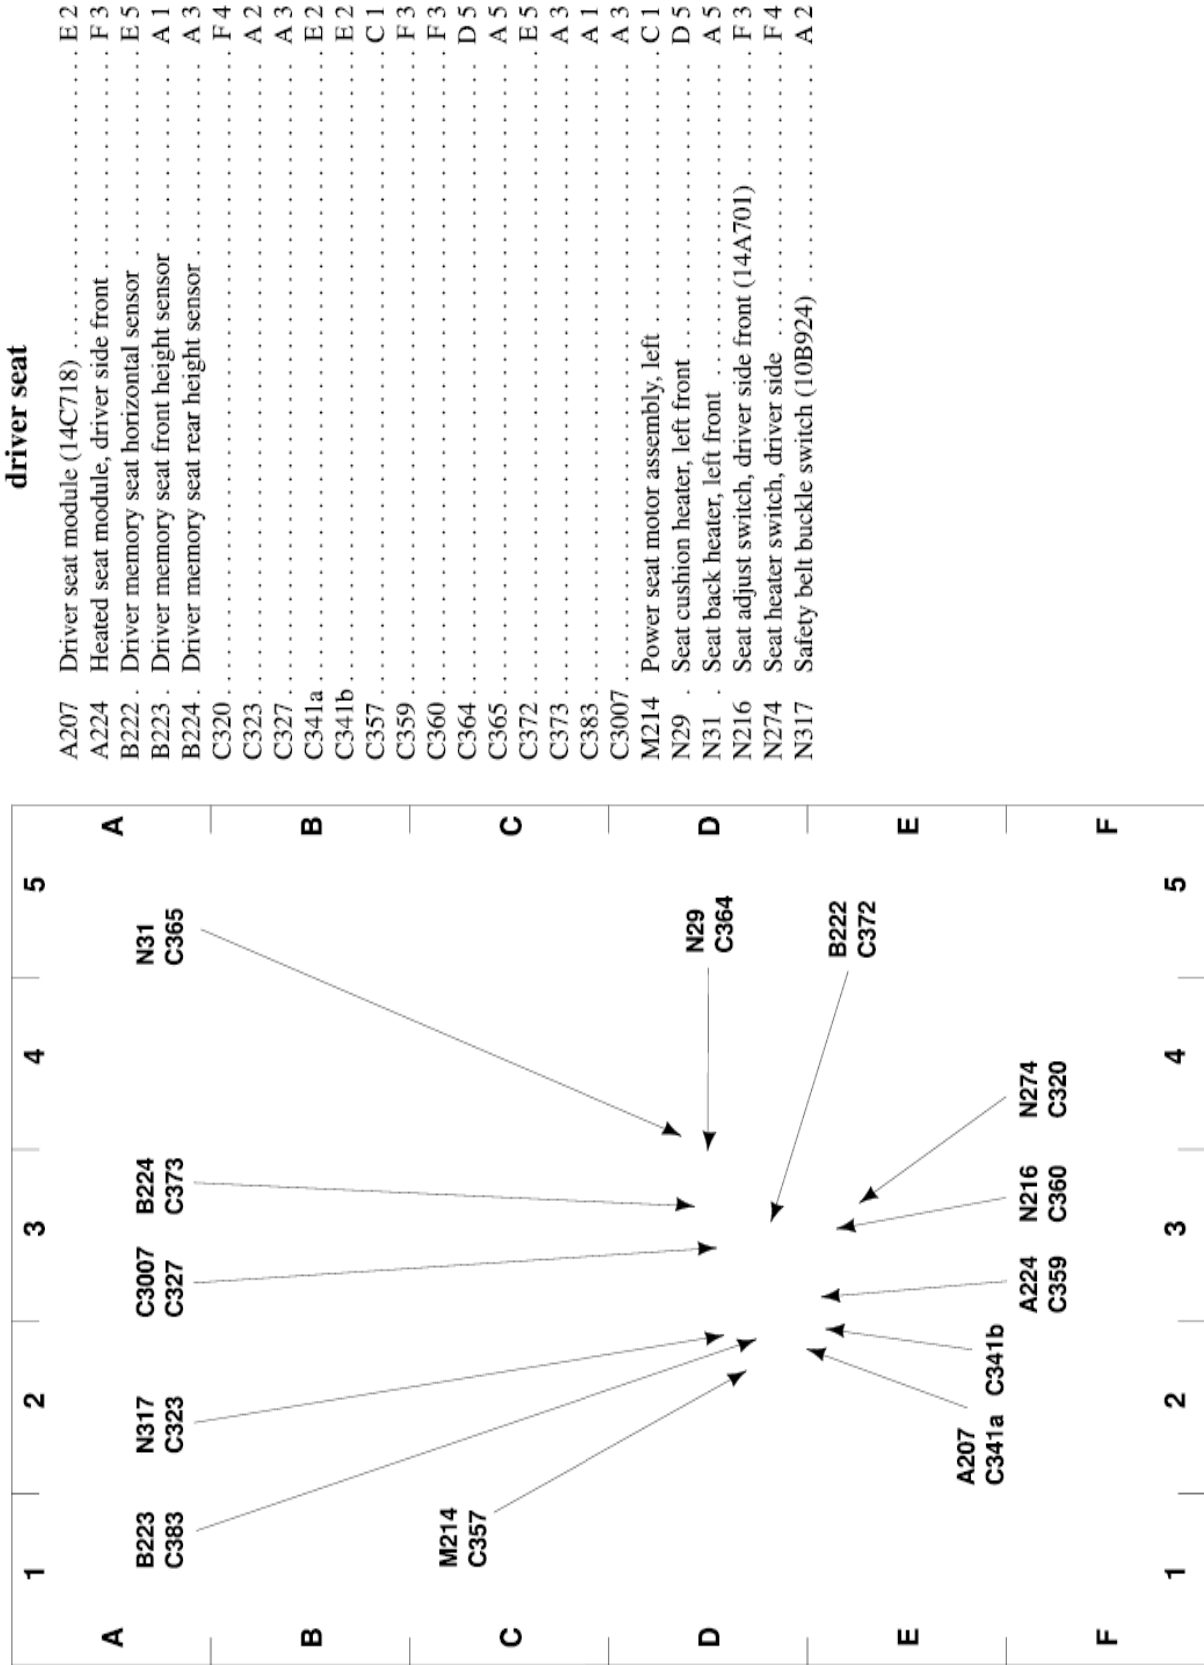

151-9 Component Location Views

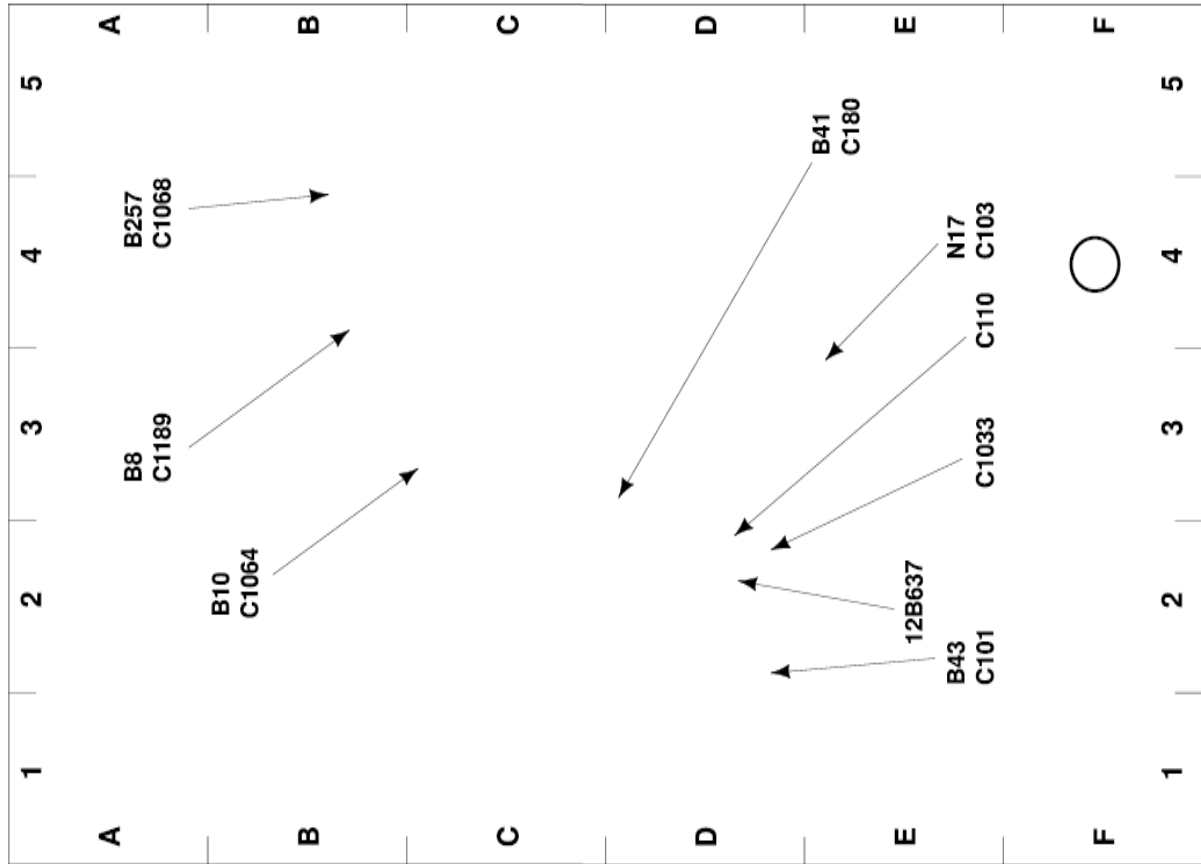


5.4L engine, front

12B637	E 2
B8	... Throttle Position Sensor (TPS) (9B989)	A 3
B10	.. Engine Coolant Temperature (ECT) sensor (12A648)	B 2
B41	... Camshaft position sensor (6B288)	E 5
B43	.. Crankshaft position sensor (6C315)	E 2
B257	.. Differential pressure feedback EGR (DPFE) sensor (9J460)	A 4
C101	E 2
C103	E 4
C110	E 4
C180	E 5
C1033	E 3
C1064	B 2
C1068	A 4
C1189	A 3
N17	.. Oil pressure switch (9278)	E 4

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02


Component Location Views 151-10

5.4L engine, LH side

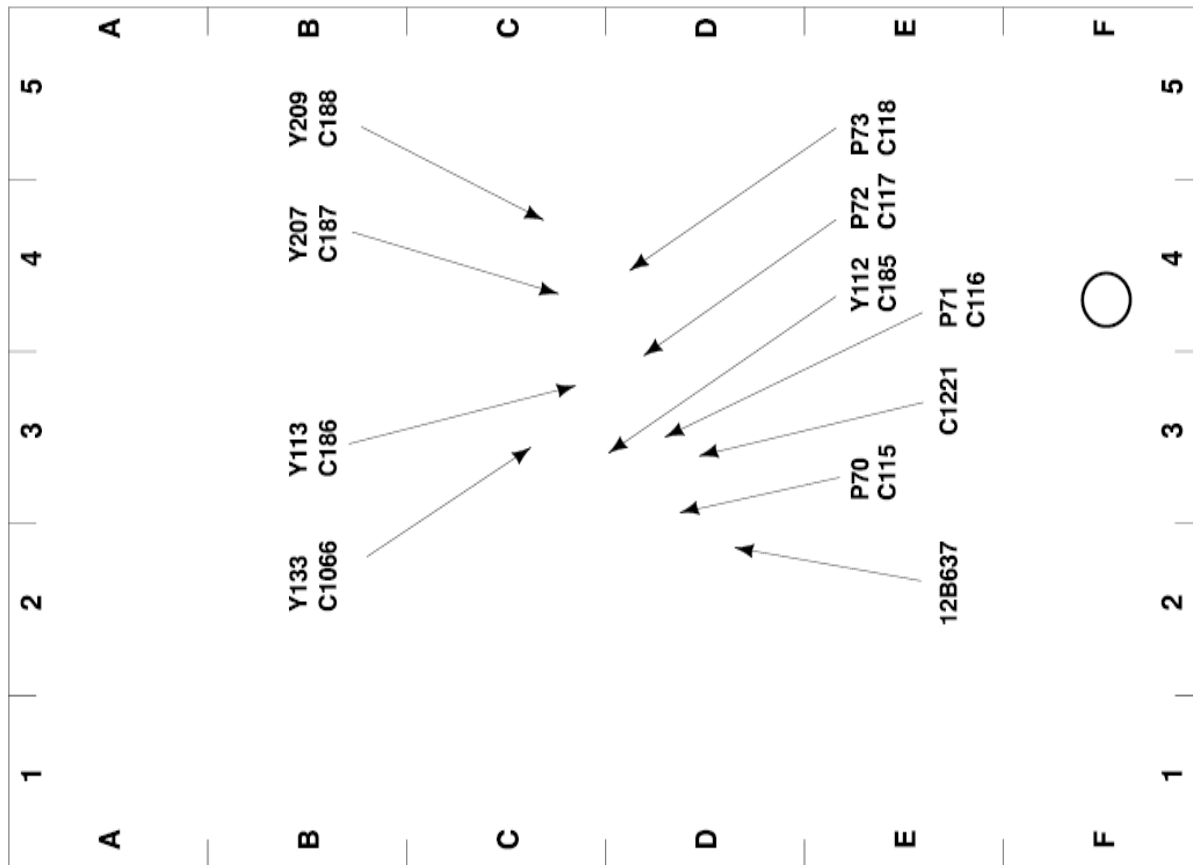

12B637	E2
C115	E3
C116	E4
C117	E4
C118	E5
C185	E4
C186	B3
C187	B4
C188	B5
C1066	B2
C1221	E3
P70	Coil On Plug (COP) 5 (12029)	E3
P71	Coil On Plug (COP) 6 (12029)	E4
P72	Coil On Plug (COP) 7 (12029)	E4
P73	Coil On Plug (COP) 8 (12029)	E5
Y112	Fuel injector 5 (9F593)	E4
Y113	Fuel injector 6 (9F593)	B3
Y133	Idle air control valve (IAC) (9F715)	B2
Y207	Fuel injector 7 (9F593)	B4
Y209	Fuel injector 8 (9F593)	B5

151-11 Component Location Views

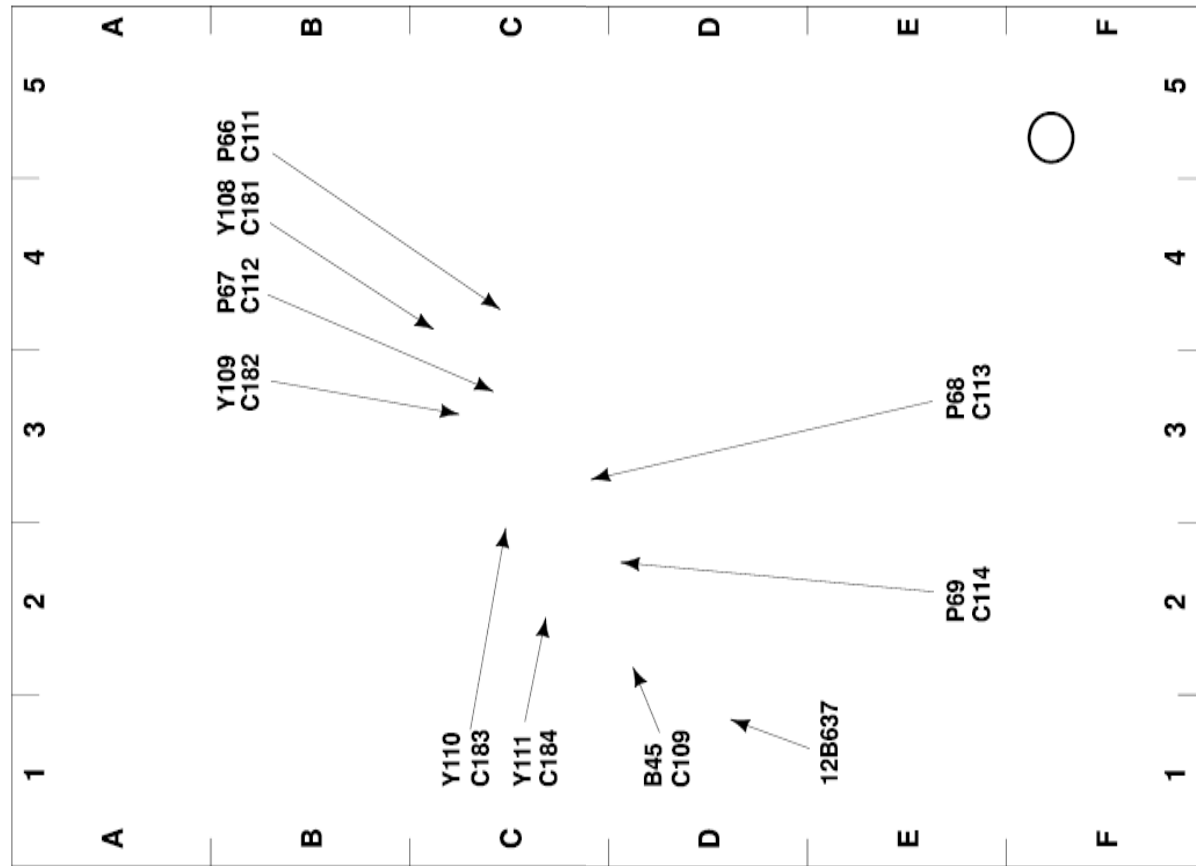


5.4L engine, RH side

12B637	E1
B45	Knock sensor (12A699)	D1
C109	D1
C111	B5
C112	B4
C113	E3
C114	E2
C181	B4
C182	B3
C183	C1
C184	C1
P66	Coil On Plug (COP) 1 (12029)	B5
P67	Coil On Plug (COP) 2 (12029)	B4
P68	Coil On Plug (COP) 3 (12029)	E3
P69	Coil On Plug (COP) 4 (12029)	E2
Y108	Fuel injector 1 (9F593)	B4
Y109	Fuel injector 2 (9F593)	B3
Y110	Fuel injector 3 (9F593)	C1
Y111	Fuel injector 4 (9F593)	C1

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02


Component Location Views 151-12

6.8L engine front

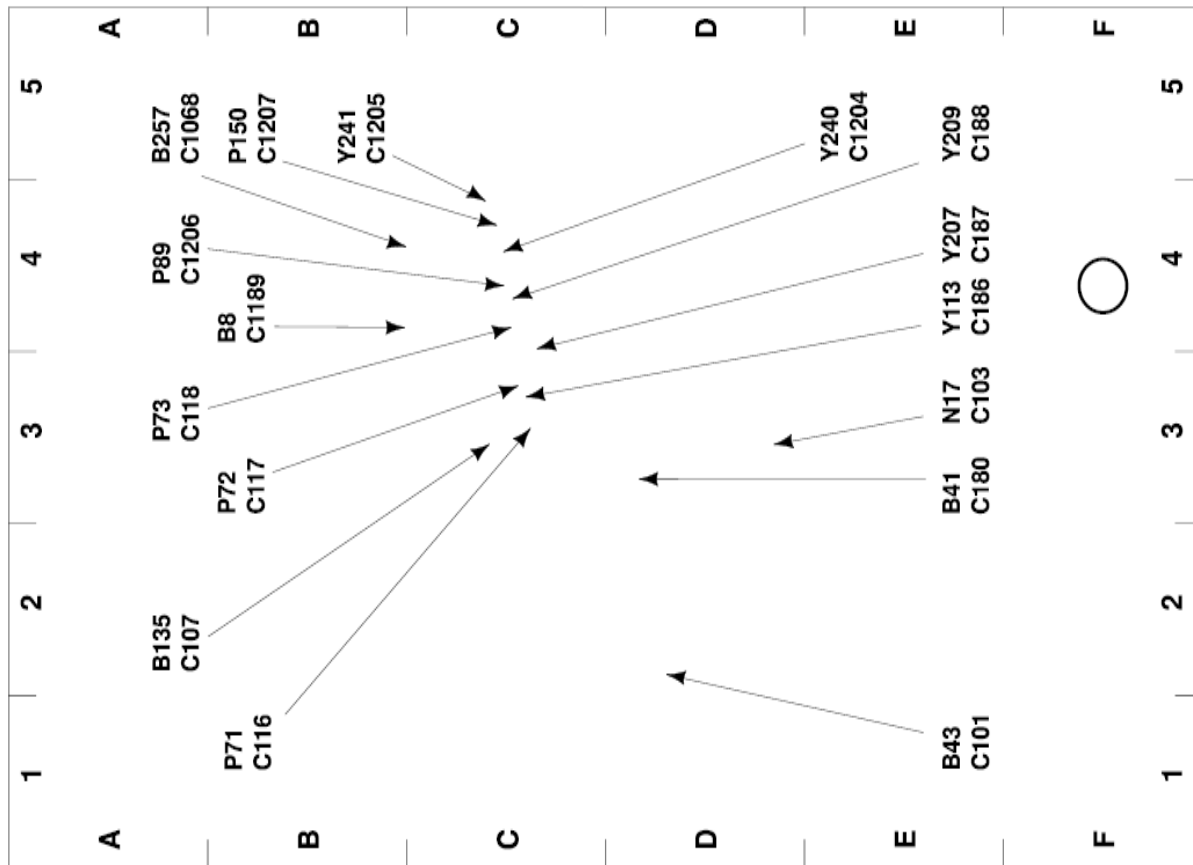

- B8 . . . Throttle Position Sensor (TPS) (9B989) B 4
- B41 . . . Camshaft position sensor (6B288) E 3
- B43 . . . Crankshaft position sensor (6C315) E 1
- B135 . . . Cylinder . . . head temperature sensor (6G004) A 2
- B257 . . . Differential pressure feedback EGR (DPFE) sensor (9J460) A 5
- C101 E 1
- C103 E 3
- C107 A 2
- C116 B 1
- C117 B 3
- C118 A 3
- C180 E 3
- C186 E 4
- C187 E 4
- C188 E 5
- C1068 A 5
- C1189 B 4
- C1204 E 5
- C1205 B 5
- C1206 A 4
- C1207 B 5
- N17 . . . Oil pressure switch (9278) E 3
- P71 . . . Coil On Plug (COP) 6 (12029) B 1
- P72 . . . Coil On Plug (COP) 7 (12029) B 3
- P73 . . . Coil On Plug (COP) 8 (12029) A 3
- P89 . . . Coil On Plug (COP) 9 A 4
- P150 . . . Coil On Plug (COP) 10 B 5
- Y113 . . . Fuel injector 6 (9F593) E 4
- Y207 . . . Fuel injector 7 (9F593) E 4
- Y209 . . . Fuel injector 8 (9F593) E 5
- Y240 . . . Fuel injector 9 (9F593) E 5
- Y241 . . . Fuel injector 10 (9F593) B 5

151-13 Component Location Views

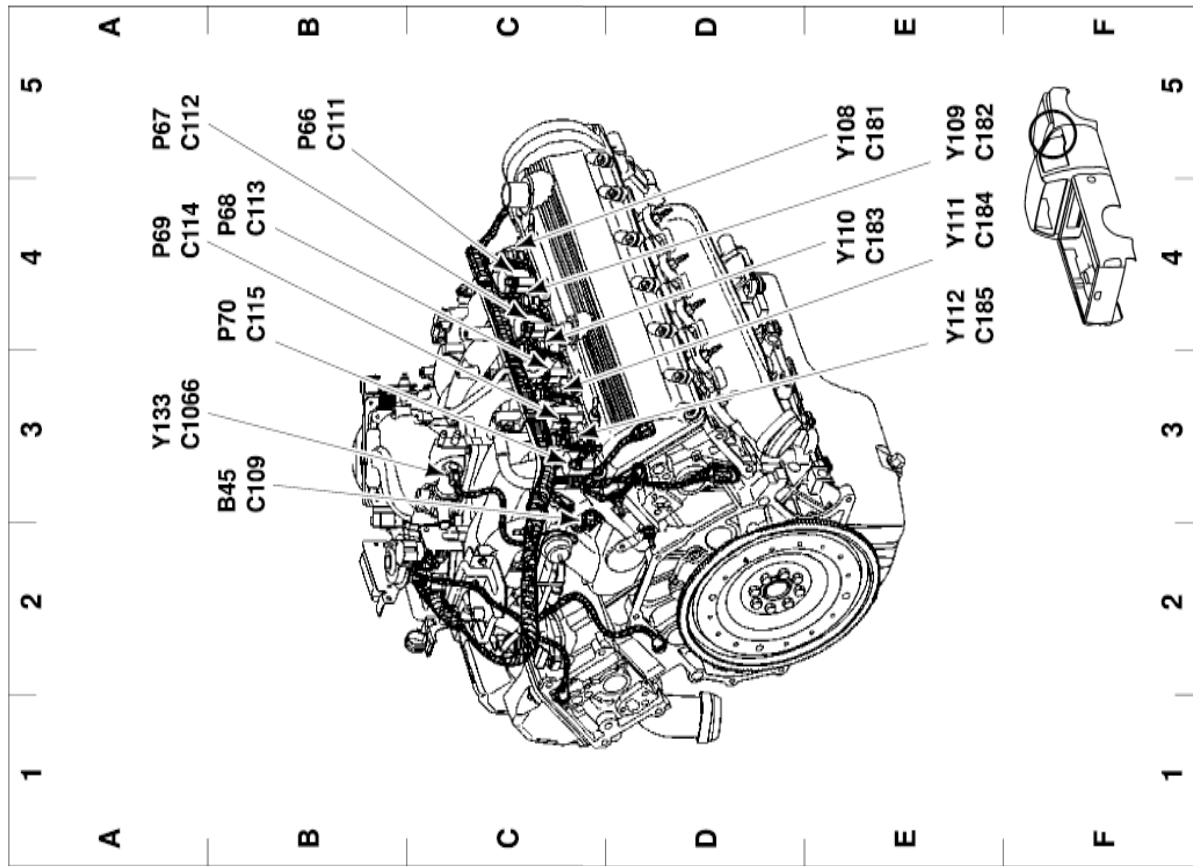


6.8L engine rear

B45	Knock sensor (12A699)	B 3
C109		B 3
C111		B 5
C112		A 5
C113		B 4
C114		A 4
C115		B 4
C181		E 5
C182		E 5
C183		E 4
C184		E 4
C185		E 4
C1066		A 3
P66	Coil On Plug (COP) 1 (12029)	B 5
P67	Coil On Plug (COP) 2 (12029)	A 5
P68	Coil On Plug (COP) 3 (12029)	B 4
P69	Coil On Plug (COP) 4 (12029)	A 4
P70	Coil On Plug (COP) 5 (12029)	B 4
Y108	Fuel injector 1 (9F593)	E 5
Y109	Fuel injector 2 (9F593)	E 5
Y110	Fuel injector 3 (9F593)	E 4
Y111	Fuel injector 4 (9F593)	E 4
Y112	Fuel injector 5 (9F593)	E 4
Y133	Idle air control valve (IAC) (9F715)	A 3

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02


Component Location Views 151-14

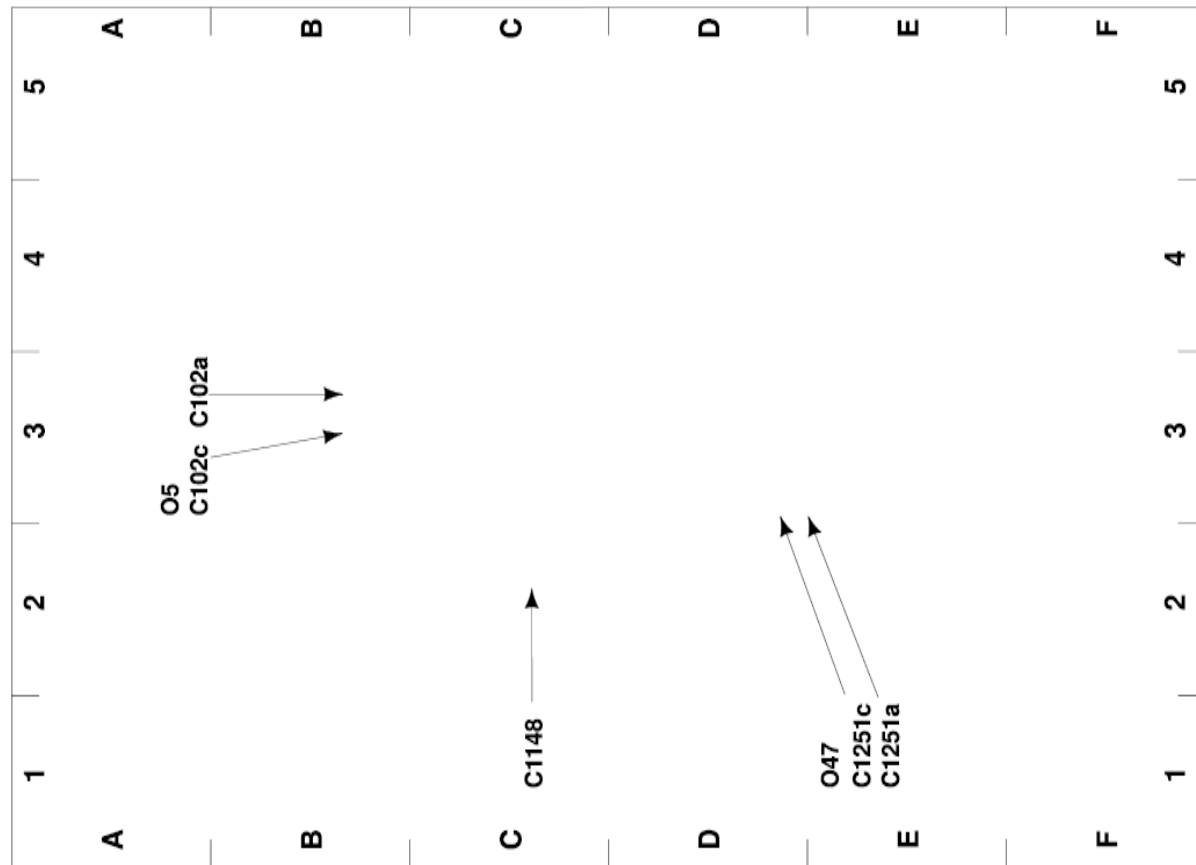

- engine compartment**
- C102a A 3
 - C102c A 3
 - C1148 C 1
 - C1251a E 1
 - C1251c E 1
 - O5 . . Generator A 3
 - O47 . Generator, secondary E 1


Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02

151-15 Component Location Views

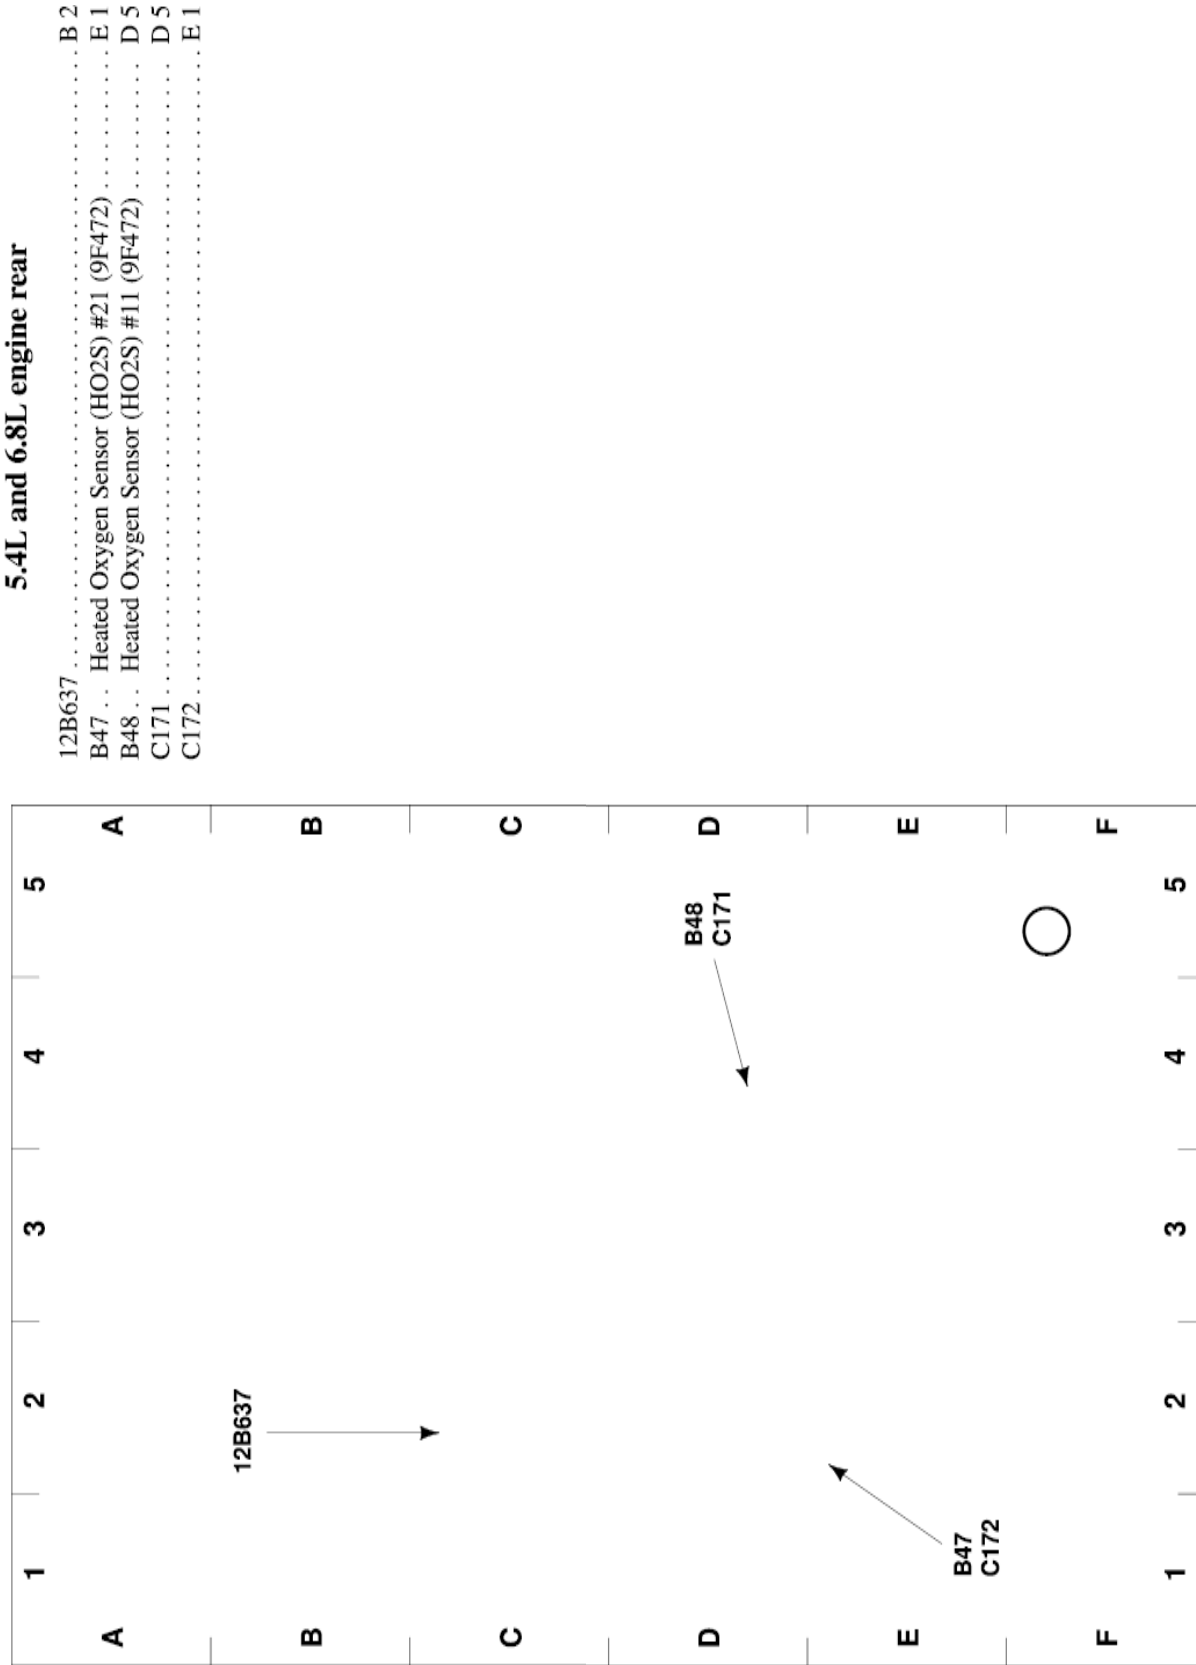

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02

Component Location Views 151-16

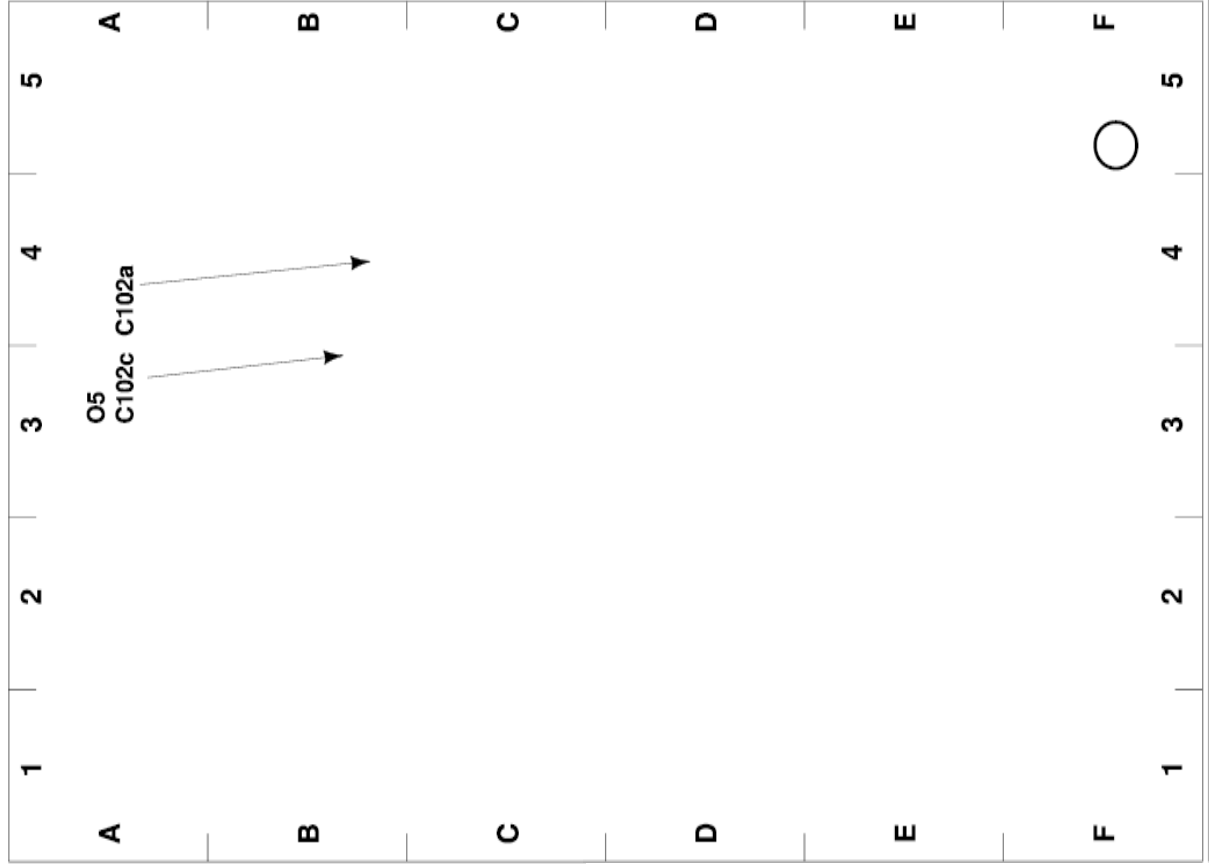


engine compartment

- C102c A 3
- C102a A 4
- O5 ... Generator A 3

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02

151-17 Component Location Views

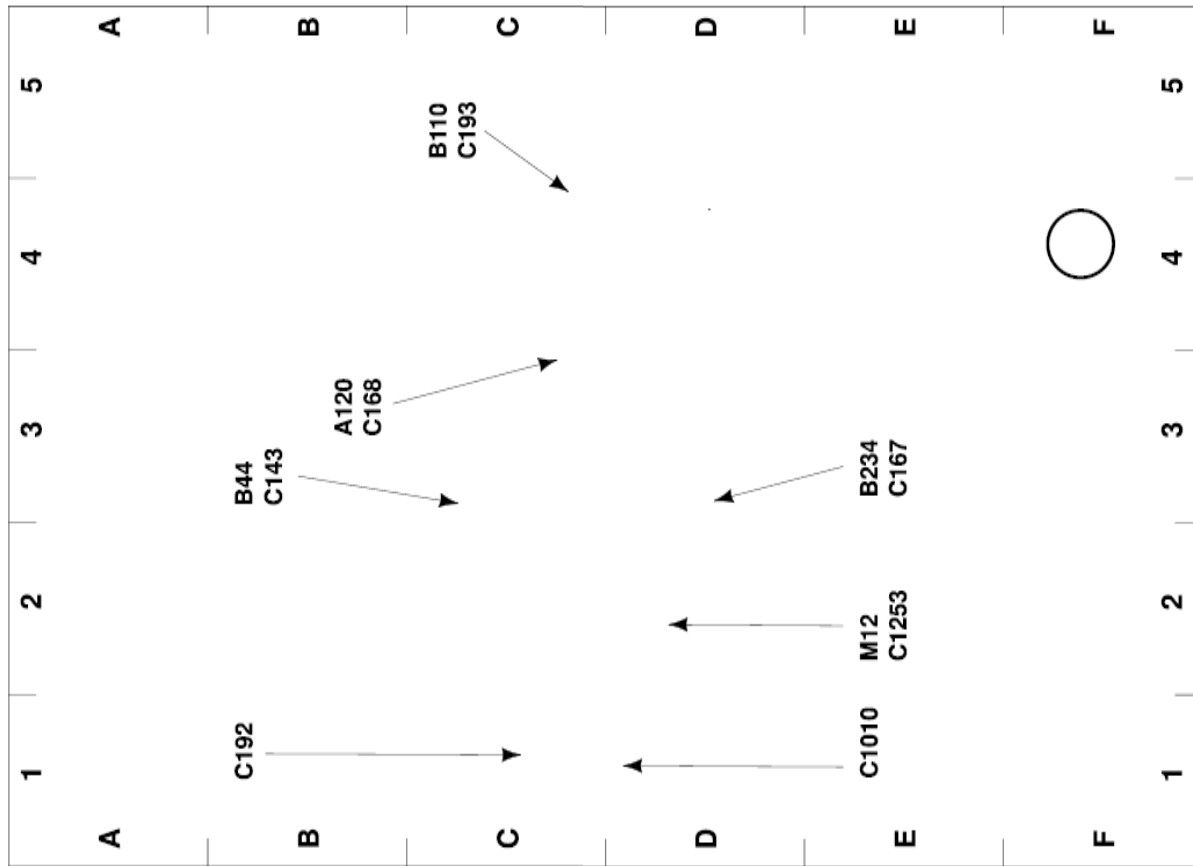

4X2 automatic transmission


A120	Automatic transmission module (7G422)	B 3
B44	Turbine shaft speed sensor (7M101)	B 3
B110	Output Shaft Speed (OSS) sensor (7M101)	C 5
B234	Digital Transmission Range (DTR) sensor (7F293)	E 3
C143		B 3
C167		E 3
C168		B 3
C192		B 1
C193		C 5
C1010		E 1
C1253		E 2
M12	Fuel pump	E 2

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02

Component Location Views 151-18


4X4 automatic transmission

- A257 Transfer case assembly E 4
- C350b E 3
- C350a E 4

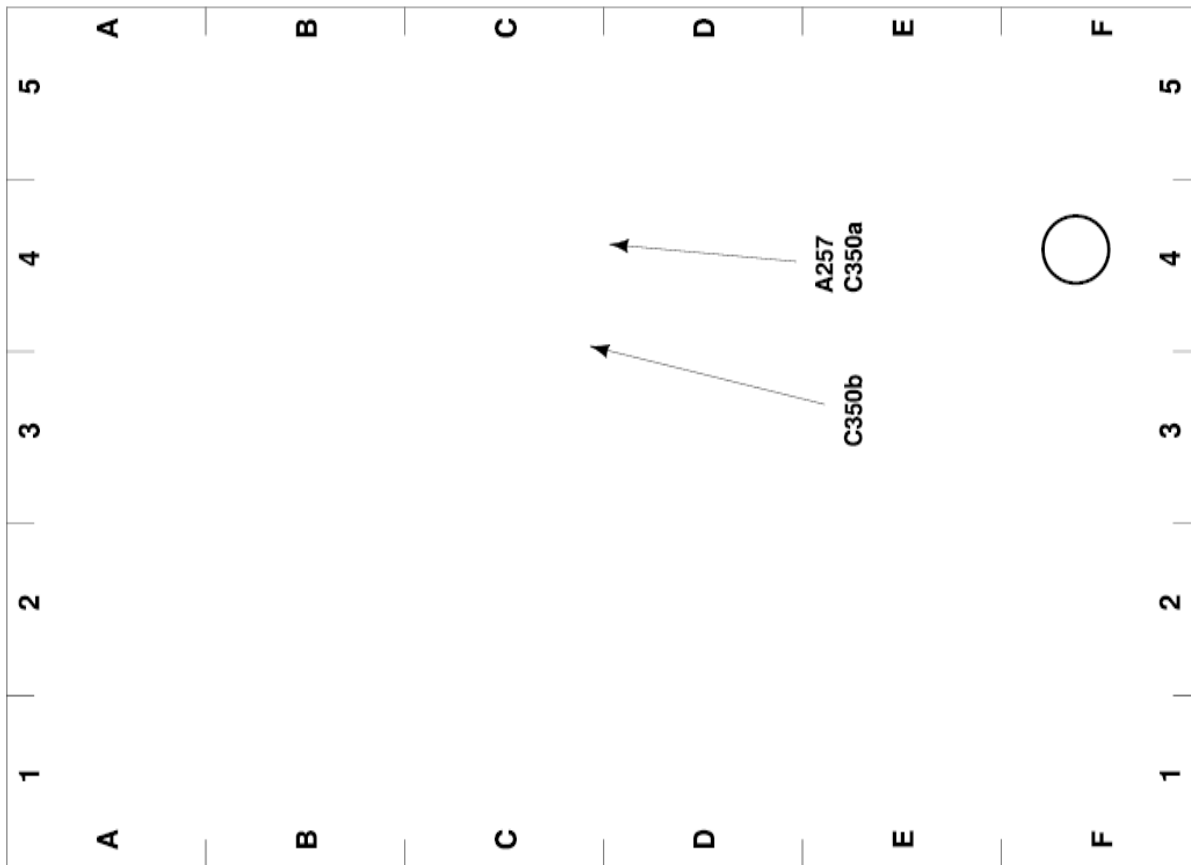

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02

151-19 Component Location Views

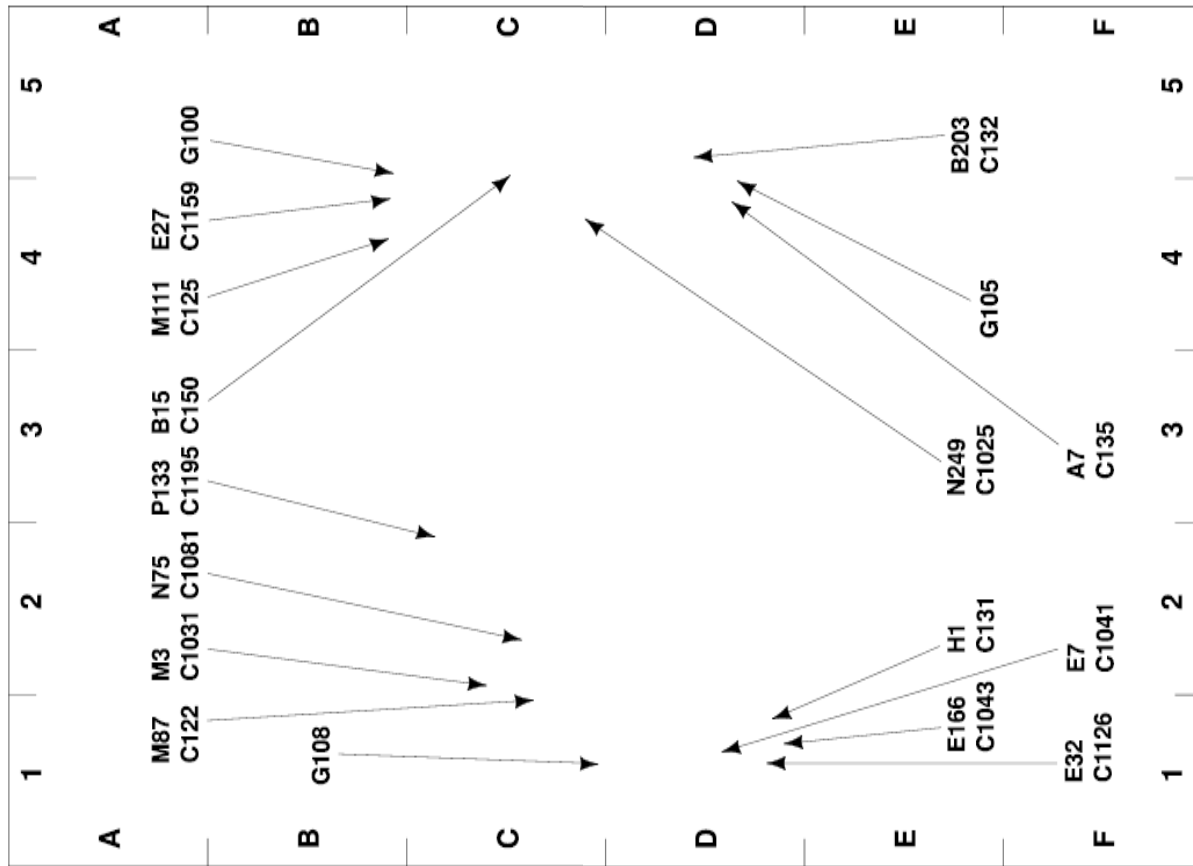


engine compartment

- A7 . . . ABS control module (2C219) F3
- B15 . . . Wheel speed sensor, left front (2C205) A3
- B203 . . . Ambient air temperature sensor (19E702) E5
- C122 A1
- C125 A4
- C131 E2
- C132 E5
- C135 F3
- C150 A3
- C1025 E3
- C1031 A2
- C1041 F2
- C1043 E1
- C1081 A2
- C1126 F1
- C1159 A4
- C1195 A3
- E7 Headlamp, right (13008) F2
- E27 Engine compartment lamp A4
- E32 Side lamp, right front (13411) F1
- E166 Park/turn lamp, right front (13411) E1
- G100 A5
- G105 E4
- G108 B1
- H1 Horn (13832) E2
- M3 Heater blower motor (19805) A2
- M87 Speed control servo (9C735) A1
- M111 Windshield wiper motor (17508) A4
- N75 A/C compressor cycling switch (19E561) A2
- N249 Brake pressure switch (2B264) E3
- P133 Vapor management valve A3


Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02

Component Location Views 151-20

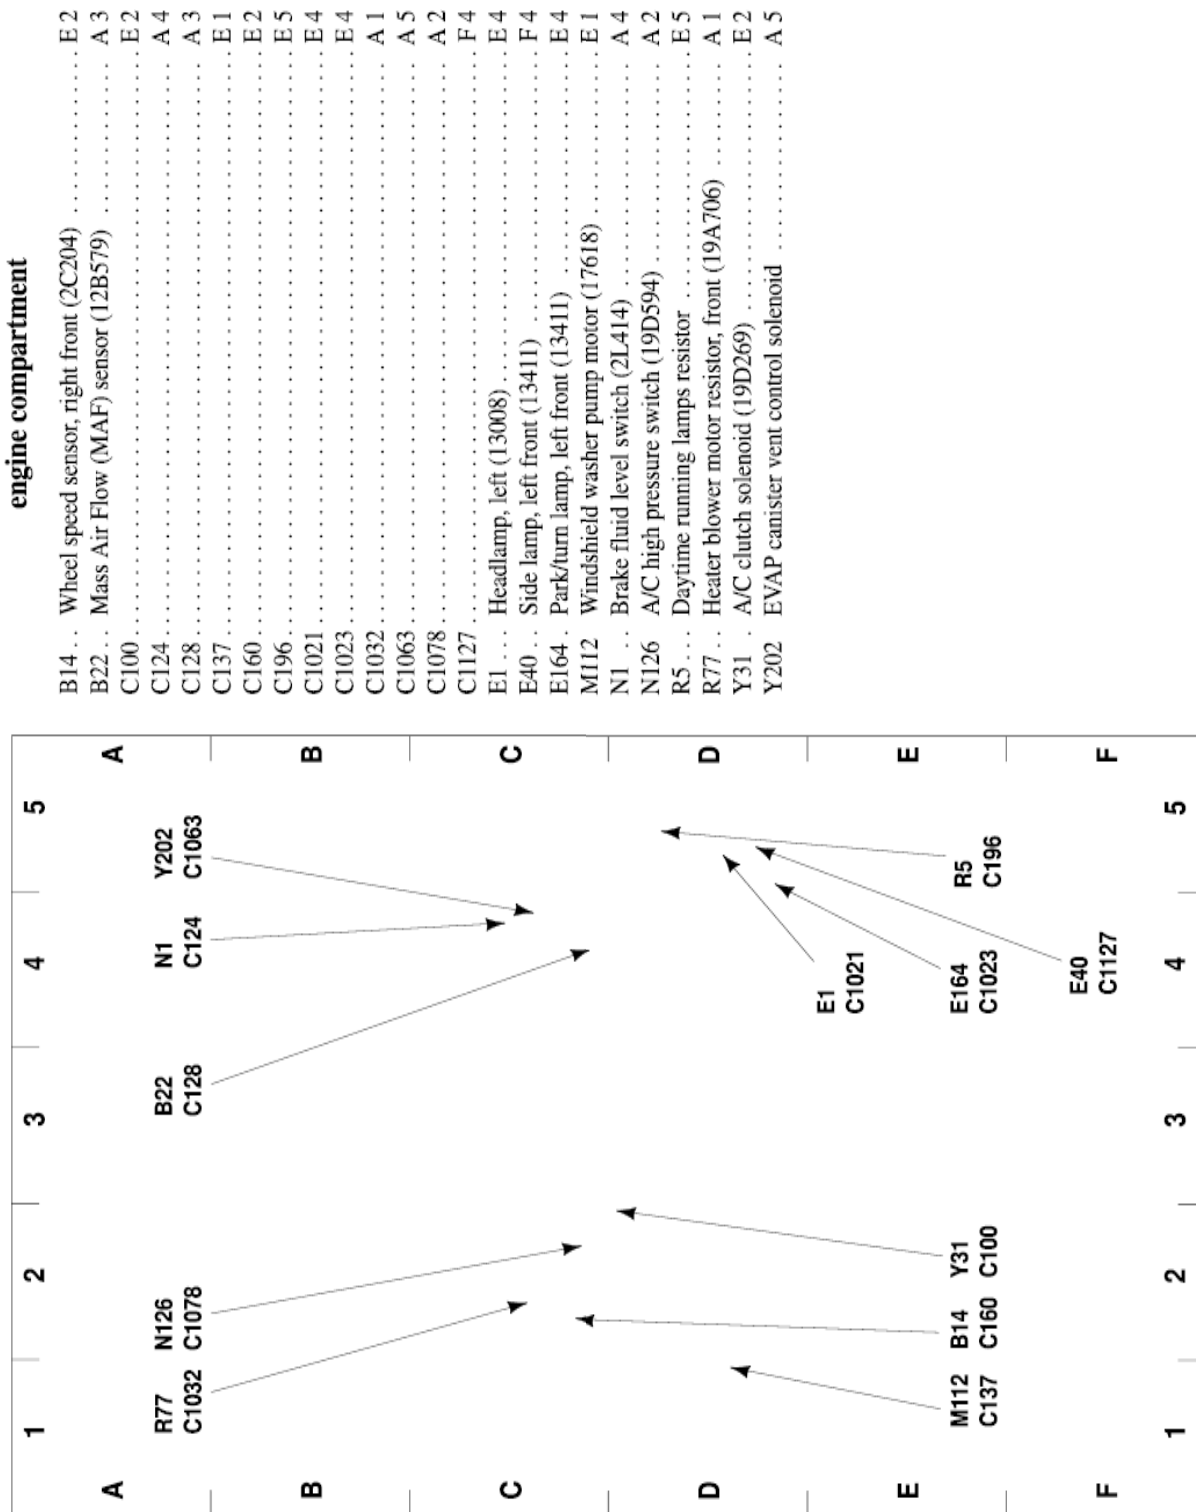

Excursion, Super Duty Series F, . . . 250, F, . . . 350, F, . . . 450, F

151-21 Component Location Views

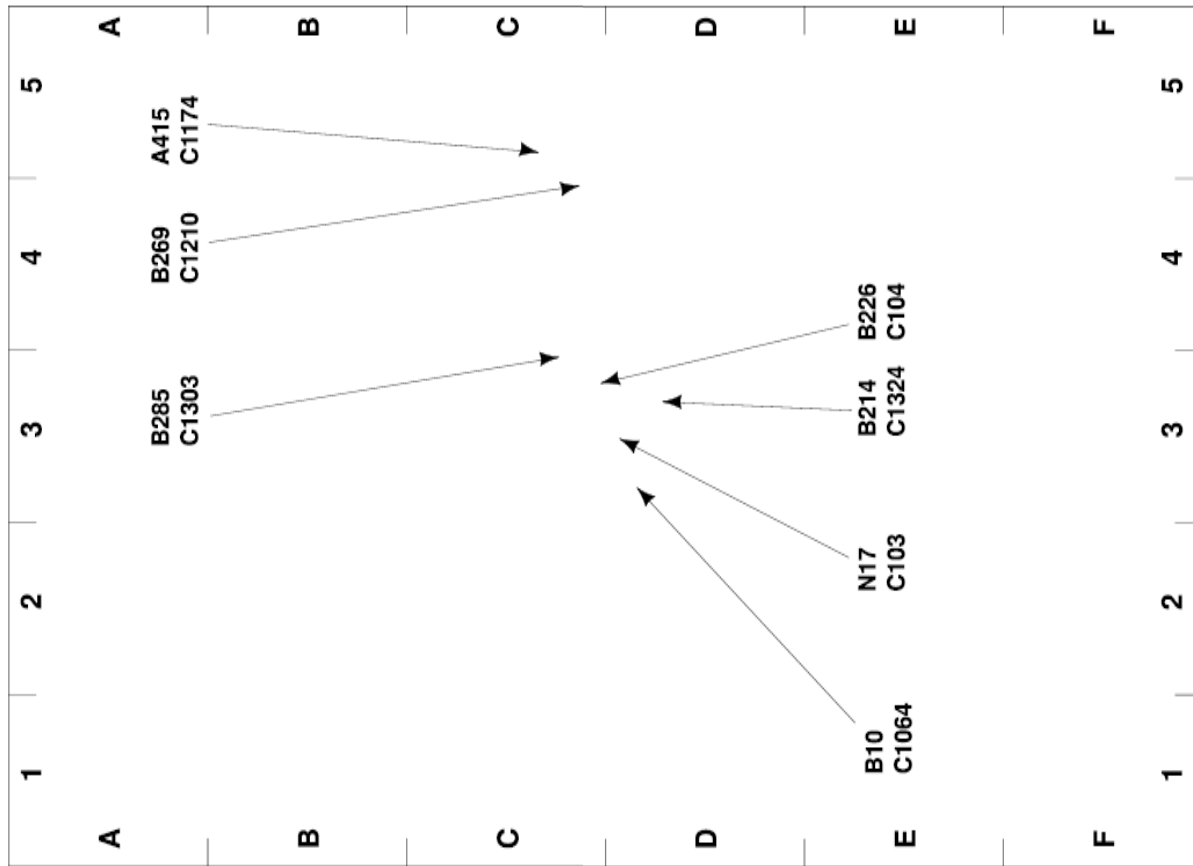


engine compartment, 7.3L Diesel

A415	Injector Driver Module (IDM)	A 5
B10	Engine Coolant Temperature (ECT) sensor (12A648)	E 1
B214	Coolant temperature sensor 2	E 3
B226	Engine Oil Temperature (EOT) sensor	E 4
B269	Air filter sensor	A 4
B285	Injection pressure sensor	A 3
C103		E 2
C104		E 4
C1064		E 1
C1174		A 5
C1210		A 4
C1303		A 3
C1324		E 3
N17	Oil pressure switch (9278)	E 2

Excursion, Super Duty Series F, , , 250, F, , , 350, F, , , 450, F, , , 550, , , 02

Component Location Views 151-22


engine compartment, 7.3L Diesel

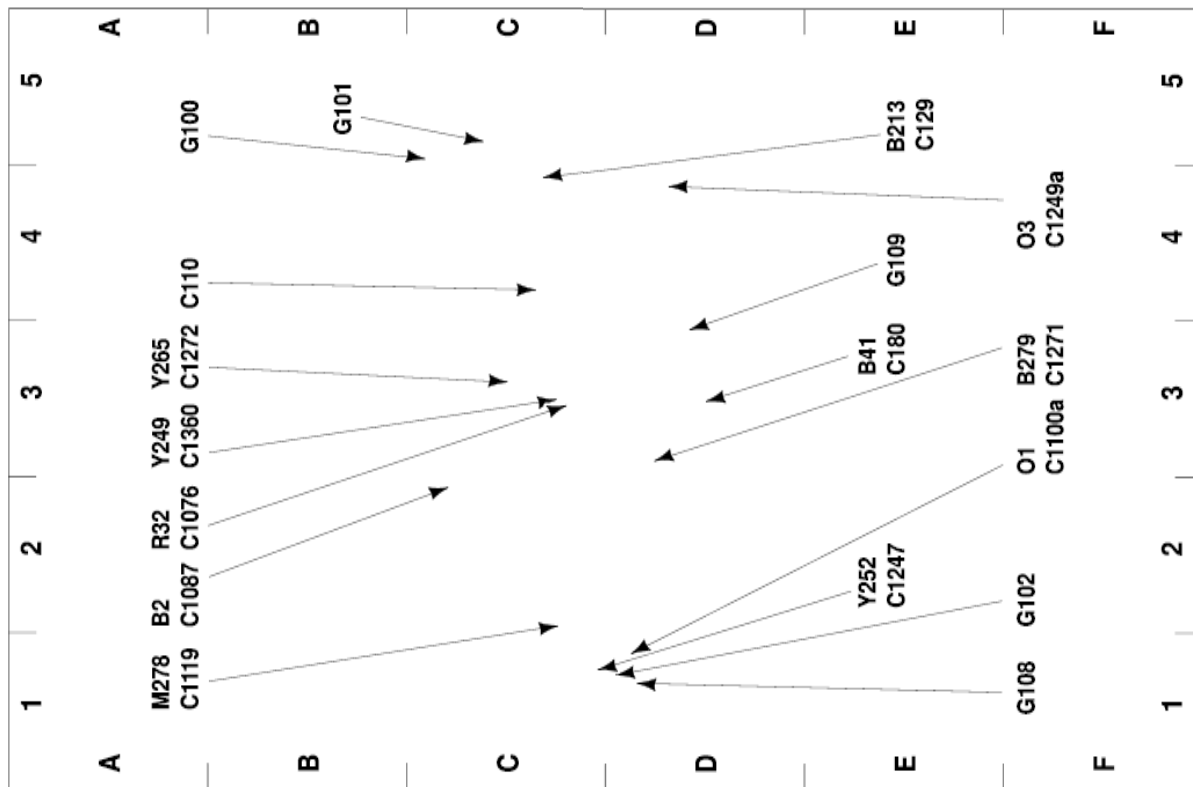

- B2... Manifold Absolute Pressure (MAP) sensor A 2
- B41... Camshaft position sensor (6B288) E 3
- B213... Intake Air Temperature (IAT) sensor (12A697) E 5
- B279... Exhaust Back Pressure (EBP) sensor F 3
- C110 A 4
- C129 E 5
- C180 E 3
- C1076 A 2
- C1087 A 2
- C1100a F 3
- C1119 A 1
- C1247 E 2
- C1249a F 4
- C1271 F 3
- C1272 A 3
- C1360 A 3
- G100 A 5
- G101 B 5
- G102 F 2
- G108 F 1
- G109 E 4
- M278 Vacuum pump motor A 1
- O1... Battery (10655) F 3
- O3... Battery II F 4
- R32... Fuel heater A 2
- Y249 Injection Pressure Regulator (IPR) A 3
- Y252 Electronic Shift On the Fly (ESOF) solenoid E 2
- Y265 Exhaust Pressure Regulator (EPR) A 3

Excursion, Super Duty Series F, . . . 250, F, . . . 350, F, . . . 450, F

151-23 Component Location Views

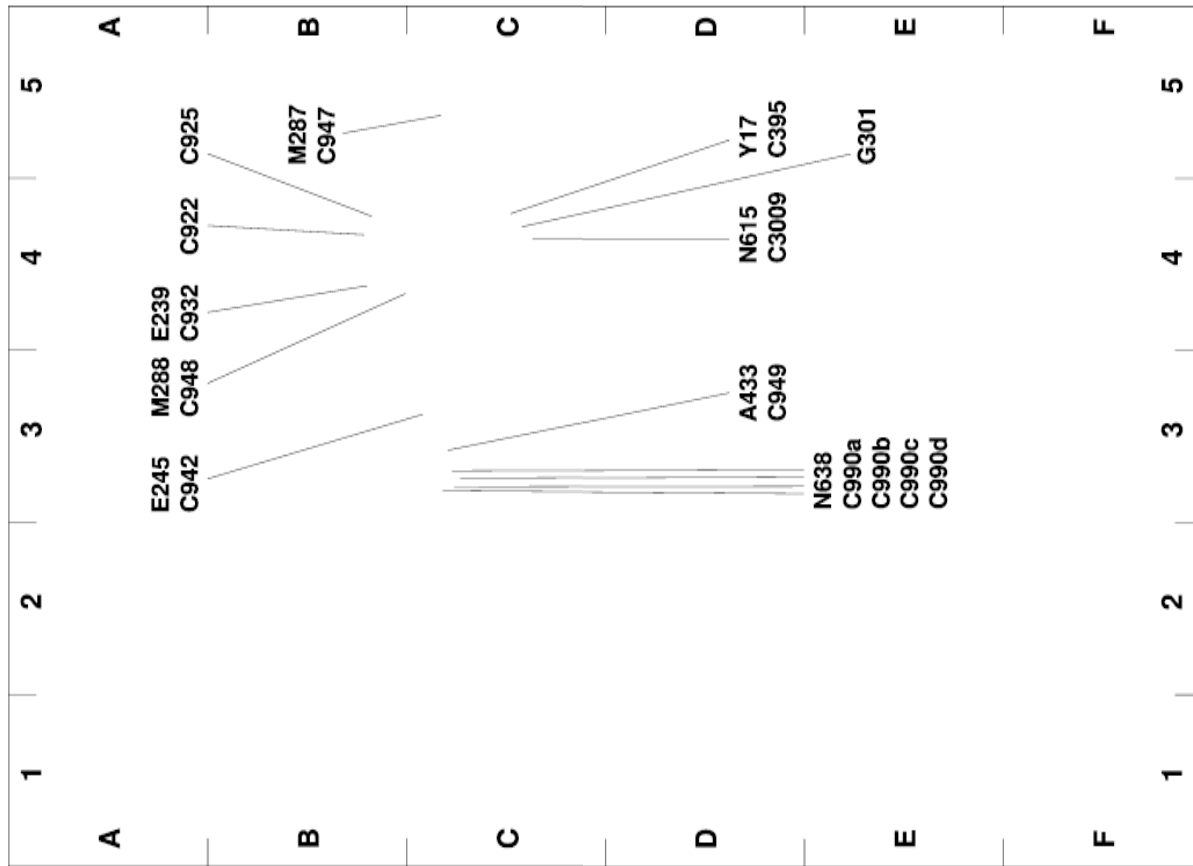


Vehicle interior

A433	DVD player	D3
C395		D5
C922		A4
C925		A5
C932		A4
C942		A3
C947		B5
C948		A3
C949		D3
C990a		E3
C990b		E3
C990c		E3
C990d		E3
C3009		D4
E239	Interior/map lamps assembly, rear	A4
E245	Rail lamp, RH side (13776)	A3
G301		E5
M287	Power vent window motor, left	B5
M288	Power vent window motor, right	A3
N615	Power point, C pillar (19N236)	D4
N638	Auxiliary function selector switch assembly, rear	E3
Y17	Speaker, left rear (18808)	D5

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02


Component Location Views 151-24

in roof panel

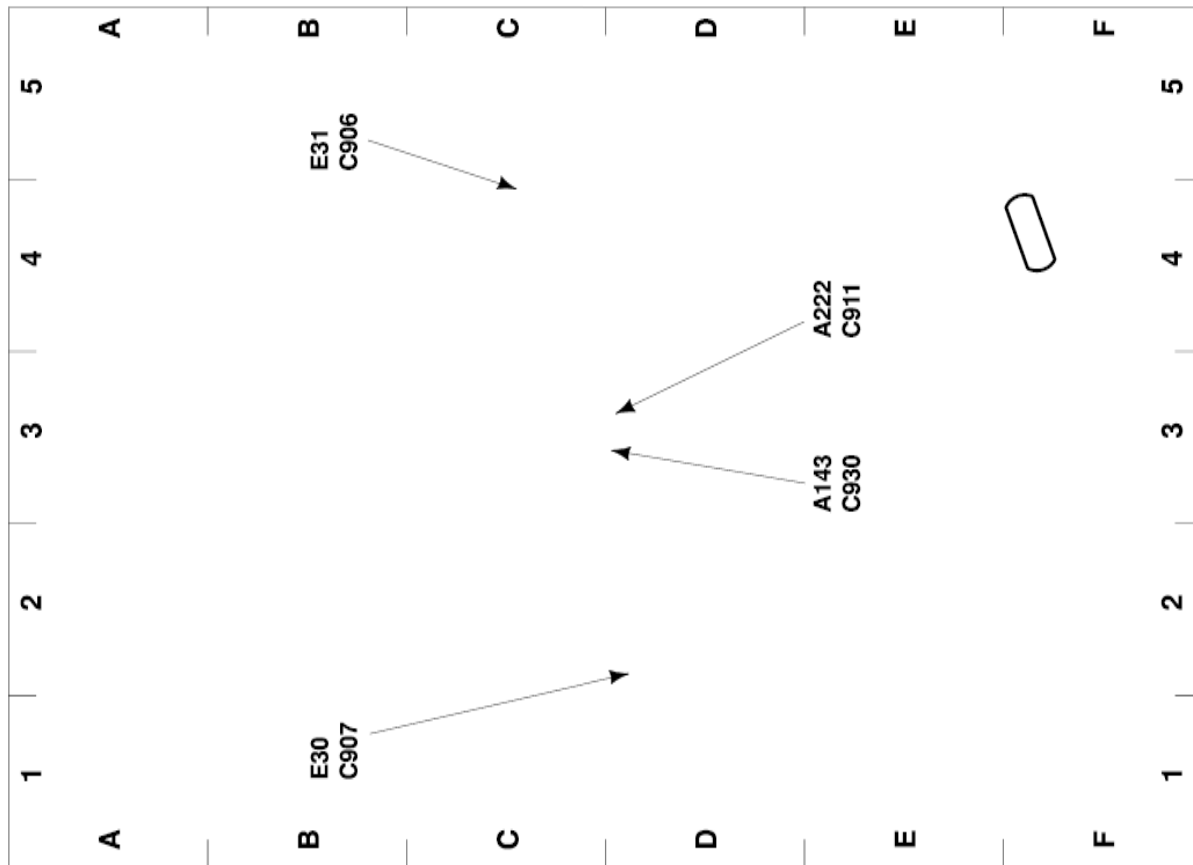

- A143 Overhead console E3
- A222 Auto. , , dimming interior mirror unit (17700) E4
- C906 B5
- C907 B1
- C911 E4
- C930 E3
- E30 . . Vanity mirror lamp, left (04100) B1
- E31 . . Vanity mirror lamp, right (04100) B5

151-25 Component Location Views

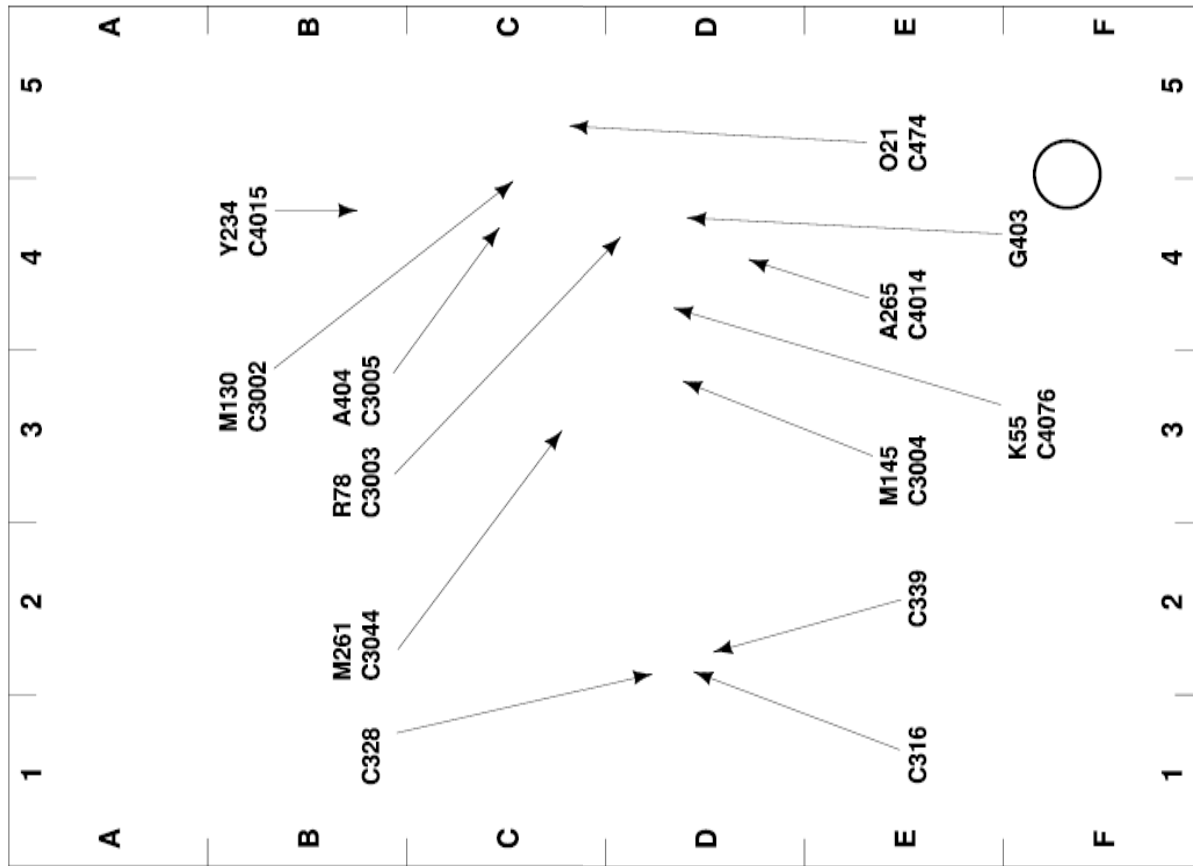


Vehicle interior, RH side, after C. . . pillar

A265	Parking Aid Module (PAM) (15K866)	E 4
A404	Rear A/C control module	B 3
C316		E 1
C328		B 1
C339		E 2
C474		E 5
C3002		B 3
C3003		B 3
C3004		E 3
C3005		B 3
C3044		B 2
C4014		E 4
C4015		B 4
C4076		F 3
G403		F 4
K55	High speed blower motor relay	F 3
M130	Blower motor, rear (18456)	B 3
M145	Blend door actuator, rear (19E616)	E 3
M261	Mode door actuator, rear (19E616)	B 2
O21	Power point, rear (19G247)	E 5
R78	Heater blower motor resistor, rear (19A706)	B 3
Y234	Parking aid speaker	B 4

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02


Component Location Views 151-26

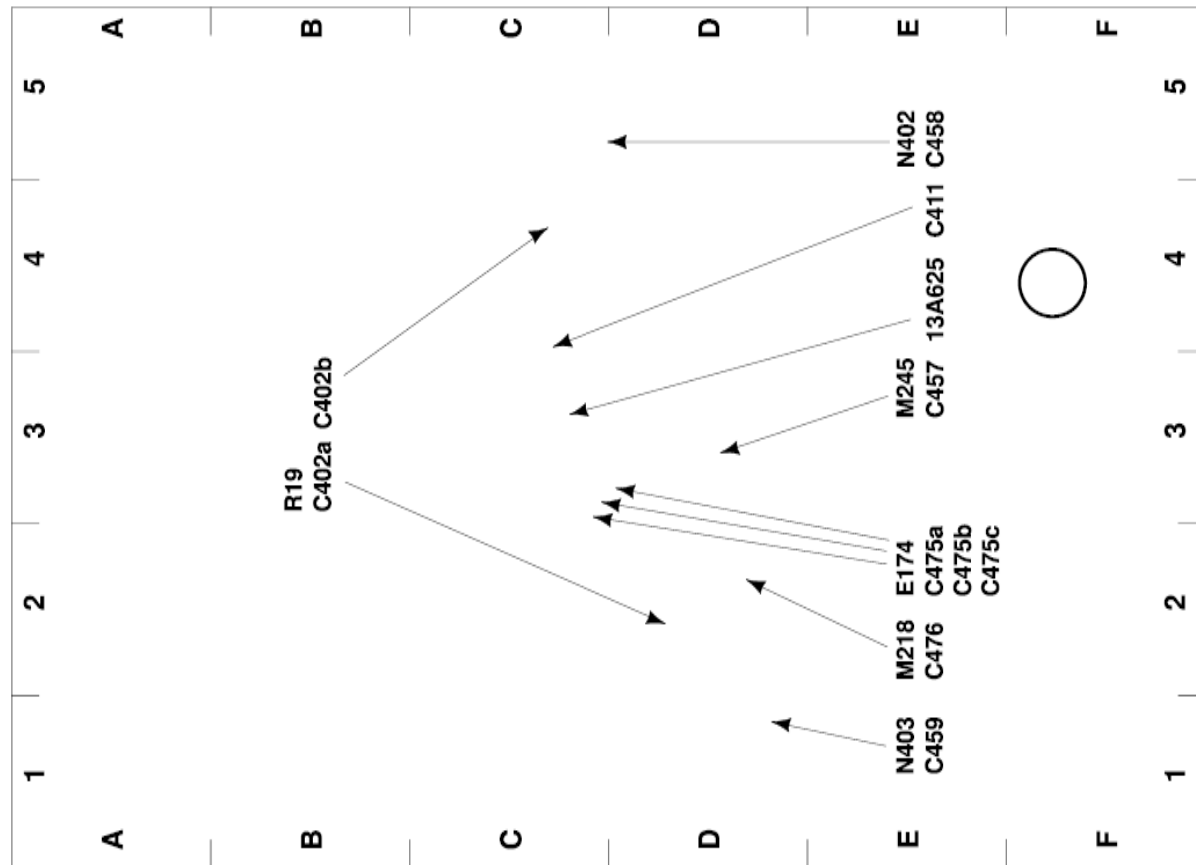

in liftgate

13A625	E4
C402b	B3
C402a	B3
C411	E4
C457	E3
C458	E5
C459	E1
C475a	E2
C475b	E2
C475c	E2
C476	E2
E174	High mounted stoplamp (13A613)	E2
M218	Rear wiper motor assembly	E2
M245	Liffigate lock actuator	E3
N402	Liffigate ajar switch, left	E5
N403	Liffigate ajar switch, right	E1
R19	Rear window defrost grid (18C618)	B3

151-27 Component Location Views

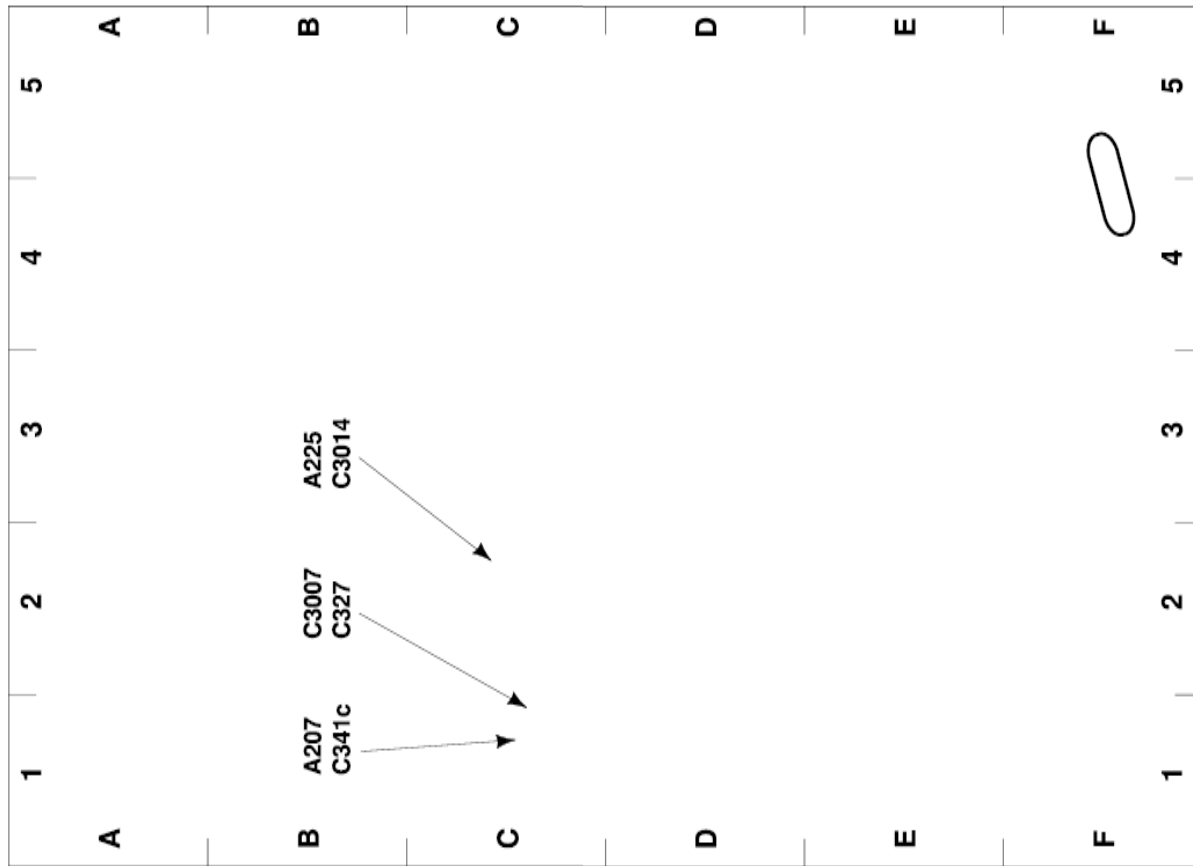


vehicle floor, LH side

A207	Driver seat module (14C718)	B 1
A225	Driver safety belt retractor pretensioner	B 3
C327		B 2
C341c		B 1
C3007		B 2
C3014		B 3

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02


Component Location Views 151-28

in RH rear door

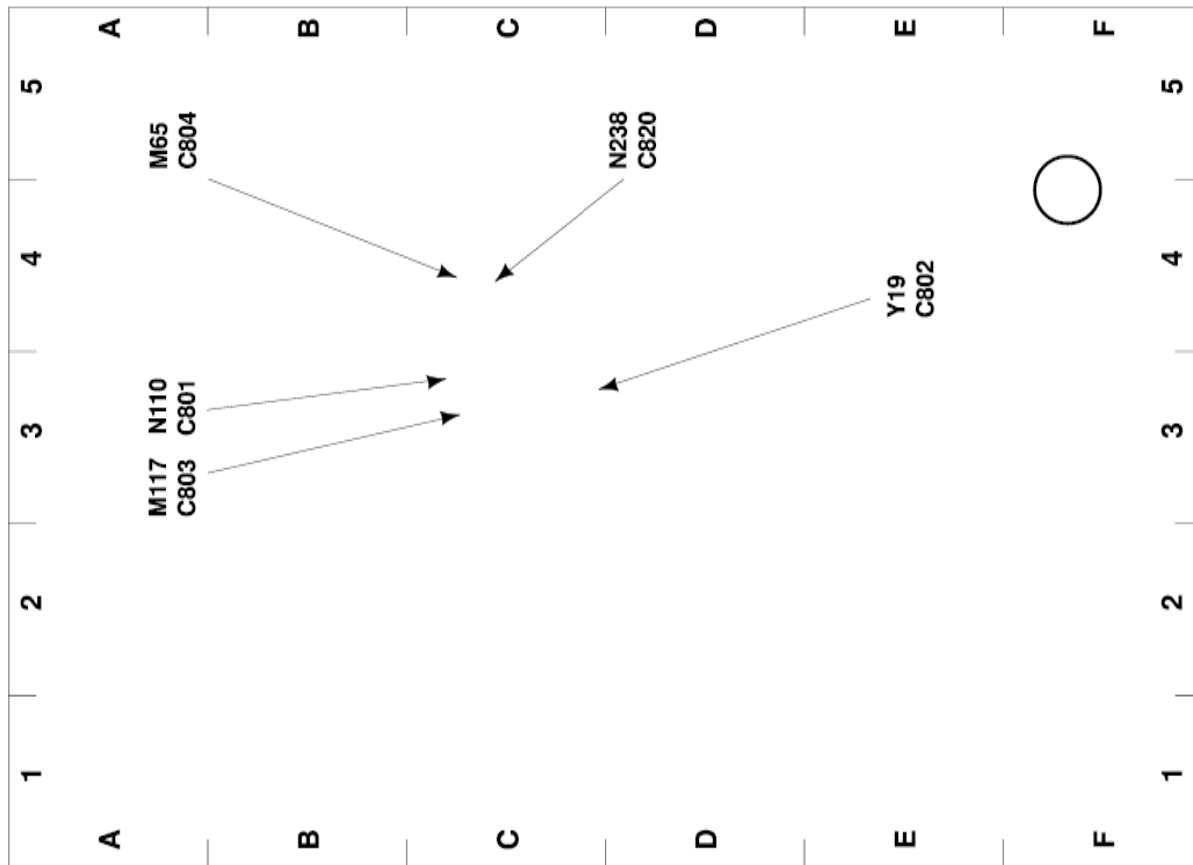

C801	A 3
C802	E 4
C803	A 3
C804	A 5
C820	D 5
M65	Door lock actuator, right rear (218A42)	A 5
M117	Power window motor, right rear (23394)	A 3
N110	Window adjust switch, right rear (14A412)	A 3
N238	Door ajar switch, passenger side rear (14018)	D 5
Y19	Speaker, right rear (18808)	E 4

151-29 Component Location Views

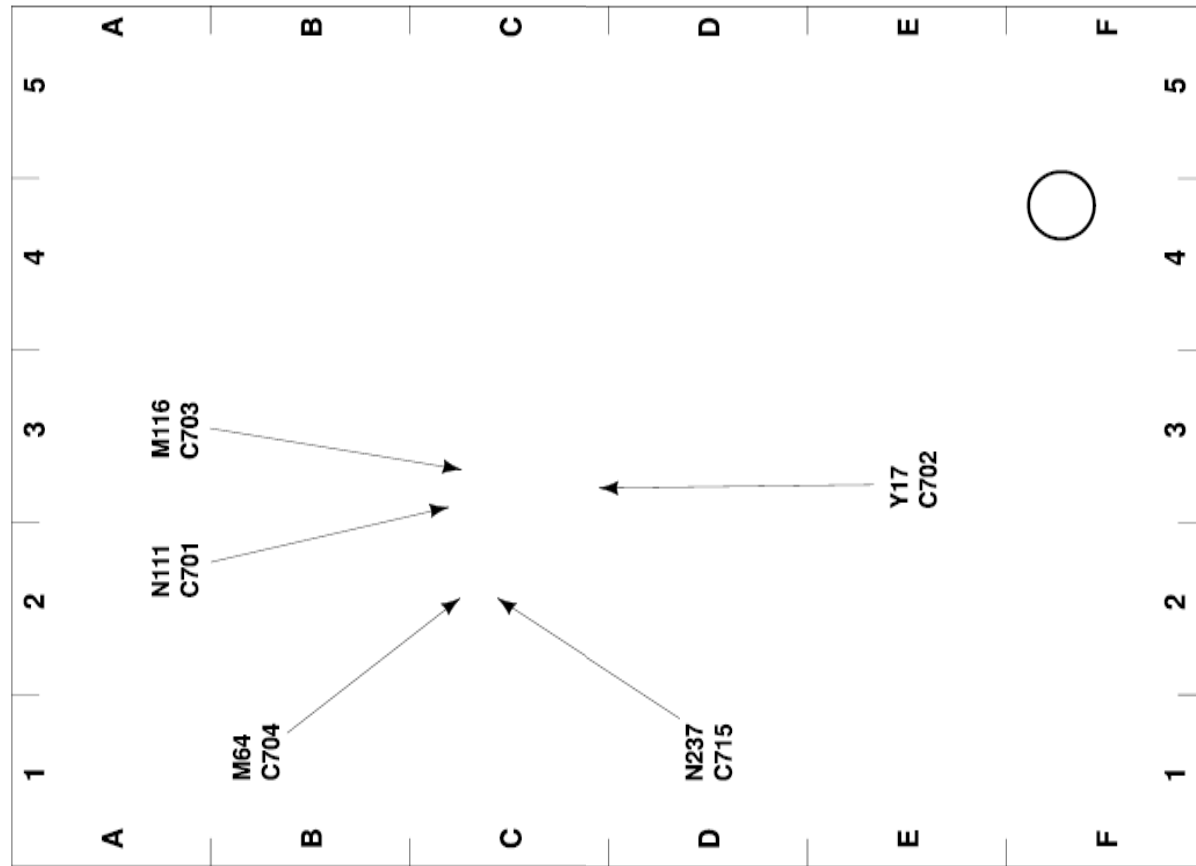

in LH rear door


- C701 A 2
- C702 E 3
- C703 A 3
- C704 B 1
- C715 D 1
- M64 . Door lock actuator, left rear (218A43) B 1
- M116 Power window motor, left rear (23394) A 3
- N111 . Window adjust switch, left rear (14A412) A 2
- N237 Door ajar switch, driver side rear (14018) D 1
- Y17 . Speaker, left rear (18808) E 3

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02


Component Location Views 151-30

Front door, Driver side shown, passenger side similar

A244	Key pad switch assembly	B 2
C500		B 2
C504a		B 3
C504b		B 4
C505		B 3
C506		E 2
C510		B 2
C521		E 4
C523		E 4
C524		E 3
C525		B 1
C526		E 1
C527		B 4
C601		E 4
C602		E 1
C603		B 1
C604		B 3
C605		B 3
C606		E 2
C608		E 3
C612		E 4
E177	Door entry lamp, left front (13776)	E 2
E178	Door entry lamp, right front (13776)	E 2
M79	Power window motor, passenger side front (23394)	E 3
M80	Power window motor, driver side front (23395)	E 3
M220	Exterior rear view mirror, driver side (17682)	E 4
M221	Exterior rear view mirror, passenger side (17683)	E 4
M226	Door lock actuator, passenger side (218A42)	B 1
M241	Door lock actuator, left front	B 1
N105	Window adjust switch, passenger side	B 3
N204	Door lock switch, driver side (14028)	B 3
N205	Door lock switch, passenger side (14028)	B 3
N239	Door ajar switch, driver side front (14018)	E 1
N240	Door ajar switch, passenger side front (14018)	E 1
N409	Exterior rear view mirror switch (17B676)	B 4
N447	Master window adjust switch (14529)	B 3
Y18	Speaker, right front (18808)	E 4
Y28	Speaker, left front (18808)	E 4

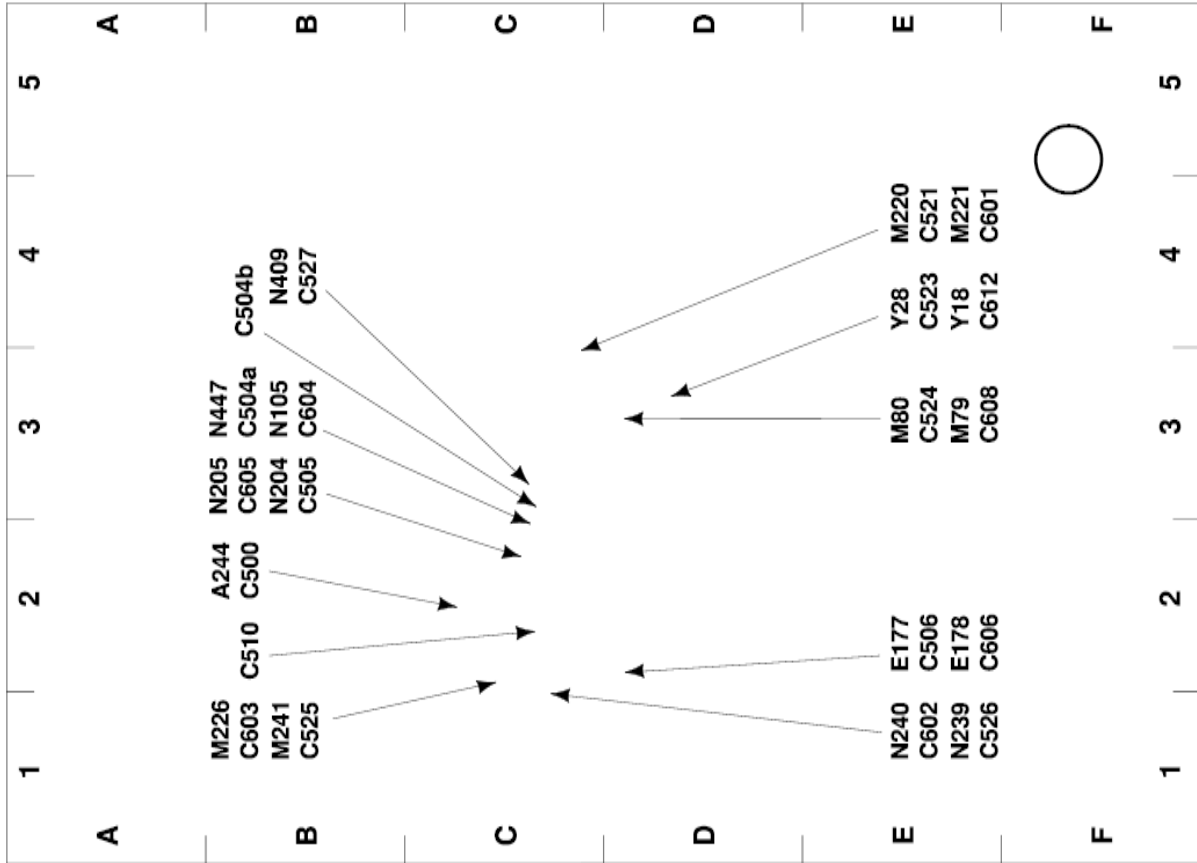

151-31 Component Location Views

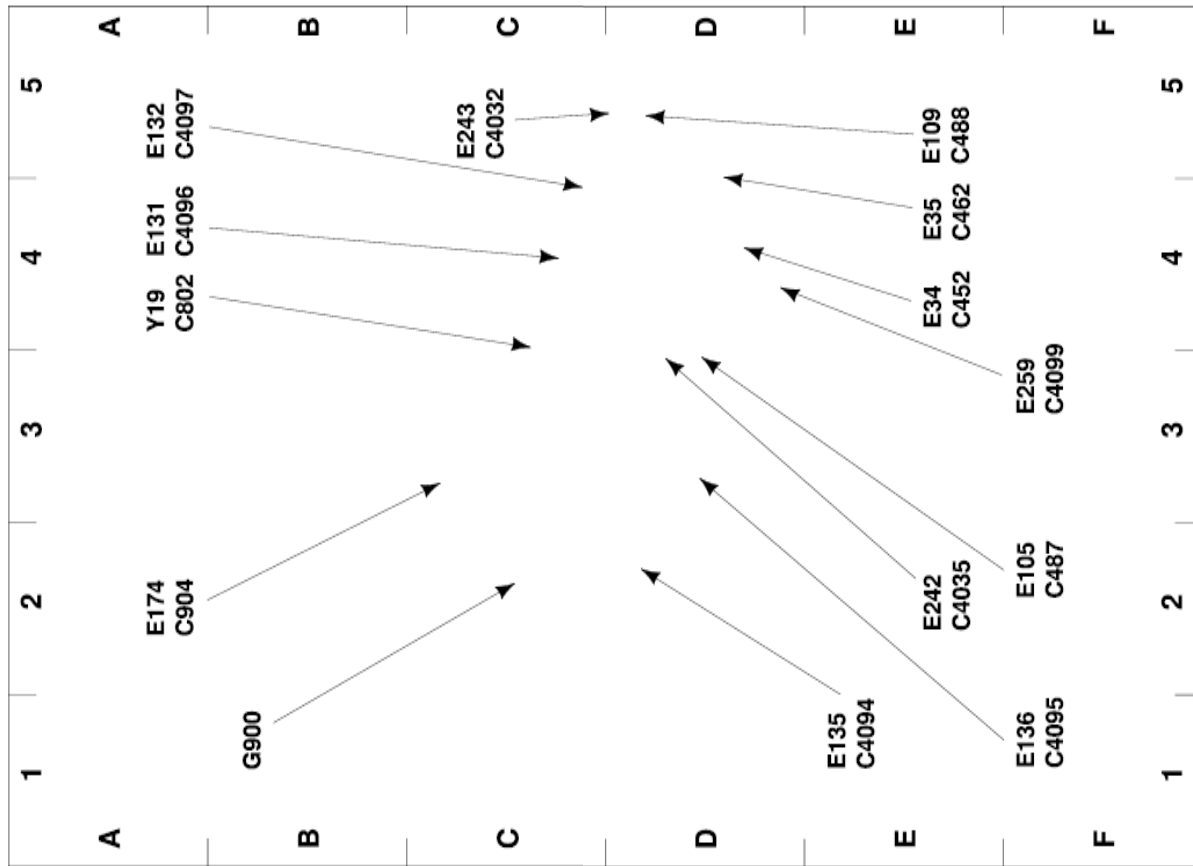


Vehicle rear end

C452	E4
C462	E4
C487	F2
C488	E5
C802	A4
C904	A2
C4032	C5
C4035	E2
C4094	E1
C4095	F1
C4096	A4
C4097	A5
C4099	F3
E34 . . . License plate lamp, left	E4
E35 . . . License plate lamp, right	E4
E105 . . . Reversing lamp, left (13411)	F2
E109 . . . Reversing lamp, right (13411)	E5
E131 . . . Side lamp 1, RH rear	A4
E132 . . . Side lamp 2, RH rear	A5
E135 . . . Side lamp 1, LH rear	E1
E136 . . . Side lamp 2, LH rear	F1
E174 . . . High mounted stoplamp (13A613)	A2
E242 . . . Park/stop/turn lamp, left rear	E2
E243 . . . Park/stop/turn lamp, right rear	C5
E259 . . . Trailer tow connector, 7-pin	F3
G900	B1
Y19 . . . Speaker, right rear (18808)	A4


Excursion, Super Duty Series F, . . . 250, F, . . . 350, F, . . . 450, F, . . . 550, . . . 02

Component Location Views 151-32

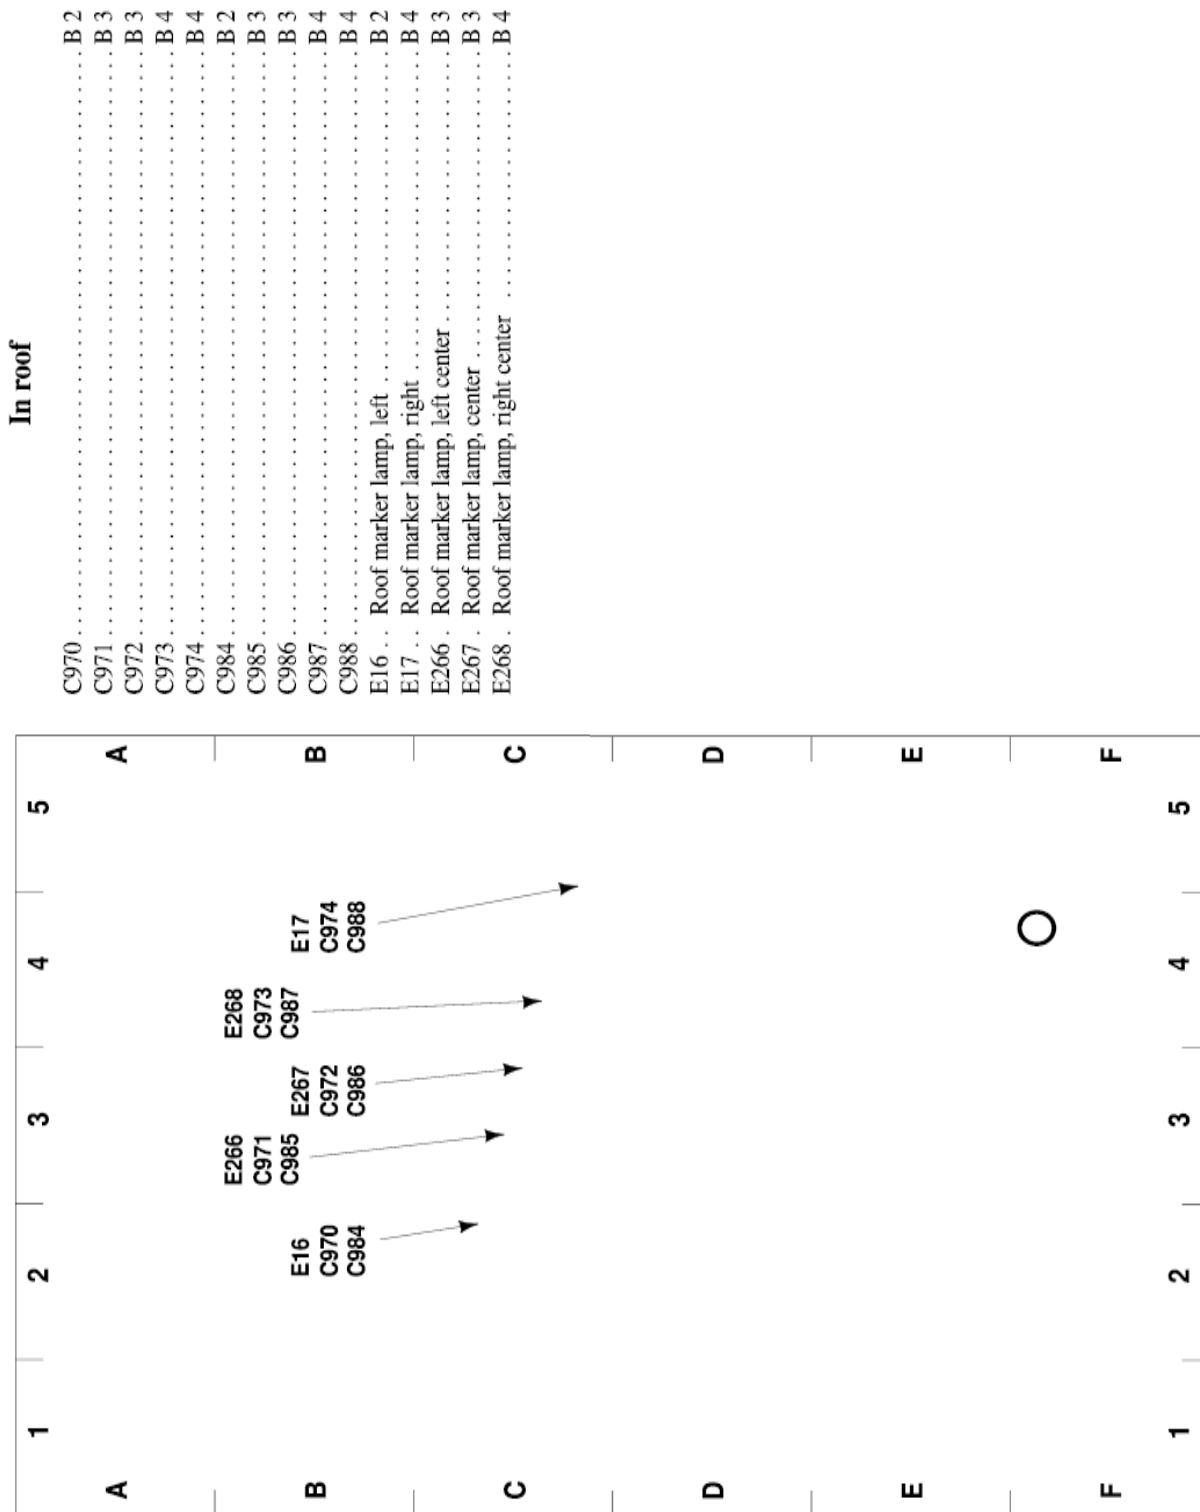

Excursion, Super Duty Series F, . . . 250, F, . . . 350, F, . . . 450, F

151-33 Component Location Views

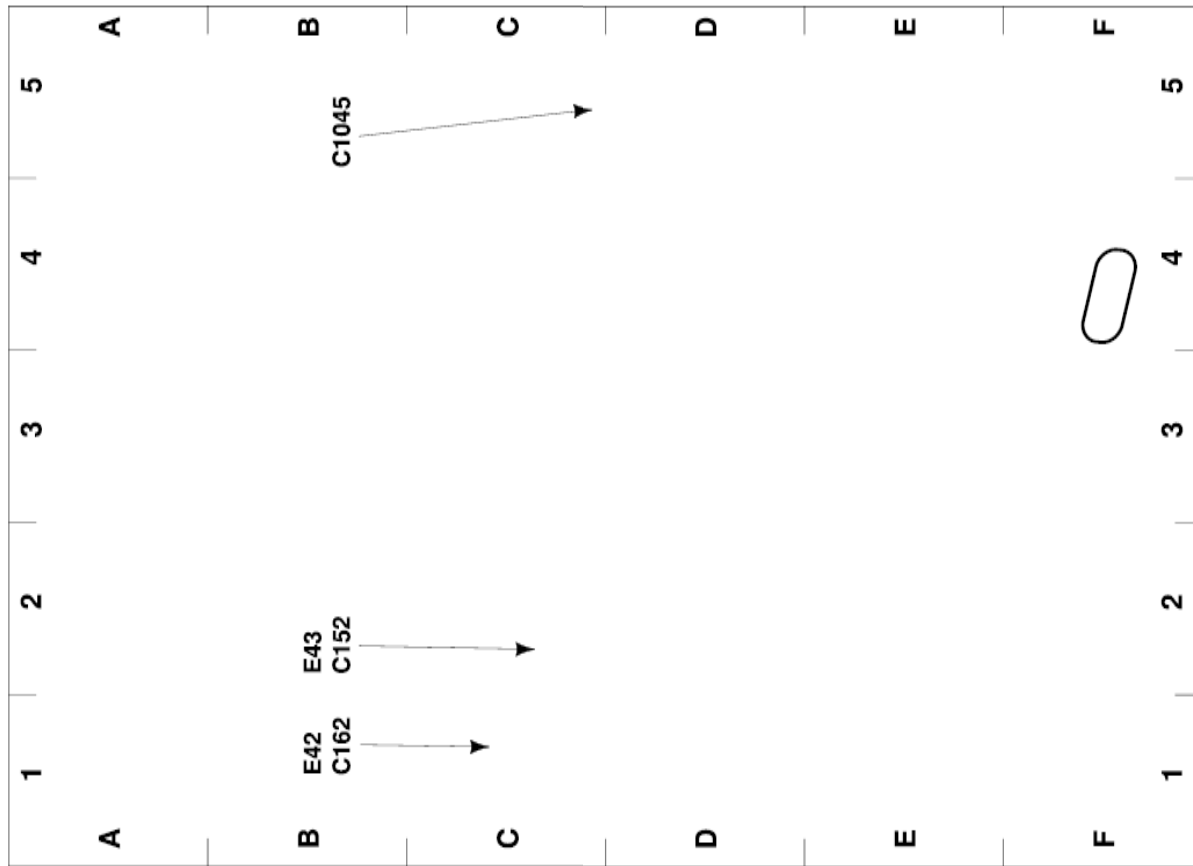


front of vehicle

- C152..... B 2
- C162..... B 1
- C1045..... B 5
- E42 ... Fog lamp, right front (15200)..... B 1
- E43 ... Fog lamp, left front (15200)..... B 2

Excursion, Super Duty Series F, , , 250, F, , , 350, F, , , 450, F, , , 550, , , , 02


Component Location Views 151-34

Central Junction Box (CJB) (14A068)

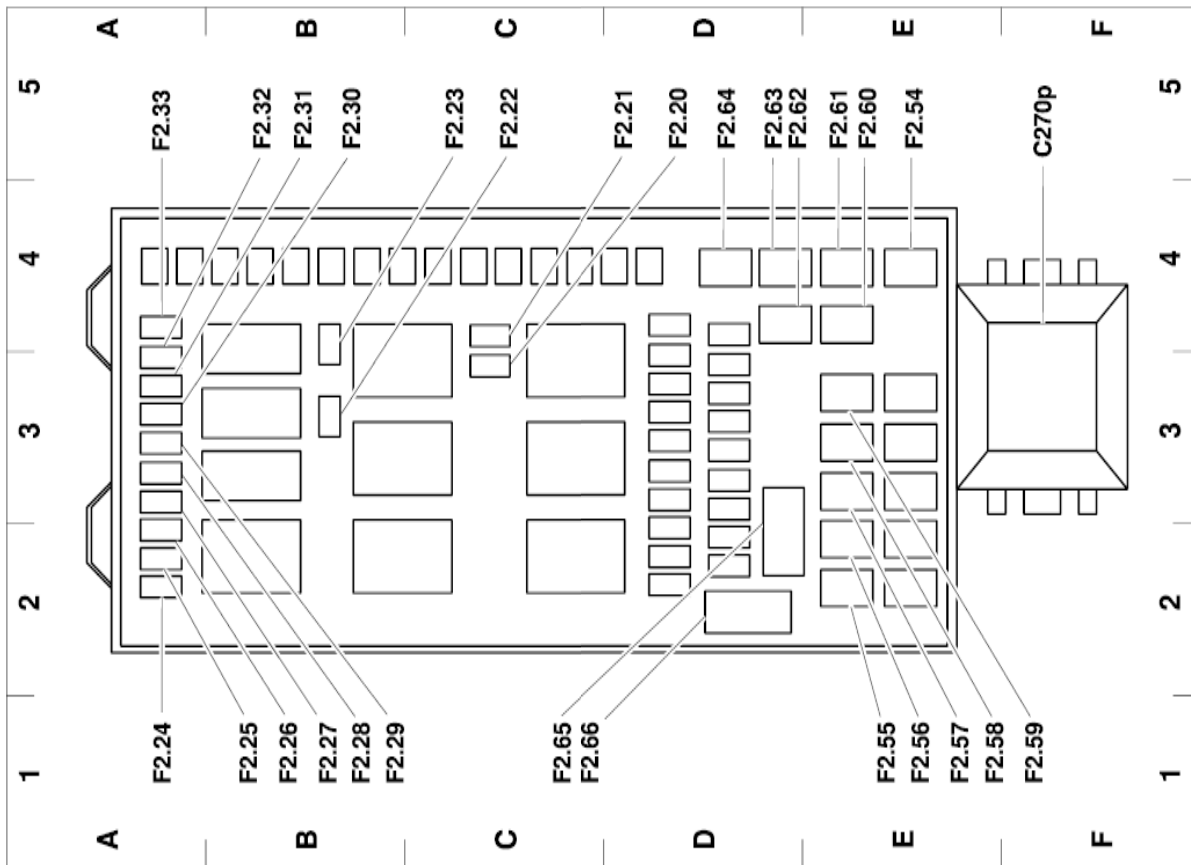

C270p.....	F5
F2.20.....	D5
F2.21.....	D5
F2.22.....	C5
F2.23.....	C5
F2.24.....	A1
F2.25.....	B1
F2.26.....	B1
F2.27.....	B1
F2.28.....	B1
F2.29.....	B1
F2.30.....	B5
F2.31.....	B5
F2.32.....	B5
F2.33.....	A5
F2.54.....	E5
F2.55.....	E1
F2.56.....	E1
F2.57.....	E1
F2.58.....	E1
F2.59.....	F1
F2.60.....	E5
F2.61.....	E5
F2.62.....	D5
F2.63.....	D5
F2.64.....	D5
F2.65.....	C1
F2.66.....	C1

151-35 Component Location Views

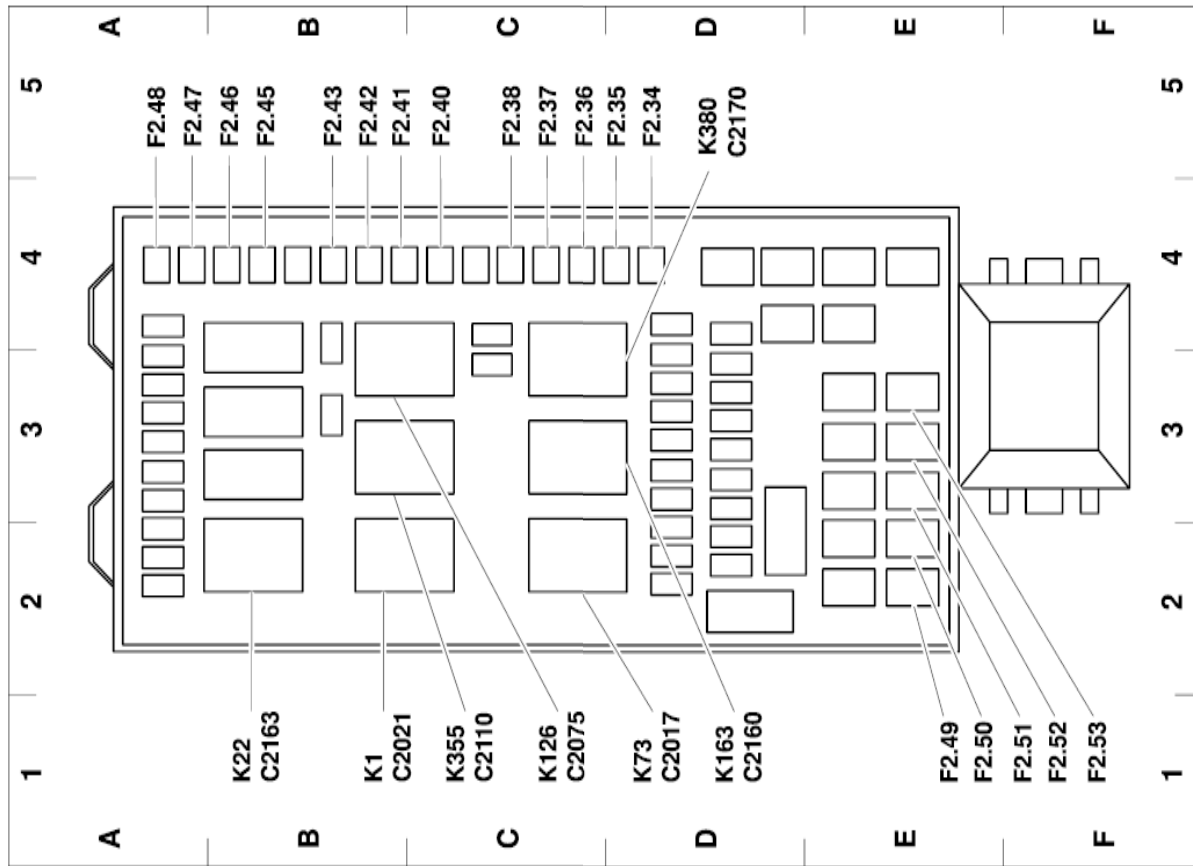


Central Junction Box (CJB) (14A068)

C2017	D1
C2021	B1
C2075	C1
C2110	C1
C2160	D1
C2163	B1
C2170	D5
F2.34	D5
F2.35	D5
F2.36	C5
F2.37	C5
F2.38	C5
F2.40	C5
F2.41	B5
F2.42	B5
F2.43	B5
F2.44	B5
F2.45	B5
F2.46	B5
F2.47	A5
F2.48	A5
F2.49	E1
F2.50	E1
F2.51	F1
F2.52	F1
F2.53	F1
K1	B1
K22	B1
K73	D1
K126	C1
K163	D1
K355	C1
K380	D5

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02

Component Location Views 151-36


Central Junction Box (CJB) (14A068)

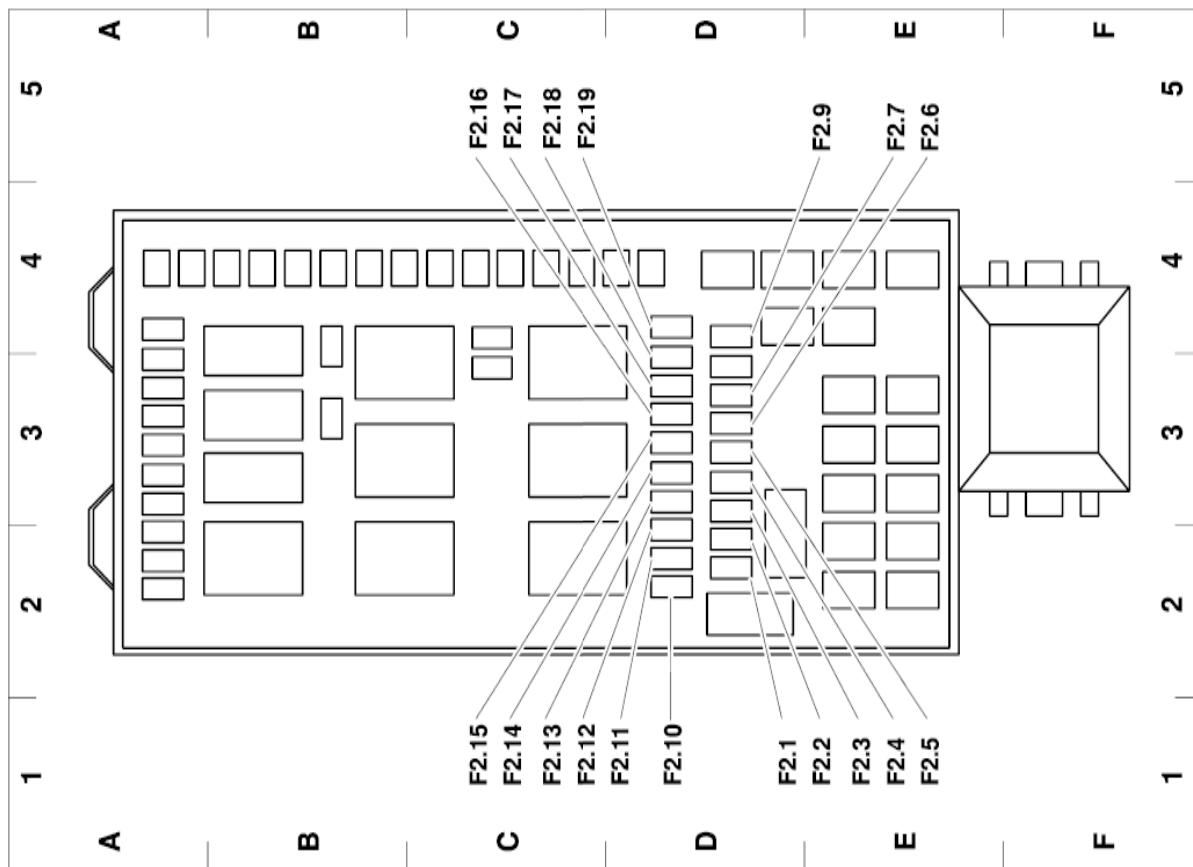

F2.1	D1
F2.2	E1
F2.3	E1
F2.4	E1
F2.5	E1
F2.6	E5
F2.7	E5
F2.9	E5
F2.10	D1
F2.11	D1
F2.12	C1
F2.13	C1
F2.14	C1
F2.15	C1
F2.16	C5
F2.17	C5
F2.18	C5
F2.19	C5

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02

151-37 Component Location Views

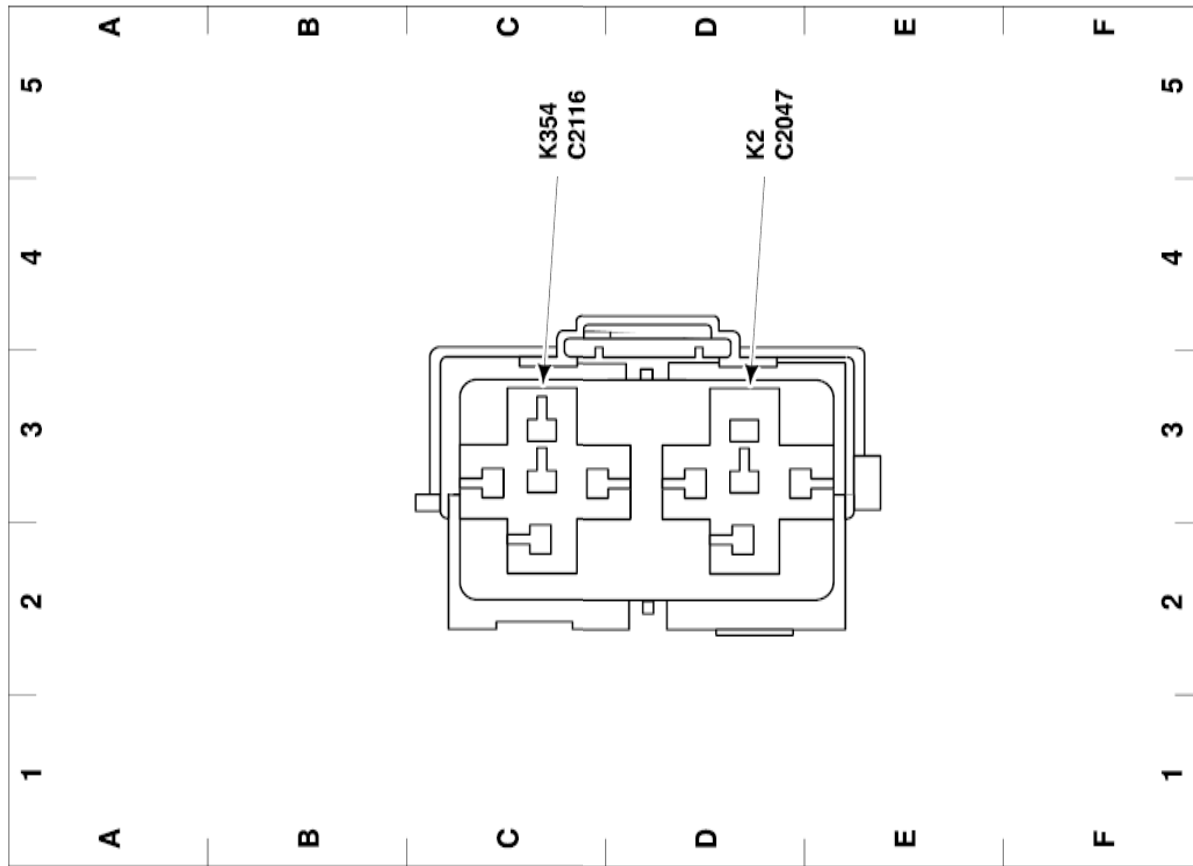

Auxiliary relay box 1


- C2047 D 5
- C2116 C 5
- K2 ... Indicator flasher relay (13350) D 5
- K354 Auxiliary A/C relay C 5

Excursion, Super Duty Series F-250, F-350, F-450, F-550 . . . 02


Component Location Views 151-38

Auxiliary relay box 2

C1170	D 1
C1171	D 5
C1172	C 5
K370	Daytime Running Lamps (DRL) relay 1	D 5
K371	Daytime Running Lamps (DRL) relay 2	C 5
K389	Park brake relay	D 1

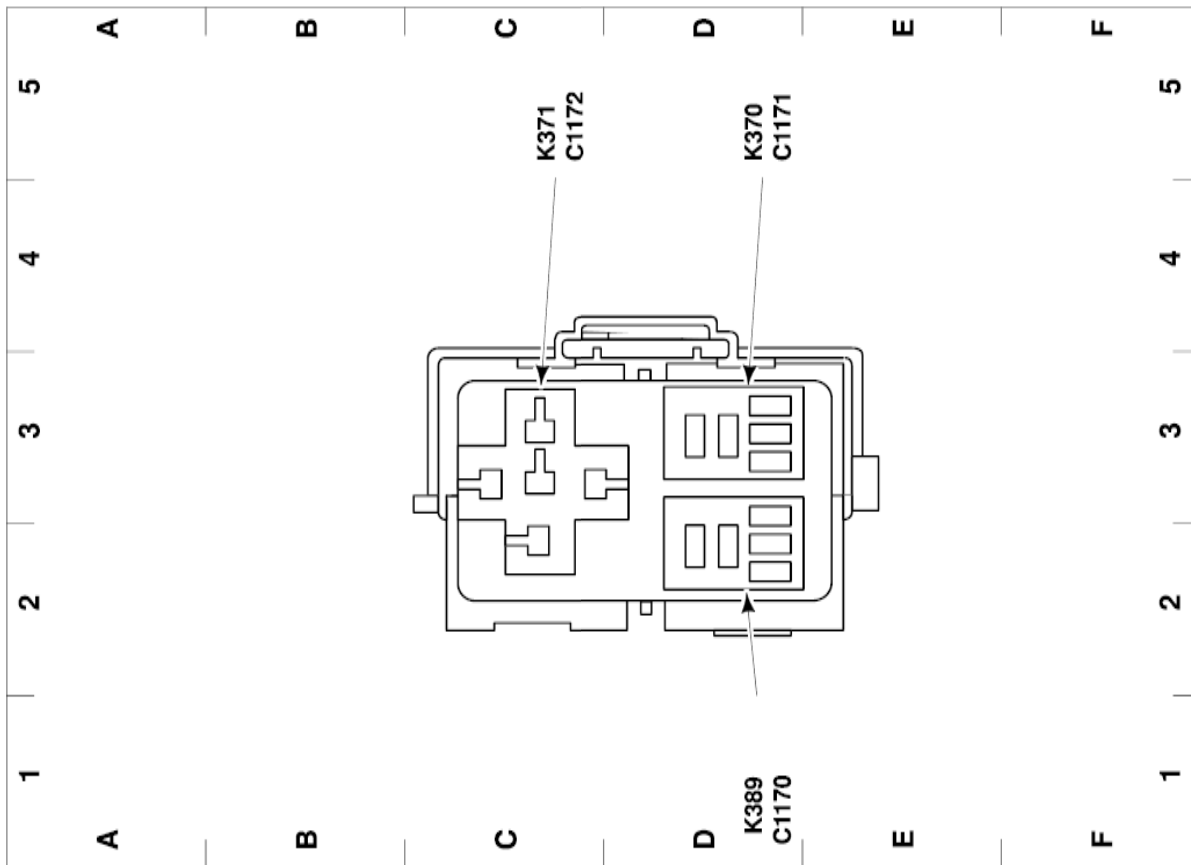

151-39 Component Location Views

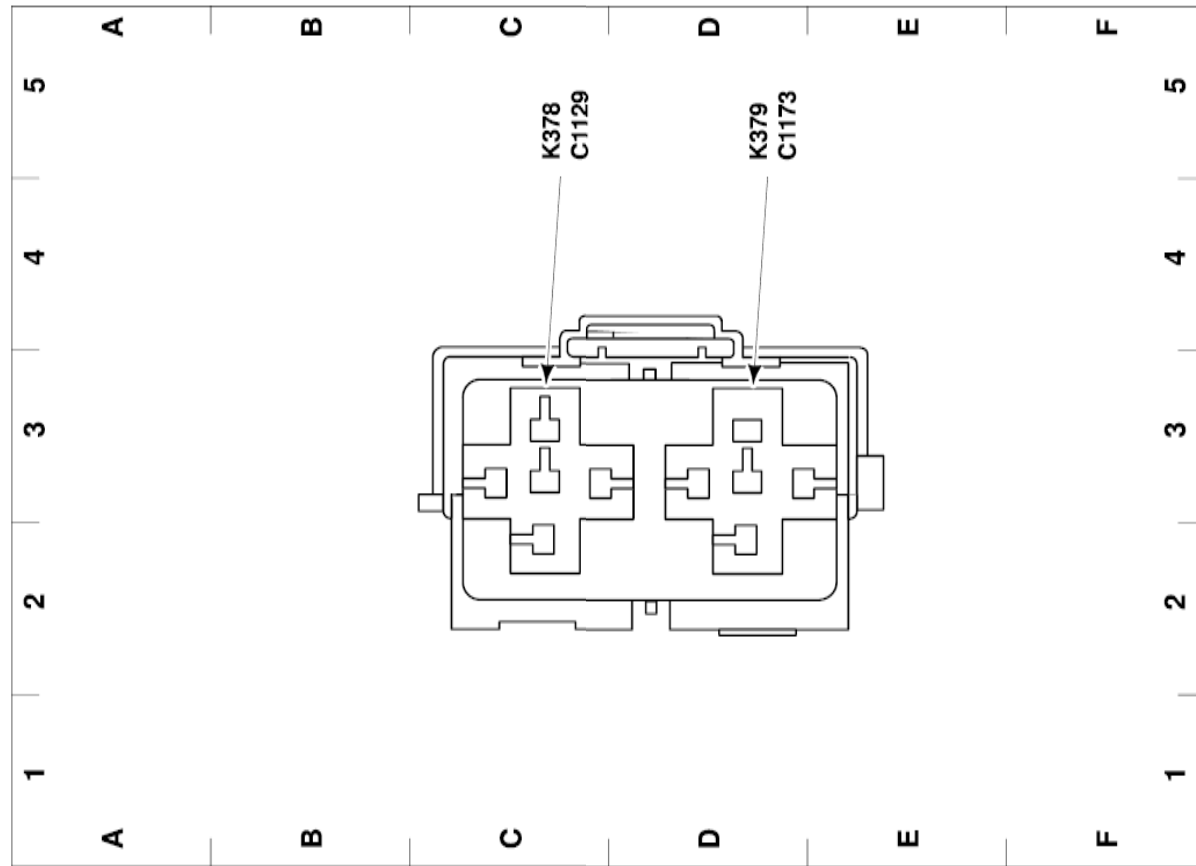

Auxiliary relay box 3


- C1129 C 5
- C1173 D 5
- K378 Transfer case low to high relay C 5
- K379 Transfer case high to low relay D 5

Excursion, Super Duty Series F-250, F-350, F-450, F-550 . . . 02

Component Location Views 151-40

Auxiliary relay box 4

- C1008 C5
- C1187 D5
- C1188 D1
- K107 A/C clutch relay C5
- K352 Trailer tow relay, right turn D5
- K353 Trailer tow relay, left turn D1

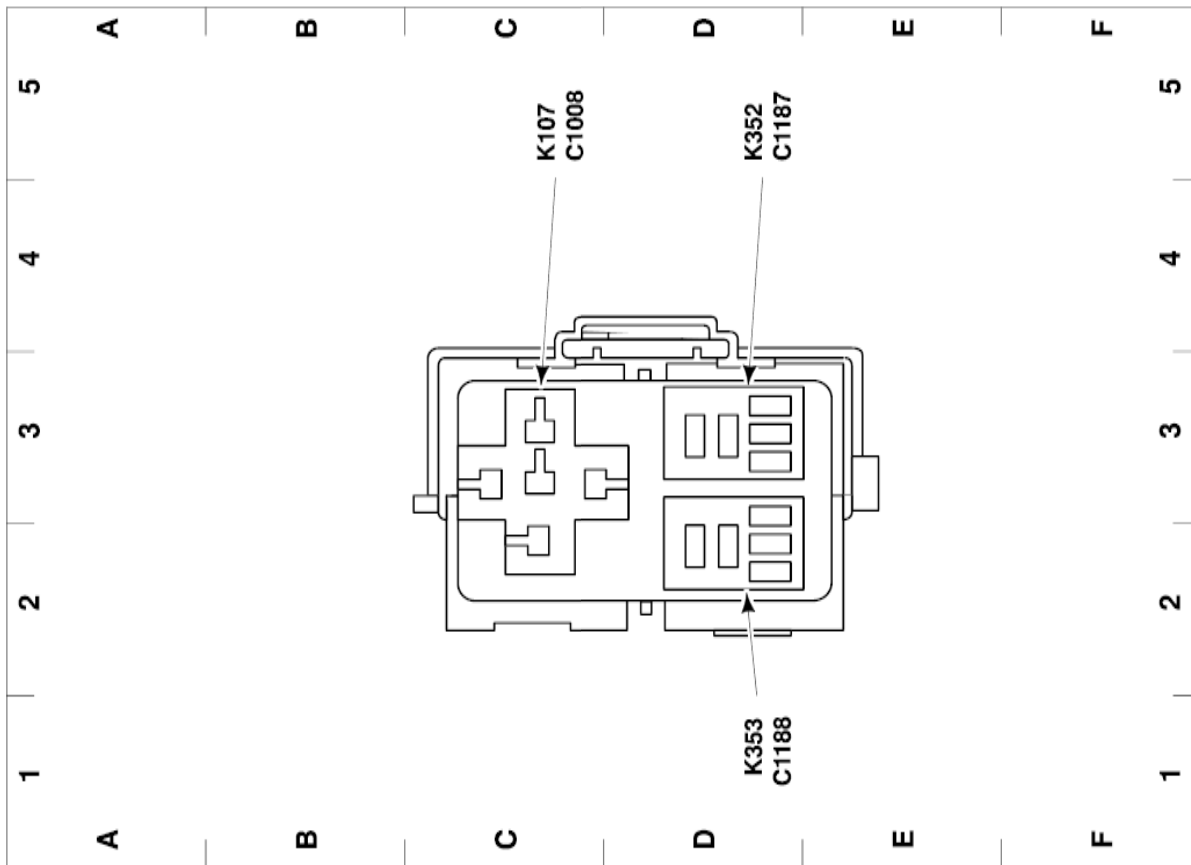

Excursion, Super Duty Series F-250, F-350, F-450, F-550, . . . 02